HAWKING® TECHNOLOGY

HAW2R1

HI-GAIN™ WIRELESS-300N SMART REPEATER PRO

website **www.hawkingtech.com**
e-mail **techsupport@hawkingtech.com**

USER'S MANUAL

© COPYRIGHT 2010 HAWKING TECHNOLOGIES,INC. ALL RIGHTS RESERVED.

COPYRIGHT

Copyright ©2010 by Hawking Technologies, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company

LIMITED WARRANTY

Hawking Technology guarantees that every HAW2R1 Hi-Gain™ Wireless-300N Smart Repeater Pro is free from physical defects in material and workmanship under normal use for one (1) year from the date of purchase. If the product proves defective during this one-year warranty period, call Hawking Customer Service in order to obtain a Return Authorization number. Warranty is for repair or replacement only. Hawking Technology does not issue any refunds. BE SURE TO HAVE YOUR PROOF OF PURCHASE. RETURN REQUESTS CAN NOT BE PROCESSED WITHOUT PROOF OF PURCHASE. When returning a product, mark the Return Authorization number clearly on the outside of the package and include your original proof of purchase.

IN NO EVENT SHALL HAWKING TECHNOLOGY'S LIABILTY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE OR ITS DOCUMENTATION. Hawking Technology makes no warranty or representation, expressed, implied or statutory, with respect to its products or the contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose. Hawking Technology reserves the right to revise or updates its products, software, or documentation without obligation to notify any individual or entity. Please direct all inquiries to: techsupport@hawkingtech.com

Federal Communication Commission
Interference Statement

FCC Part 15
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This equipment must be installed and operated in accordance with provided instructions and a minimum 20 cm spacing must be provided between computer mounted antenna and person's body (excluding extremities of hands, wrist and feet) during wireless modes of operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, the Netherlands, Portugal, Spain, Sweden, and the United Kingdom.
The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

Contents

Chapter I: Product Information 1
1-1 Introduction and safety information 1
1-2 Safety Information 3
1-3 System Requirements 5
1-4 Package Contents 6
Chapter II: Basic Configuration and Setup 10
2-1 Build your network (Initial hardware setup) 10
2-2 Accessing the Web Setup Menu 12
2-2-1 Windows 95/98/Me IP Address Setup: 13
2-2-2 Windows 2000 IP Address Setup: 15
2-2-3 Windows XP IP Address Setup: 17
2-2-4 Windows Vista/7 IP Address Setup: 19
2-2-5 Mac OS X IP Address Setup 21
2-2-6 Smart Repeater Pro IP address lookup 22
2-3 Quick Setup 23
2-3-1 Network Pass Through (Bridge Mode) 30
Chapter III: General Setup 31
3-1 System 31
3-1-1 Time Zone 32
3-1-2 Change Management Password 33
3-1-3 Remote Management 35
3-2 Internet Connection (Setup) 36
3-2-1 Setup procedure for Wireless Internet Connection: 37
3-2-2 Setup procedure for ‘Wired Internet Connections: 40
3-2-3 Setup procedure for ‘DNS’: 52
3-2-4 Setup procedure for ‘DDNS’: 54
3-3 Home Network (LAN: Local Area Network) Configuration 56
3-3-1 LAN IP section: 57
3-3-2 DHCP Server: 60
3-3-3 Static DHCP Leases Table: 61
3-4 Wireless Home Network (WLAN) Configuration 63
3-4-1 Basic Wireless Settings 63
3-4-2 Advanced Wireless Settings 67

3-4-3 Wireless Security 70
3-4-4 Wireless Access Control 79
3-4-5 WPS - Wi-Fi Protected Setup 82
3-4-6 Security Tips for Wireless Network 85
Chapter IV: Advanced Functions 86
4-1 Quality of Service (QoS) 86
4-1-1 Basic QoS Settings 86
4-1-2 Add a new QoS rule 89
4-2 Network Address Translation (NAT) 91
4-2-1 Basic NAT Settings (Enable or disable NAT function) 91
4-2-2 Port Forwarding 93
4-2-3 Virtual Server 96
4-2-4 Port Mapping for Special Applications 99
4-2-5 UPnP Setting 102
4-2-6 ALG Settings 104
4-3 Firewall 106
4-3-1 Access Control 108
4-3-2 URL Blocking 114
4-3-3 DoS Attack Prevention 117
4-3-4 Demilitarized Zone (DMZ) 122
4-4 System Status 125
4-4-1 System information and firmware version 125
4-4-2 Internet Connection Status 126
4-4-3 Home Network 127
4-4-4 System Log 128
4-4-5 Active DHCP client list 130
4-4-6 Statistics 131
4-5 Configuration Backup and Restore 132
4-6 Firmware Upgrade 134
4-7 System Reboot 136
4-8 Using the Support Utility 137
Chapter V: Appendix 143
5-1 Hardware Specification 143
5-2 Troubleshooting 144
5-3 Glossary 148

Chapter I: Product Information

1-1 Introduction and safety information

Thank you for purchasing the Hi-Gain™ Wireless-300N Smart Repeater Pro! This advanced Smart Repeater Pro is the best choice for your home, office, RV, boat or other range extending applications. The Hi-Gain™ Wireless-300N Smart Repeater Pro is the most intelligent and easy to configure, high performance Wi-Fi range extending solution on the market.

With two radios running concurrently to process an 802.11b/g/n wireless Internet connection as well as redistributing the signal via 802.11n within your local surroundings, the Hi-Gain™ Wireless-300N Smart Repeater Pro is the only repeater capable of recreating an independent network from any 802.11b/g/n Wi-Fi source. The HAW2R1 features a full function Wireless-300N router as well as an 802.11b/g modem port.

HAW2R1 Features:

- High-Speed Internet Access throughput via wired or wireless connection
- 1 x Dedicated Amplified Wireless-N WAN (Wide Area Network) antenna port
- 2 x Dedicated Wireless-N LAN (Wireless Local Area Network) antenna ports
- Includes a Hi-Gain 13dBi Antenna for WAN and two 3dBi Omni-Directional Antennas for WLAN.
- Allow multiple users to share a single wired or wireless Internet line
- Supports up to 253 users (access through local network)
- Share a single 802.11b/g/n Wi-Fi, Cable or xDSL internet connection
- Access private LAN servers from the internet
- Four wired LAN ports (10/100M), one WAN port (10/100M) and one Wireless (802.11b/g) WAN port
- Provides IEEE 802.11b/g/n wireless LAN capability
- Support DHCP (Server/Client) for easy IP-address setup
- Advanced network and security features like: Special Applications, QoS, DMZ, Virtual Servers, Access Control, Firewall.

- Allows you to monitor device and network status features: DHCP Client Log, System Log, Security Log and Device/Connection Status
- Easy to use Web-based GUI for network configuration and management purposes
- Remote management function allows configuration and upgrades from a remote computer (over the Internet)
- Auto MDI / MDI-X function for all wired Ethernet ports.

1-2 Safety Information

In order to maintain the safety of the users and properties, please adhere to the following safety instructions:

1. This Smart Repeater Pro is designed for indoor use only; DO NOT place this Smart Repeater Pro outdoors

2. DO NOT put this Smart Repeater Pro at or near hot or humid places, like kitchens or bathrooms. Also, do not leave this Smart Repeater Pro in the car during warm weather.

3. DO NOT pull any connected cable with force; disconnect them from the Smart Repeater Pro first.

4. If you want to place this Smart Repeater Pro in a high location or hang on the Smart Repeater Pro on a wall, make sure the Smart Repeater Pro is firmly secure. Falling from high places will damage the Smart Repeater Pro and its accessories, and the warranty will be void.

5. Accessories of this Smart Repeater Pro, like antennas and power supply, are a danger to small children under 3 years old. They may put the small parts in their nose or mouth and it may cause serious harm. KEEP THIS SMART REPEATER PRO OUT OF REACH OF CHILDREN!

6. The Smart Repeater Pro will become hot when being used for extended periods of time (***This is normal and is not a malfunction).*** DO NOT put this Smart Repeater Pro on paper, cloth, or other flammable materials.

7. There are no user-serviceable parts inside the Smart Repeater Pro. If you have found that the Smart Repeater Pro is not working properly, please contact technical support or your dealer of purchase and ask for help. DO NOT disassemble the Smart Repeater Pro, or warranty will be void.

8. If the Smart Repeater Pro falls into water when it’s powered on, DO NOT use your hand to pick it up. Switch the electrical power off before you do anything, or contact an

experienced technician for help.

9. If you smell something strange, or even see some smoke coming out from the Smart Repeater Pro or power supply, remove the power supply or switch the electrical power off immediately, and call dealer of purchase for help.

1-3 System Requirements

- A computer
- Internet web browser
- A wired or wireless networking adapter (e.g. AirPort card, built-in Ethernet adapter, etc.)
- Broadband modem (e.g. Cable or DSL) or wireless Internet connection (e.g. Hotspot, 802.11b/g network, etc.)

1-4 Package Contents

Before you start to use this Smart Repeater Pro, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:

- 1 x Hi-Gain™ Wireless-300N Smart Repeater Pro
- 1 x Quick Installation Guide
- 1 x CD with User's Manual and PC Support Utility
- 1 x A/C power adapter
- 2 x 3dBi Hi-Gain Dipole Omni-Directional Antennas
- 1 x 13dBi Hi-Gain Directional Antenna.

1-5 Product Overview

Top Panel

LED Name (Front Left to Right)	Light Status	Description
PWR	Stable ON	Smart Repeater Pro is switched on and correctly powered
	Stable OFF	Smart Repeater Pro is off
	Slow Blinking	Factory Default Reset (Reset button is held for longer than 5 seconds)
	Fast Blinking	Standard Reset (Reset button is held for less than 5 seconds)
Wireless (WAN) Internet	Stable ON	Good Wireless Connection (Signal Strength > 70%)
	Stable OFF	Cannot find wireless network to connect to / not connected
	Slow Blinking	Poor Wireless Connection (Signal Strength < 35%)

	Fast Blinking	Normal Wireless Connection (Signal Strength between 36% and 70%)
Local (LAN) Wireless	Fast Blinking	Connected with Traffic
	Stable ON	Connected without Traffic
	Stable Off	No Connection. Wireless LAN Off
Wired Internet	Fast Blinking	Connected with Traffic
	Stable On	Connected without Traffic
	Stable Off	No Connection
WIRED Local Network (1~4) WIRED 1 2 3 4	Fast Blinking	Port is Connected with Traffic
	Off	Port has no Connection

Back Panel

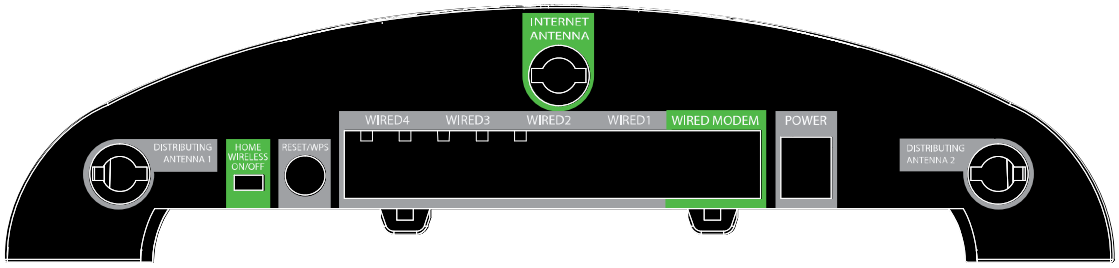

Item Name	Description
Internet Antenna	Antenna connector used for the connection to a Wireless Internet Connection (Wireless WAN).
Home Wireless On/Off	This switch is used to turn the radio for your “home” local wireless connection on or off. When not in use, it is recommended to keep the Home Wireless connection off to avoid unwanted intrusions.
Distributing Antenna	Antenna connectors used for your local home wireless network (Wireless LAN).
Reset/WPS	Reset the Smart Repeater Pro to factory default settings (clear all settings). Press this button and hold for MORE THAN 30 seconds

	to restore all settings to factory defaults. If pressed for less than 5 seconds, the Smart Repeater Pro will simply reboot.
Wired (1 – 4)	Local Area Network (LAN) ports 1 to 4. Used for wired connections to your computers and network devices.
Wired Modem	Wired Wide Area Network (WAN / Internet) port. The port for connecting your Cable/DSL modem.

Chapter II: Basic Configuration and Setup

2-1 Build your network (Initial hardware setup)

Please follow these instructions to build the network connection between the Hi-Gain™ Wireless-300N Smart Repeater Pro and your computers and other network devices:

1. Connect the included antennas to your Smart Repeater Pro.

2. Connect the power adapter to the Smart Repeater Pro

3. Connect all 'wired' users to the HAW2R1 via the Wired Local Area Network (LAN) ports in grey. For wireless users, scan for the SSID of the Smart Repeater Pro (Smart_Repeater_Pro) and connect. You must be within range of the Smart Repeater Pro before connecting.

4. Check to see the activity of the LEDs on the front panel. The PWR LED should be on. The LAN LEDs should be on if the computer / network device connected to the respective port of the Smart Repeater Pro is powered on and properly connected. If PWR LED is not on, or any LED you expected is not on, please recheck the power connection, or jump to ***"5-2 Troubleshooting"*** for possible reasons and solutions.

Traditional Router Setup (Optional):

If you do not plan on using the Wireless Internet Connection and instead plan on using a traditional wired modem connection (such as Cable or DSL) then you will need to attach the Ethernet cable from your modem to the blue ‘Modem’ port on the Smart Repeater Pro. This will allow the Smart Repeater Pro to function as a traditional wireless router.

2-2 Accessing the Web Setup Menu

After your Smart Repeater Pro has been connected and powered the next step is to access the Web Menu for initial configuration. To do this, your computer must be able to get an IP address automatically (use dynamic IP address setting).

Try to access: http://setup.hawkingtech.com
(or try typing: http://192.168.5.200 into your Internet browser's address bar)

If the Web Menu appears you can skip the next steps and go to step 2-3. You will need to enter the following default login and password to access the "Quick Setup" menu:

Login: admin
Password: 1234

If it's set to use a static IP address or you are unsure, please follow the following instructions to configure your computer to use a static IP address:

Note: Please be sure to set your network IP addresses back to default after you have finished configuration.

If the operating system of your computer is….

Windows 95/98/Me - please go to section 2-2-1
Windows 2000 - please go to section 2-2-2
Windows XP - please go to section 2-2-3
Windows Vista/7 - please go to section 2-2-4
Mac OS X - please go to section 2-2-5

2-2-1 Windows 95/98/Me IP Address Setup:

1. Click “Start” button (it should be located at lower-left corner of your computer), then click control panel. Double-click ***Network*** icon, and ***Network*** window will appear. Select “TCP/IP”, then click “Properties”.

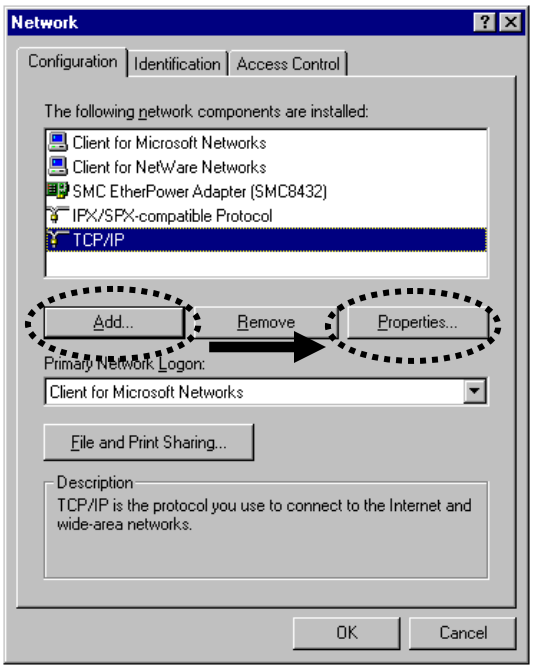

2. Select “Obtain an IP address from a DHCP server” and then click “OK”.

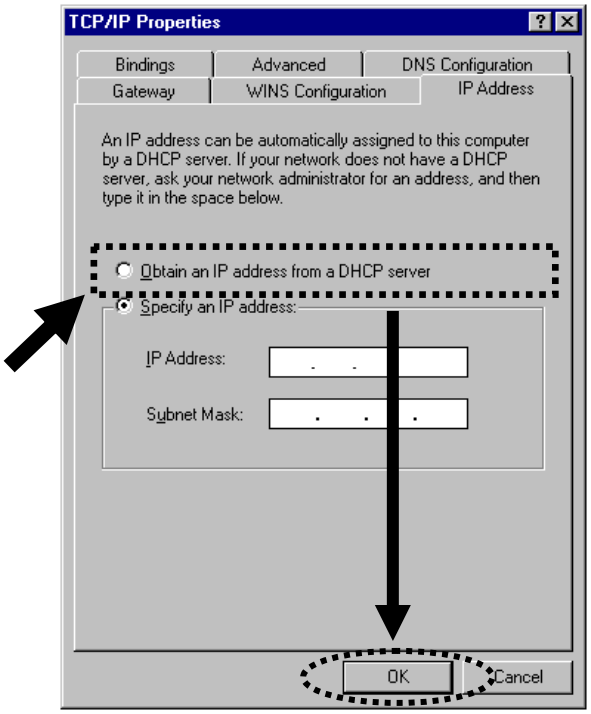
TCP/IP Properties
Bindings
Advanced
DNS Configuration
Gateway
WINS Configuration
IP Address
An IP address can be automatically assigned to this computer by a DHCP server. If your network does not have a DHCP server, ask your network administrator for an address, and then type it in the space below.
Obtain an IP address from a DHCP server
Specify an IP address:
IP Address:
Subnet Mask:
OK
Cancel

2-2-2 Windows 2000 IP Address Setup:

1. Click “Start” button (it should be located at lower-left corner of your computer), then click control panel. Double-click ***Network and Dial-up Connections*** icon; click ***Local Area Connection,*** and ***Local Area Connection Properties*** window will appear. Select “Internet Protocol (TCP/IP)” and then click “Properties”

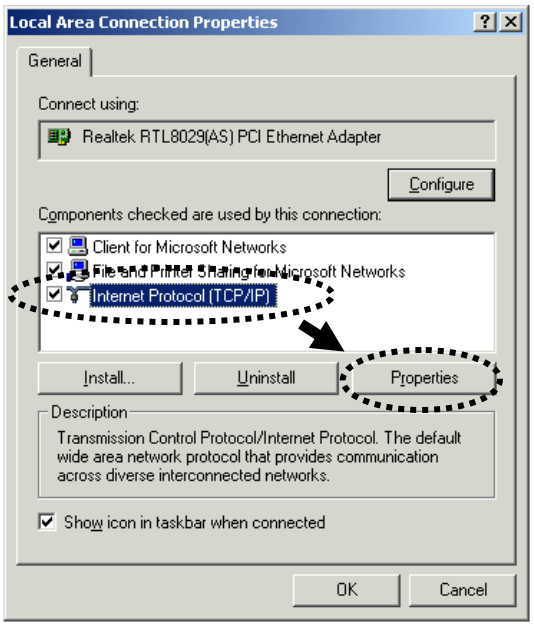

2. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically”, then click “OK”.

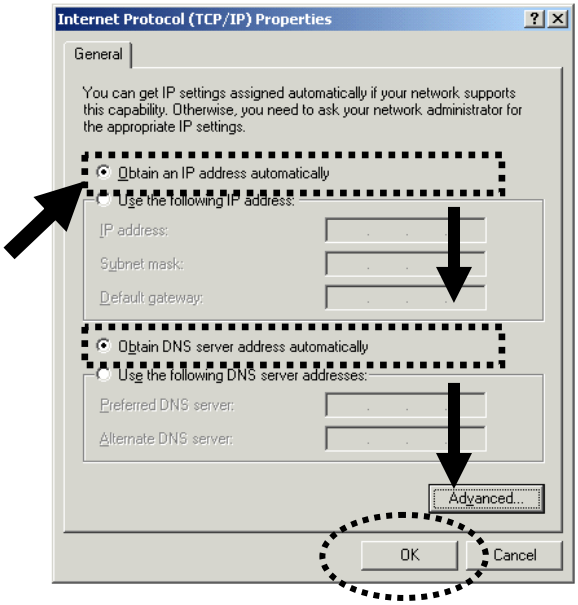
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

2-2-3 Windows XP IP Address Setup:

1. Click “Start” button (it should be located at lower-left corner of your computer), then click control panel. Double-click ***Network and Internet Connections*** icon, click ***Network Connections,*** and then double-click ***Local Area Connection, Local Area Connection Status*** window will appear, and then click ‘Properties’

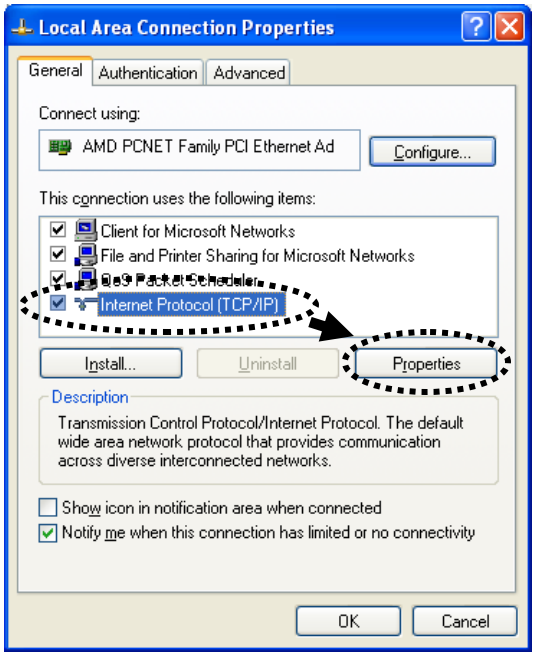

2. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically”, then click “OK”.

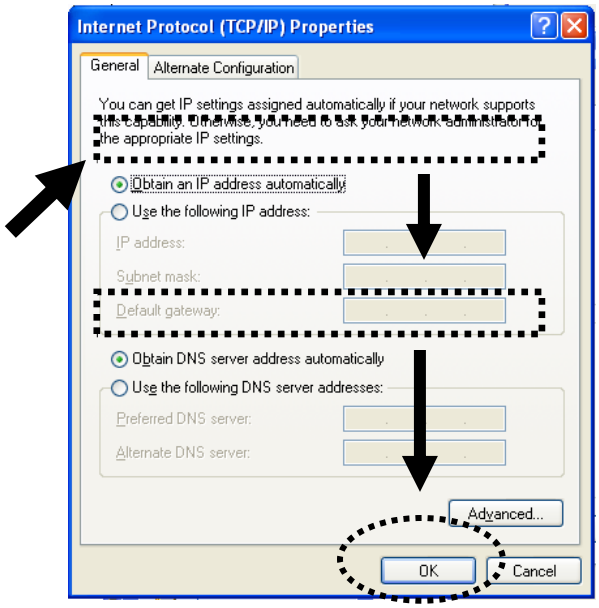
Internet Protocol (TCP/IP) Properties
General
Alternate Configuration
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

2-2-4 Windows Vista/7 IP Address Setup:

1. Click “Start” button (it should be located at lower-left corner of your computer), then click control panel. Under ***Network and Internet,*** Click ***View Network Status and Tasks***, then click ***Manage Network Connections/Change Adapter Settings*** on the right hand column. Right-click ***Local Area Network, then select “Properties”. Local Area Connection Properties*** window will appear, select “Internet Protocol Version 4 (TCP / IPv4)”, and then click “Properties”

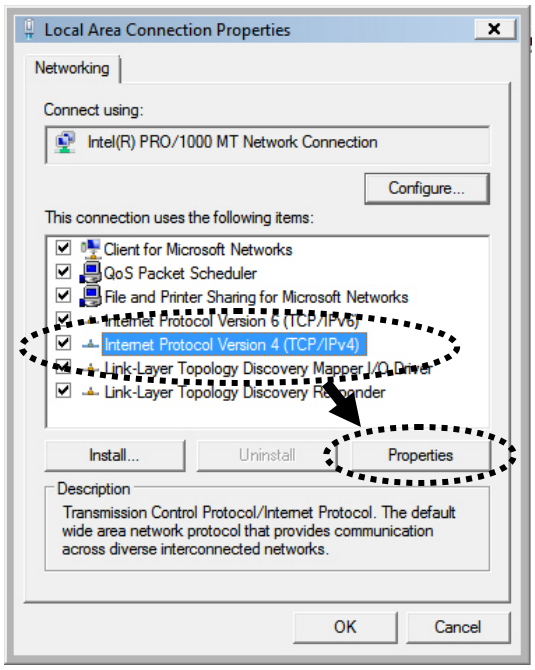

2. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically”, then click “OK”.

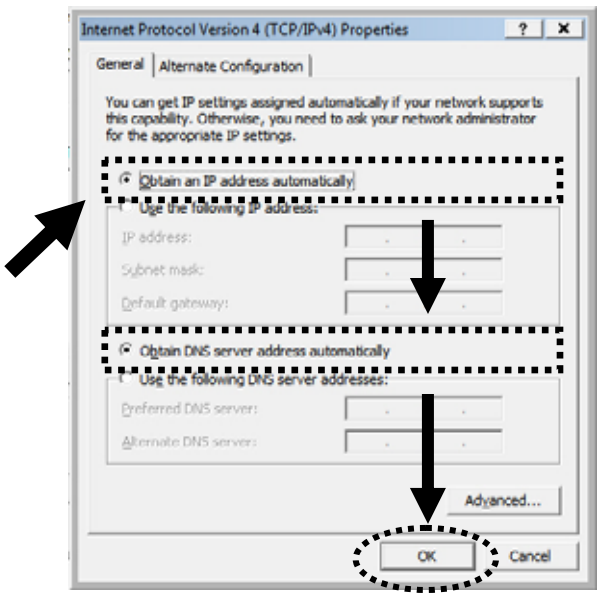
Internet Protocol Version 4 (TCP/IPv4) Properties
General
Alternate Configuration
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

2-2-5 Mac OS X IP Address Setup

1) Go to your system preferences, go to network. Select your network connection. Make sure “Configure” is set to “Using DHCP”.

2-2-6 Smart Repeater Pro IP address lookup

After your computer obtained an IP address from Smart Repeater Pro, please start your web browser, and input the IP address of Smart Repeater Pro in address bar. The following message should be shown (or you may type in http://setup.hawkingtech.com to access the quick setup menu):

Please input user name and password in the field respectively, default user name is “admin”, and default password is “1234”, then press ‘OK’ button, and you can see the web management interface of this Smart Repeater Pro.

Connect to 192.168.1.1
The server 192.168.1.1 at Default: admin/1234 requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
User name:
Password:
Remember my password
OK
Cancel

2-3 Quick Setup

This Smart Repeater Pro provides a “Quick Setup” procedure, which will help you to complete all required settings you need to access the Internet in a very short time. Please follow the following instructions to complete the “Quick Setup”:

a. The first step of the “Quick Setup” is to locate a position to place your Smart Repeater Pro. The position should be a location where the Repeater can pick up the signal that you wish to repeat (i.e. the neighbor’s wireless connection, local hot spot, etc.).

HAWKING TECHNOLOGY

Hi-Gain™ Wireless-300N Smart Repeater Pro

Quick Setup | General Setup | Status | Tools

Welcome to the Setup Wizard

To set up your HI-Gain Wireless-300N Smart Repeater Pro you will need to first scan for an available wireless network (Hot Spot) to connect and redistribute within your current "Home Network" location.

Click Scan to begin a search for available networks. If you are using a HI-Gain Antenna, then make sure your antenna is pointed towards the direction where you wish to scan for wireless network.

1. Scan for a wireless network to extend your WIFI network: Scan

Network		Encryption	Authentication	Strength
1	Hawking Tech	WEP	OPEN	89%
2	SSA	WEP	OPEN	82%
2	SMB-Wireless	TKIP	WPAPSK	40%
3	WLAN	TKIP	WPAPSK	55%
4	Hawking Tech	WEP	OPEN	89%

Pass Through Router Settings (Network Bridging Mode): ☐ Enable
Read Warning before enabling.

2. Select and click Connect: Connect | Cancel

© 2010 Hawking Technologies, Inc.
All rights reserved.

b. Click “Scan” to locate all the networks within your area. Once you have found the network you wish to repeat, highlight it and click “Connect”. Each wireless network will be listed with their respective signal strengths and whether or not they are using security. For secure networks, you will need to have the correct key to access the network. If you do not you will not be able to repeat this network. It is recommended that the signal strength of the network you are trying to repeat is above 50% to ensure a solid connection to the Internet. Without a stable Internet connection, the rebroadcasted signal will be unstable as well. If you wish to setup a Pass Through mode (Network Bridging Mode), see section 2-3-1

c. The “Quick Setup” wizard will now attempt to connect to your wireless Internet connection.

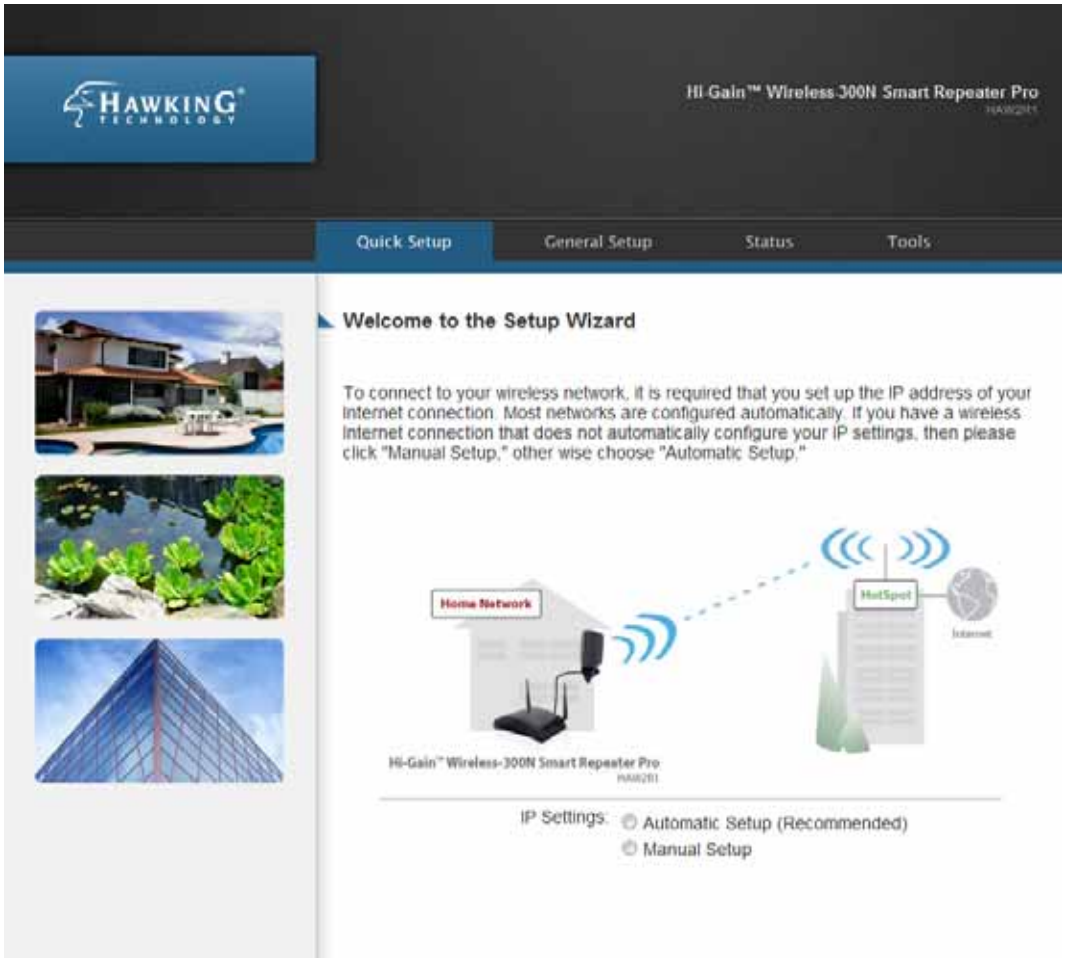
HAWKING TECHNOLOGY
Hi-Gain™ Wireless-300N Smart Repeater Pro
Quick Setup
General Setup
Status
Tools
Welcome to the Setup Wizard
To connect to your wireless network, it is required that you set up the IP address of your Internet connection. Most networks are configured automatically. If you have a wireless Internet connection that does not automatically configure your IP settings, then please click "Manual Setup," other wise choose "Automatic Setup."
Home Network
HotSpot
Internet
Hi-Gain™ Wireless-300N Smart Repeater Pro
IP Settings:
Automatic Setup (Recommended)
Manual Setup

Select “Automatic Setup” to have the wizard automatically configure the IP

settings of your Internet Connection. Most networks use Dynamic IP settings to automatically assign IP Addresses to incoming connections. Click “Apply”.

If the network you are connecting does not use Dynamic IP settings or you wish to manually configure your IP, you can choose “Manual Setup”.

d. If a wireless security key is necessary, the wizard will prompt you to enter the key. This key pertains to WEP and WPA wireless security keys and passphrases. The Smart Repeater Pro will automatically decipher which type of security you are using. Type in the key or phrase and press “Continue”.

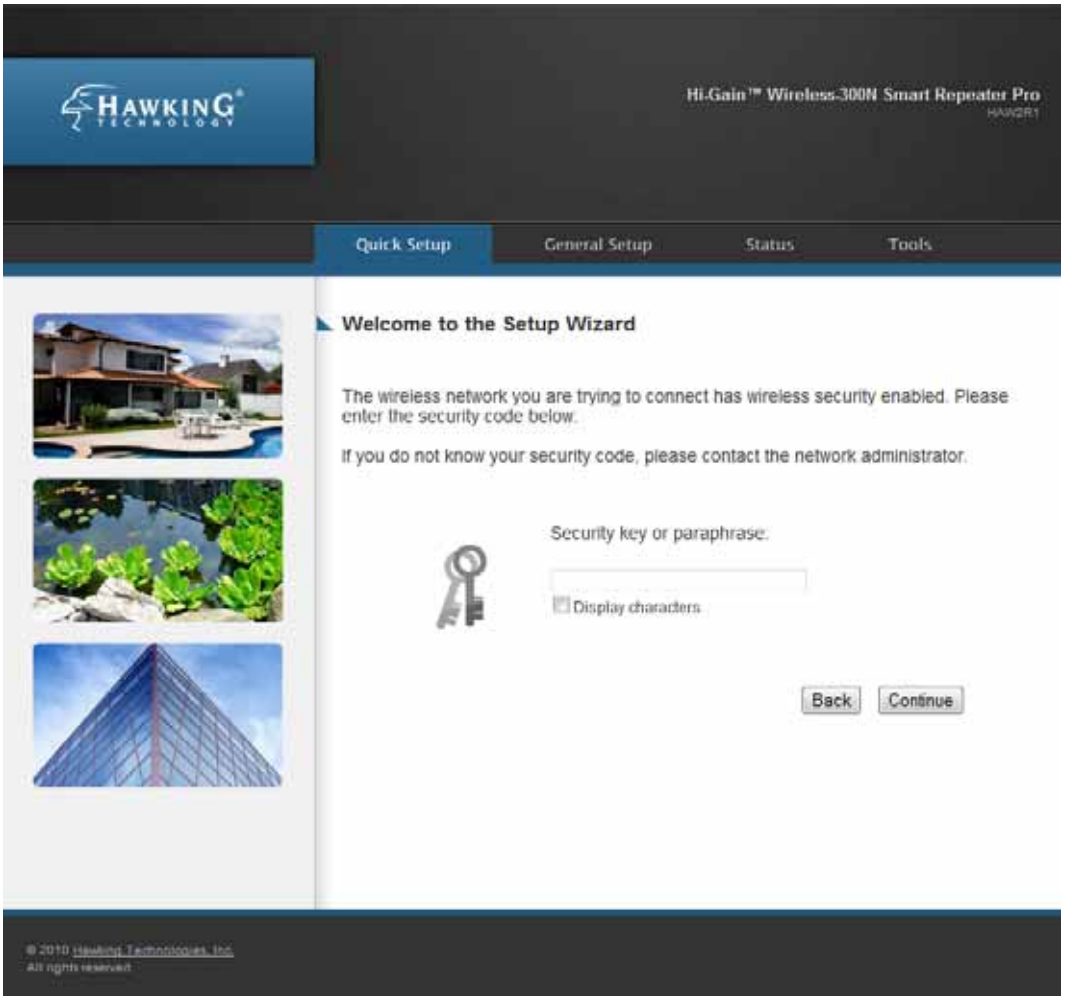
HAWKING TECHNOLOGY
Hi-Gain™ Wireless-300N Smart Repeater Pro
Quick Setup
General Setup
Status
Tools
Welcome to the Setup Wizard
The wireless network you are trying to connect has wireless security enabled. Please enter the security code below.
If you do not know your security code, please contact the network administrator.
Security key or paraphrase:
Display characters
Back
Continue

e. When the connection has been established the wizard will prompt you if you wish to adjust the name of the wireless network used within your home (a.k.a. the SSID of the network that users will be connecting to from within your home – the redistributed wireless network). In addition, if you would like to add wireless security to your home wireless network you may do so here as well (By default, it uses WPA security. If you wish to change the security type, see section 3-4-3 after you have finished the configuration.) Click “Continue”.

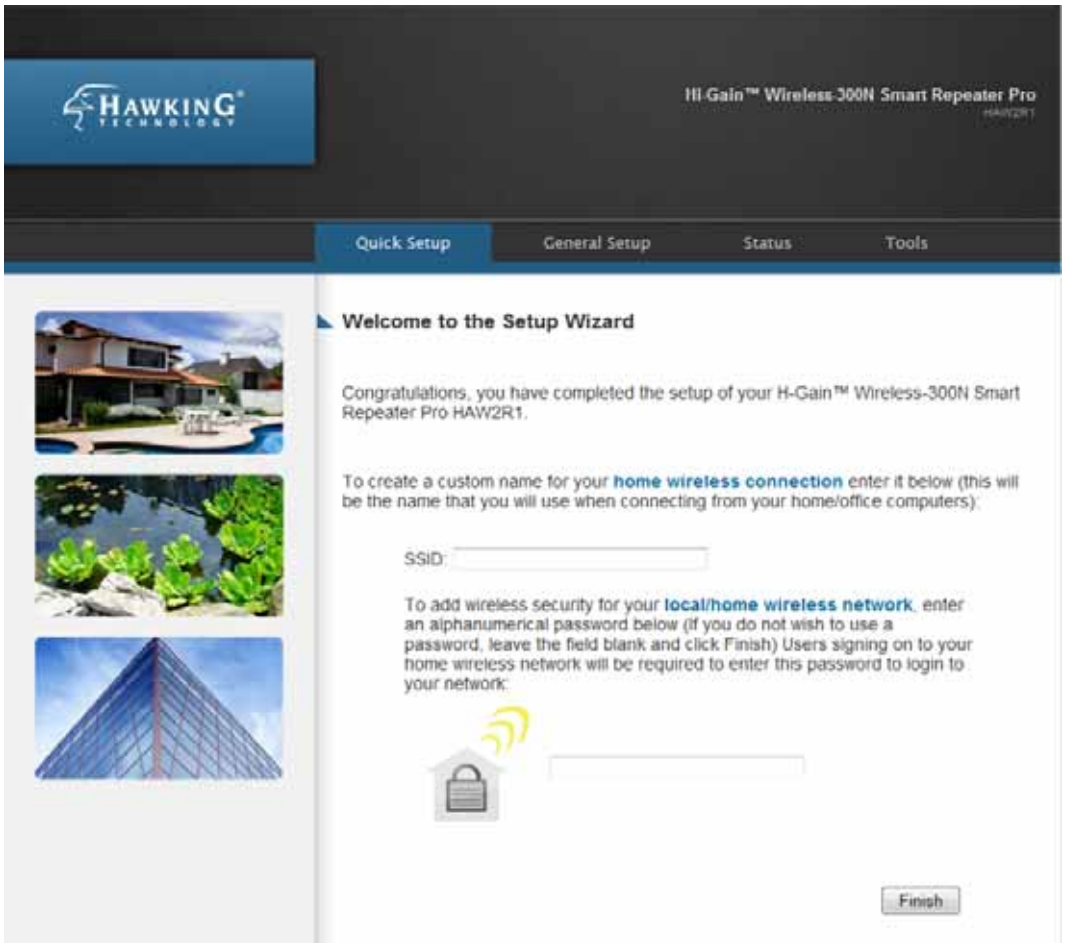
HAWKING TECHNOLOGY
Hi-Gain™ Wireless-300N Smart Repeater Pro
Quick Setup
General Setup
Status
Tools
Welcome to the Setup Wizard
Congratulations, you have completed the setup of your H-Gain™ Wireless-300N Smart Repeater Pro HAW2R1.
To create a custom name for your home wireless connection enter it below (this will be the name that you will use when connecting from your home/office computers):
SSID:
To add wireless security for your local/home wireless network, enter an alphanumerical password below (if you do not wish to use a password, leave the field blank and click Finish) Users signing on to your home wireless network will be required to enter this password to login to your network:
Finish

f. Click “Finish” to complete your setup. Then press “Apply” to initiate the restart of your Smart Repeater Pro.

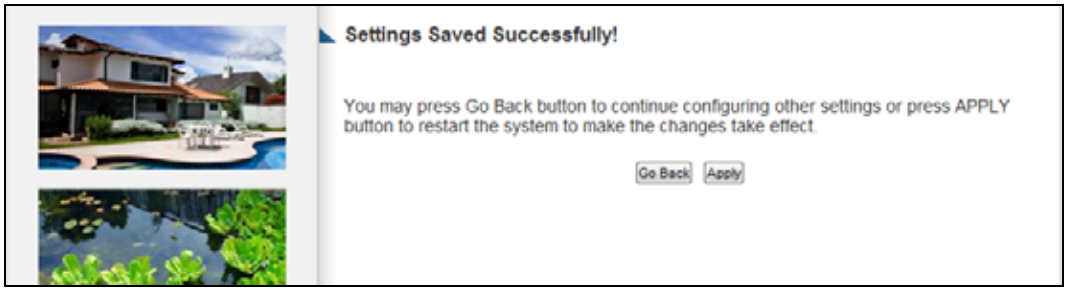
Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Allow the Smart Repeater Pro to reboot.

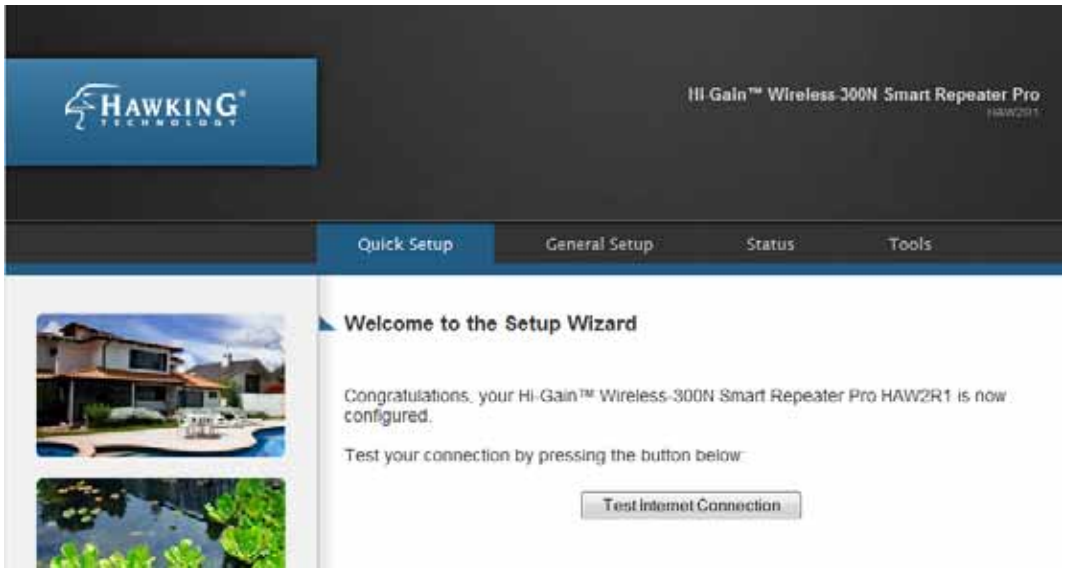
HAWKING TECHNOLOGY
Hi-Gain™ Wireless-300N Smart Repeater Pro
Quick Setup
General Setup
Status
Tools
Welcome to the Setup Wizard
Congratulations, your Hi-Gain™ Wireless-300N Smart Repeater Pro HAW2R1 is now configured.
Test your connection by pressing the button below:
Test Internet Connection

After the system restarts, you can test your Internet connection to check that your setup was successful.

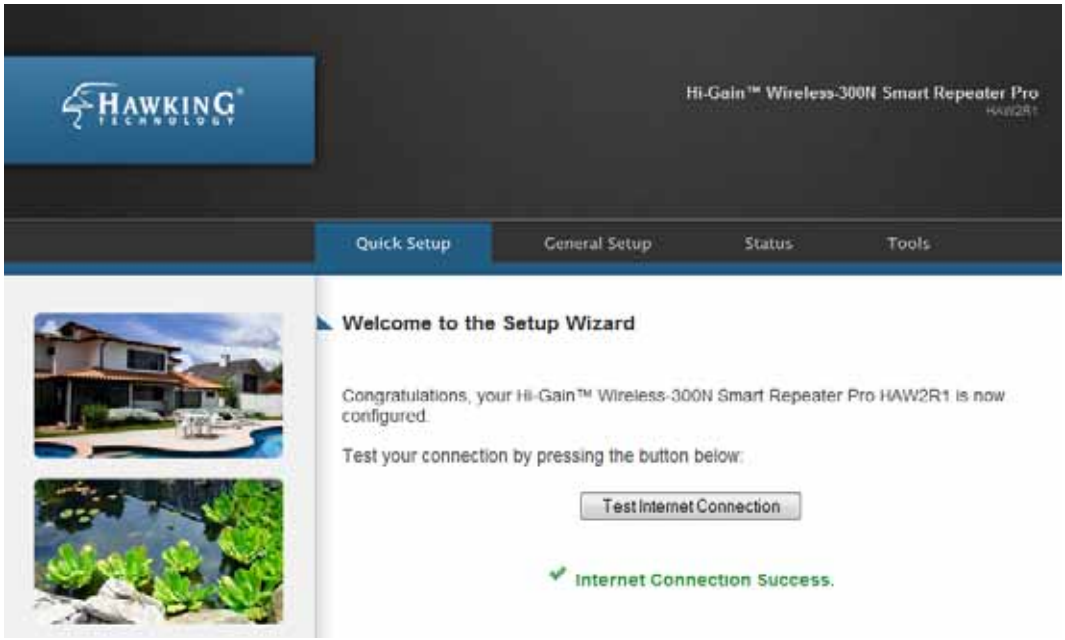

Once your Internet connection has tested successfully your setup is officially complete.

2-3-1 Network Pass Through (Bridge Mode)

The Smart Repeater Pro by default creates a separate wireless network. When you search for wireless networks, you will see your original as well as the Smart Repeater. Because of these default settings, wireless devices connected to the Smart Repeater Pro will be on a separate IP range. This may cause issues if you wish to share files, printers or just be on one network.

If you wish to have the system on one network, you will have to enable “Pass Through Router Settings” (Network Bridging Mode).

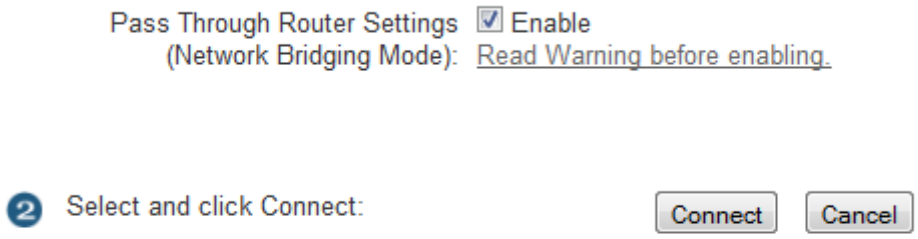

After you check enable, just continue on with the rest of the Quick Setup seteps. At the end of the setup, after you reboot the system, please be sure to also restart your computer. After your computer comes back up, select the Smart Repeater Pro as your network. You should now be able to see your network files and computers all on one system.

Note, by enabling Pass Through Mode, you will **not** be able to access the web menu unless your IP Settings match. To set your IP, see section 3-3-1.

Chapter III: General Setup

In this chapter, you'll learn how to change the time zone, password, and remote management settings. Please start your web browser and log onto Smart Repeater Pro web management interface (See Section 2-2), then click on the "General Setup" tab.

3-1 System

The system page allows you to configure the time zone, password settings and remote management

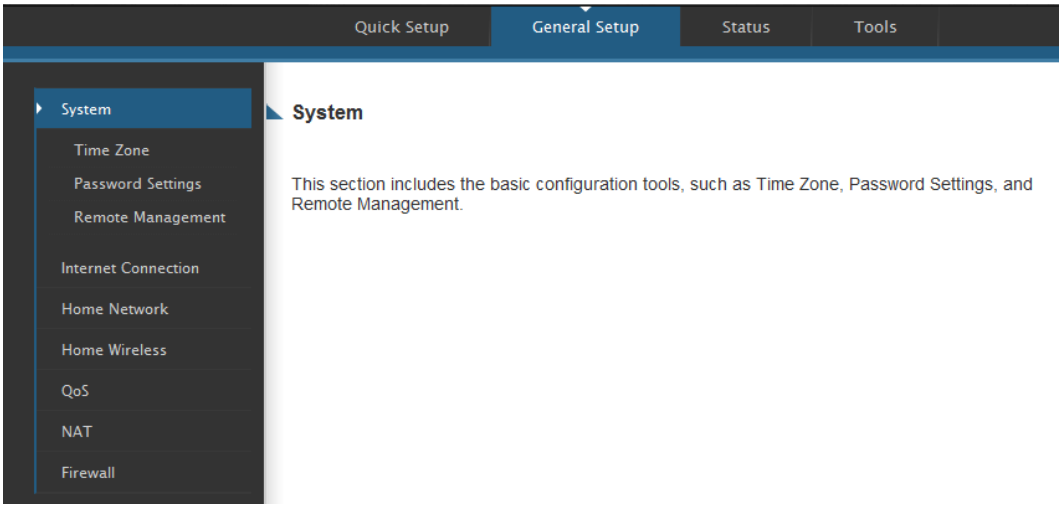

3-1-1 Time Zone

Please follow the following instructions to set time zone and time auto-synchronization parameters:

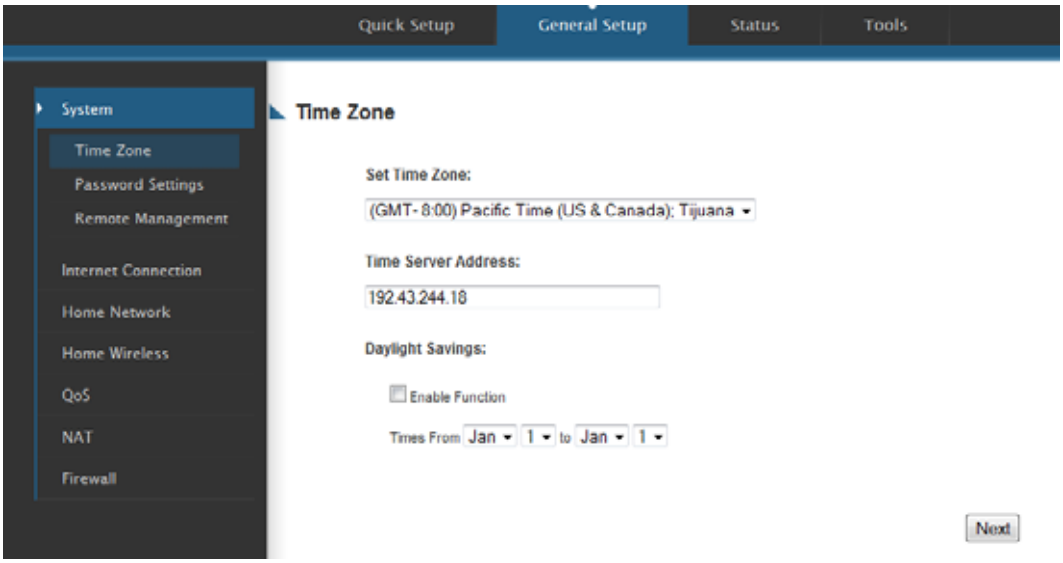

Please click “System” tab in menu on the left of web management interface, then click on “Time Zone”. Please select the correct time zone from the drop-down list, and input the IP address or host name of time server. If you want to enable daylight savings time settings, please check “Enable Function” box, and set the duration of daylight setting. When you finish, click “Apply”. You’ll see the following message displayed on web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-1-2 Change Management Password

The default password of this Smart Repeater Pro is “1234”, and it’s displayed on the login prompt when accessed from web browser. There’s a security risk if you don’t change the default password, since everyone can see it. This is very important when you have wireless function enabled.

To change password, please follow the instructions:

Please click “System” tab on the left hand column of the web management interface, then click “Password Settings”, and the following message will be displayed on your web browser:

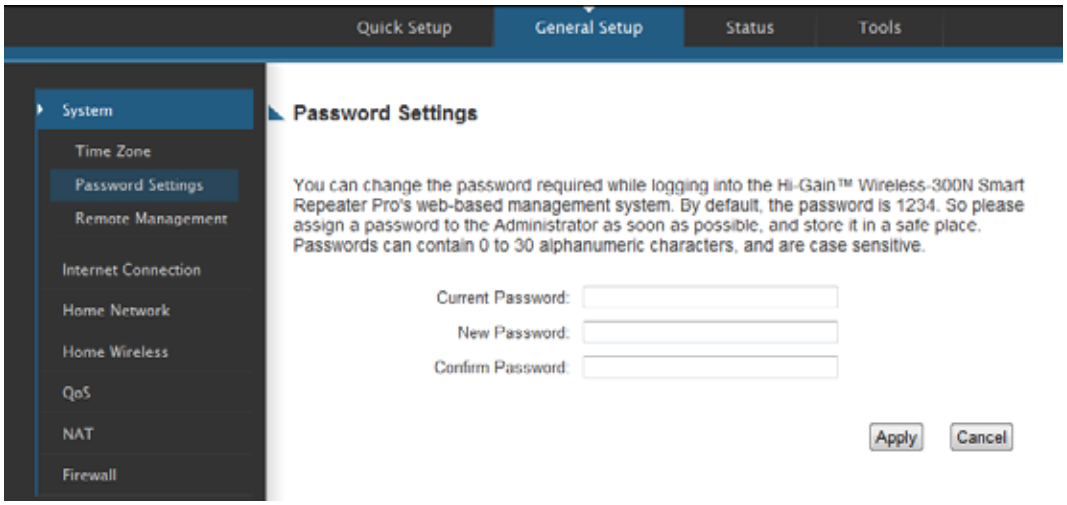
Quick Setup
General Setup
Status
Tools
System
Time Zone
Password Settings
Remote Management
Internet Connection
Home Network
Home Wireless
QoS
NAT
Firewall
Password Settings
You can change the password required while logging into the Hi-Gain™ Wireless-300N Smart Repeater Pro's web-based management system. By default, the password is 1234. So please assign a password to the Administrator as soon as possible, and store it in a safe place. Passwords can contain 0 to 30 alphanumeric characters, and are case sensitive.
Current Password:
New Password:
Confirm Password:
Apply
Cancel

Current Password:	*Please input current password here.*
New Password:	*Please input new password here.*
Confirmed Password:	*Please input new password here again.*

When you finish, click ‘Apply’. If you want to keep original password unchanged, click ‘Cancel’.

If the password you typed in “New Password” and “Confirmed Password” fields are not the same, you’ll see the following message:

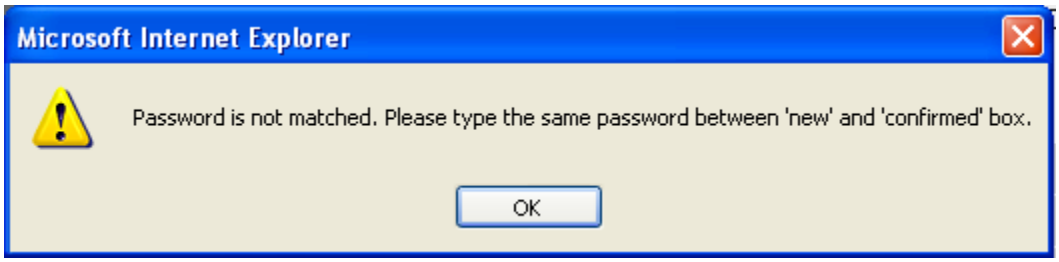

Please retype the new password again when you see above message.

If you see the following message:

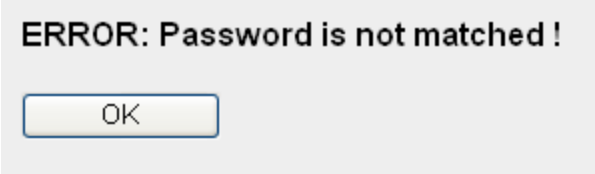

This error displays when the “Current Password” field is entered incorrectly. Click “OK” to go back to the previous menu and input your current password again.

After entering the correct login information you will be prompted to login again with your new login settings.

3-1-3 Remote Management

This Smart Repeater Pro by default does not allow management access from the Internet in order to prevent possible security risks. However, you can still manage this Smart Repeater Pro from a specific IP address by enabling the “Remote Management” Function.

To do so, please follow these instructions:

Click the “General Setup” tab at top of web management interface, then click “Remote Management” from the menu on the left and the following message will be displayed on your web browser:

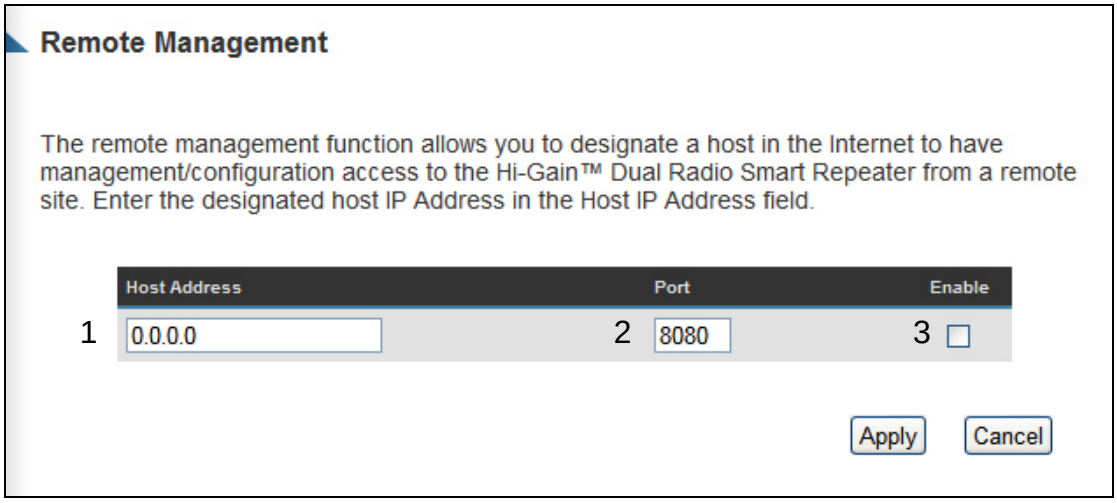
Remote Management
The remote management function allows you to designate a host in the Internet to have management/configuration access to the Hi-Gain™ Dual Radio Smart Repeater from a remote site. Enter the designated host IP Address in the Host IP Address field.
Host Address
Port
Enable
1
0.0.0.0
2
8080
3
Apply
Cancel

Host Address (1): *Input the IP address of the remote host you wish to initiate a management access.*

Port (2): *Define the port number that the Smart Repeater Pro will receive incoming requests from. If you are providing a web service (default port number is 80), you should try to use other port number. You can use the default port setting ‘8080’, or something like ‘32245’ or ‘1429’. (Any integer between 1 and 65534)*

Enabled (3): *Select the field to start the configuration.*

When you finish with all of your settings, click “Apply” and you’ll see the following message displayed on web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro so the settings will take effect after it reboots.

NOTE: When you want to manage this Smart Repeater Pro from another computer over the internet, you have to input the IP address and port number of this Smart Repeater Pro. If your Internet service provider assigns you with a static IP address, it will not be a problem; but if the IP address your service provider assigns to you will vary every time you establish an Internet connection, this will be a problem.

Please either ask your service provider to give you a static IP address, or use dynamic IP to host name mapping services like DDNS. Please refer to chapter 3-2-4 ‘DDNS client’ for details.

NOTE2: Default port number the web browser will use is ‘80’. If the ‘Port’ setting in this page is not ‘80’, you have to assign the port number in the address bar of web browser manually. For example, if the IP address of this Smart Repeater Pro is 1.2.3.4, and the port number you set is 8888, you have to input following address in the address bar of web browser:

http://1.2.3.4:8888

3-2 Internet Connection (Setup)

The Wireless Internet connection setup can be configured through the “Quick Setup” menu described in Chapter 2-3. However for a more detailed setup of either a wired setup (via DSL or Cable Modem) or a wireless Internet connection setup click on the “General Setup Tab” and then navigate to the “Internet Connection” tab on the left hand column.

3-2-1 Setup procedure for Wireless Internet Connection:

To manually configure a Wireless Internet Connection select “Configure” next to Wireless Internet Connection.

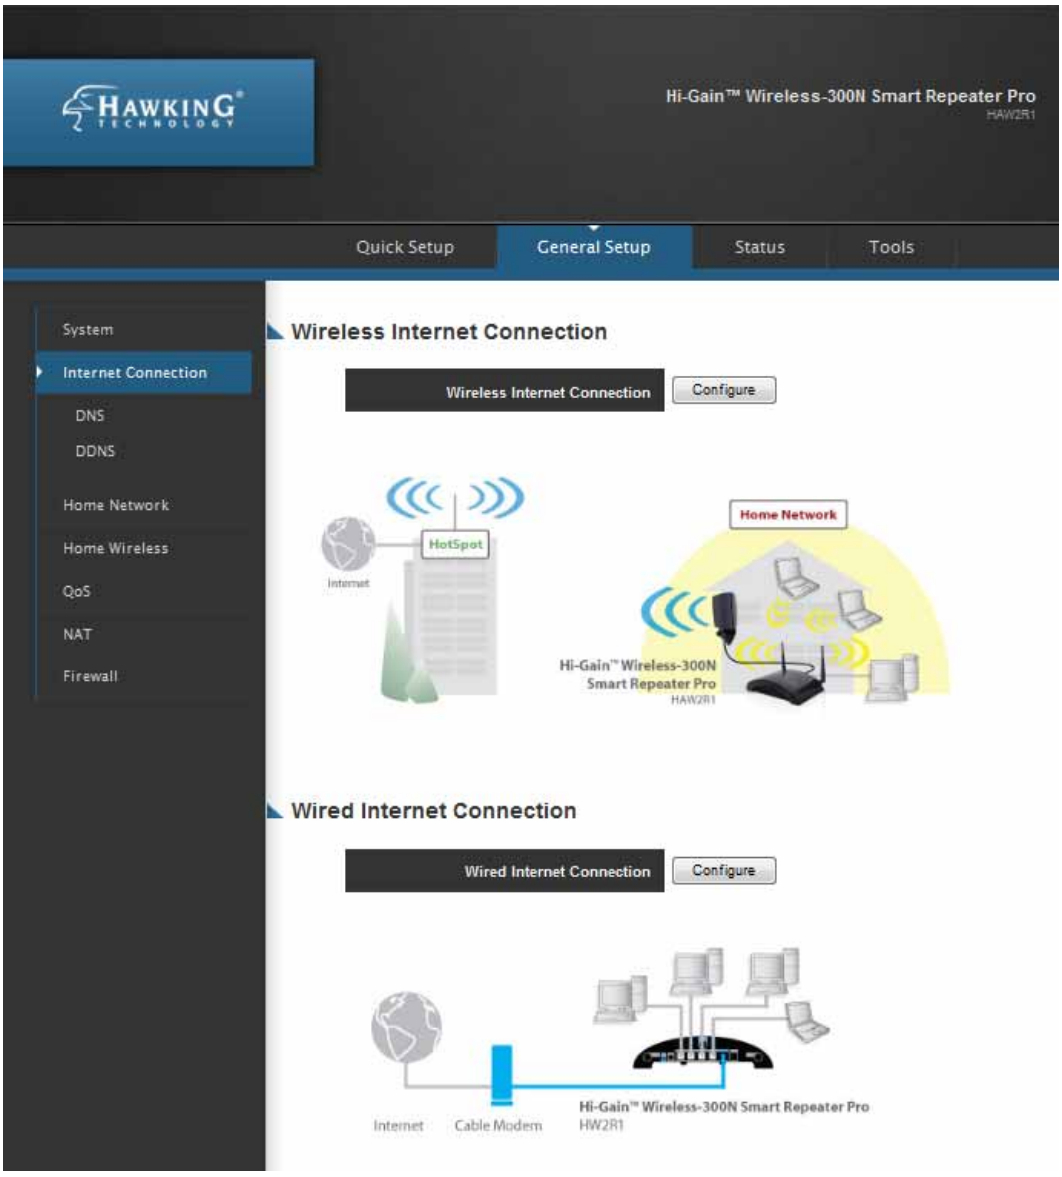

The menu below should appear.

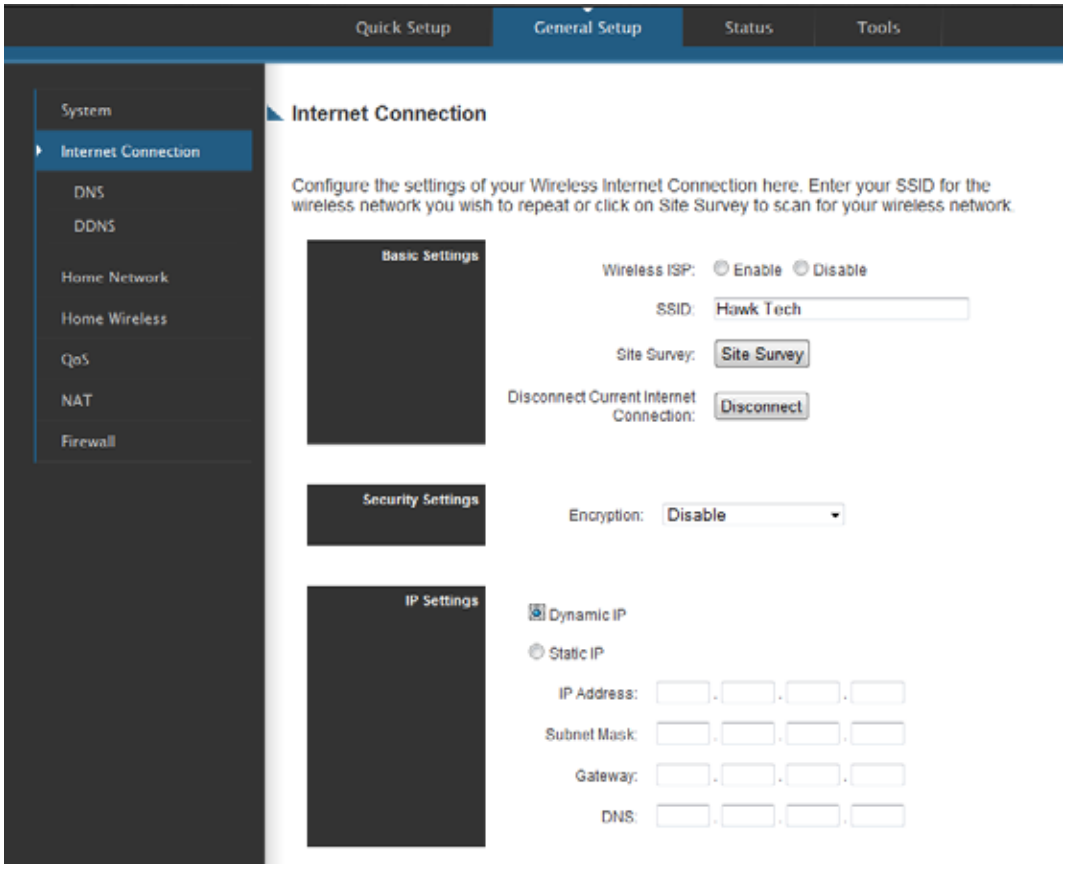

You may manually enter the SSID of the wireless network you plan on connecting to or you can click “Site Survey” to have the web interface scan for local networks in your vicinity. (See Site Survey Menu below)

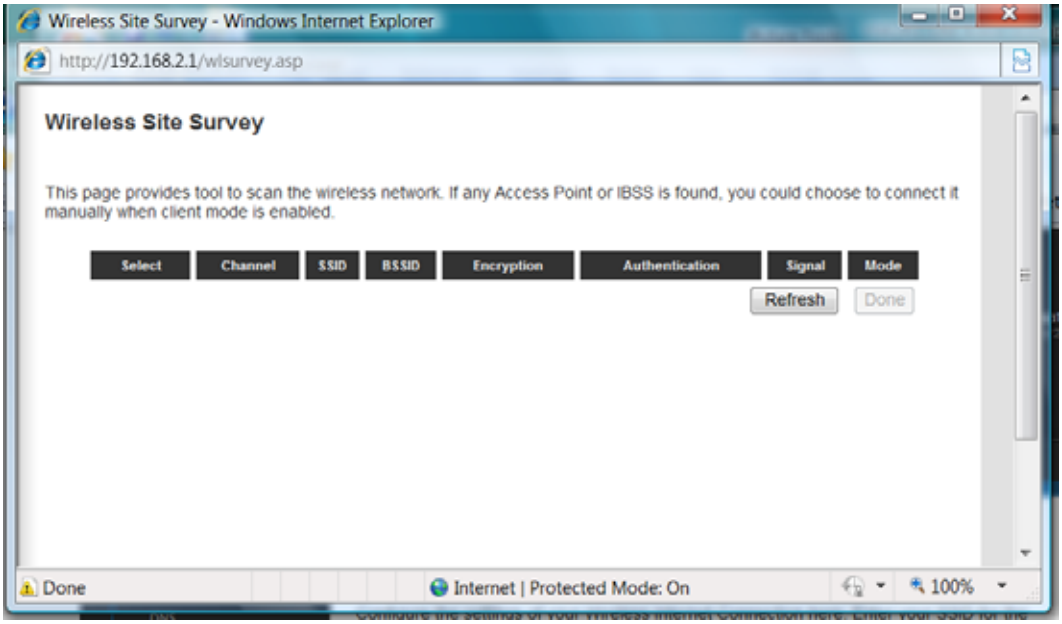

After you have selected a wireless Internet connection network, you may configure the security settings for that network if required. Select the security type and the encryption method and enter the appropriate key for the network you plan on connecting to.

Under IP Settings
Most networks use Dynamic IP settings to automatically assign IP Addresses to incoming connections. Click “Apply”.

If the network you are connecting does not use Dynamic IP settings or you wish to manually configure your IP, you can choose “Manual Setup”.

Click “Apply” when you have completed your setup.

3-2-2 Setup procedure for ‘Wired Internet Connections:

To setup a wired Internet connection such as Cable Modem or DSL, click “Configure” next to “Wired Internet Connection”

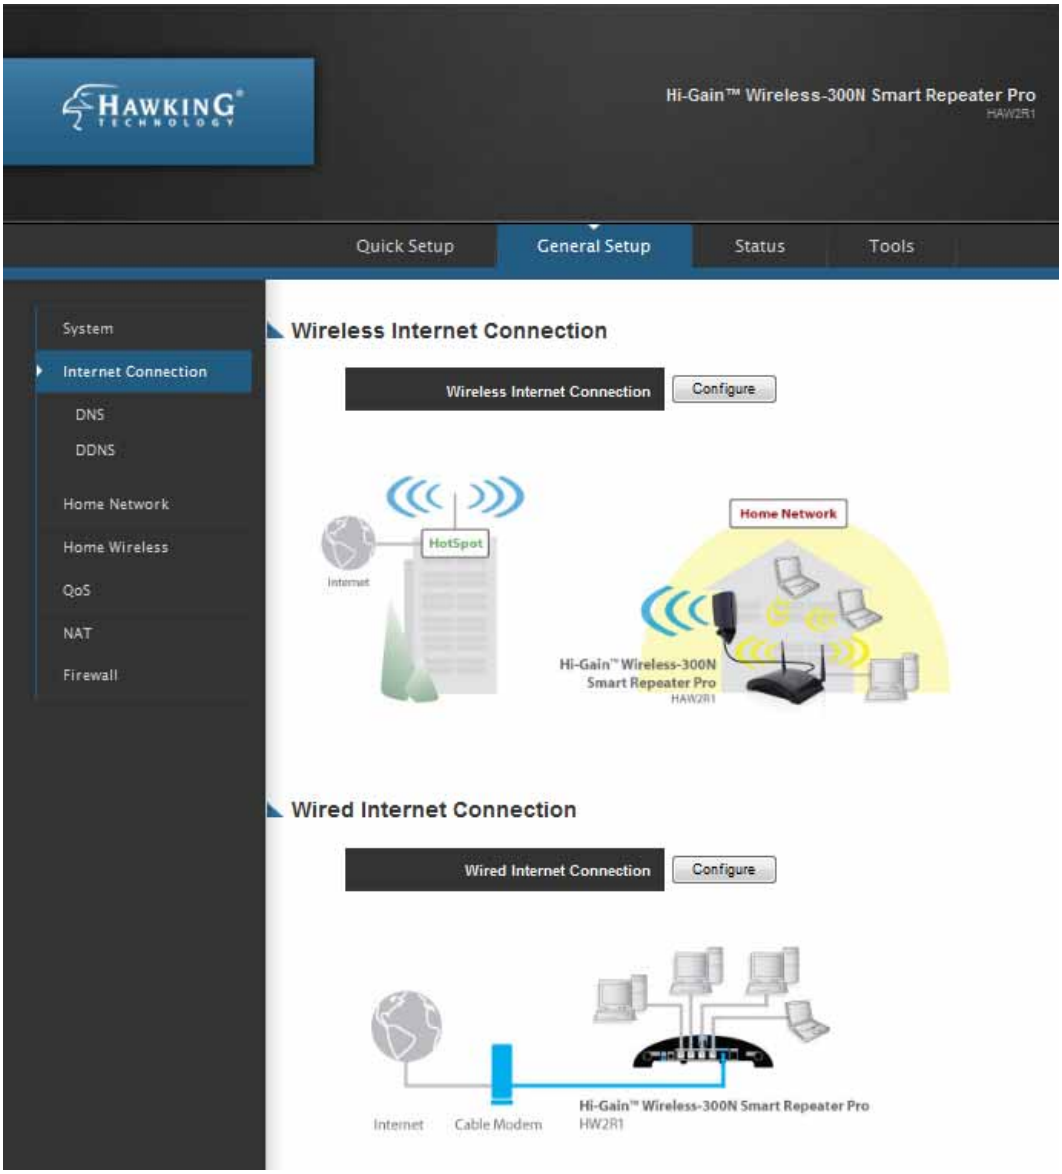

A menu will appear with a choice of wired Internet connection types. Select the one that fits your connection and scroll to the menu describing your selection below.

Wired Internet Connection

For wired Internet connections, such as cable or DSL modems, select the configuration settings for your connection below.

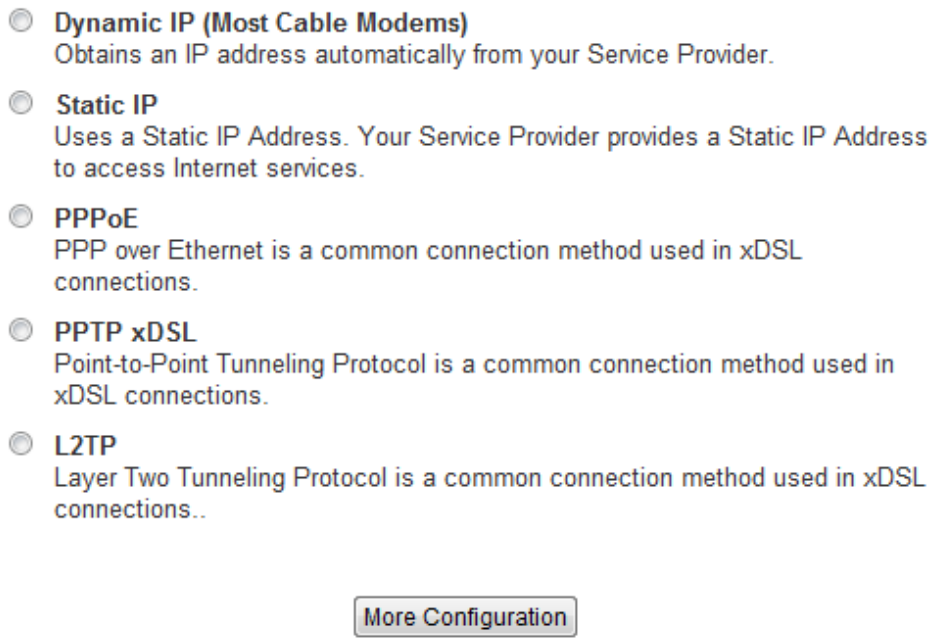
Dynamic IP (Most Cable Modems)
Obtains an IP address automatically from your Service Provider.
Static IP
Uses a Static IP Address. Your Service Provider provides a Static IP Address to access Internet services.
PPPoE
PPP over Ethernet is a common connection method used in xDSL connections.
PPTP xDSL
Point-to-Point Tunneling Protocol is a common connection method used in xDSL connections.
L2TP
Layer Two Tunneling Protocol is a common connection method used in xDSL connections..
More Configuration

Dynamic IP	- Please go to section 3-2-2-1
Fixed IP	- Please go to section 3-2-2-2
PPPoE	- Please go to section 3-2-2-3
PPTP	- Please go to section 3-2-2-4
L2TP	- Please go to section 3-2-2-5

3-2-2-1 Setup procedure for Dynamic IP:

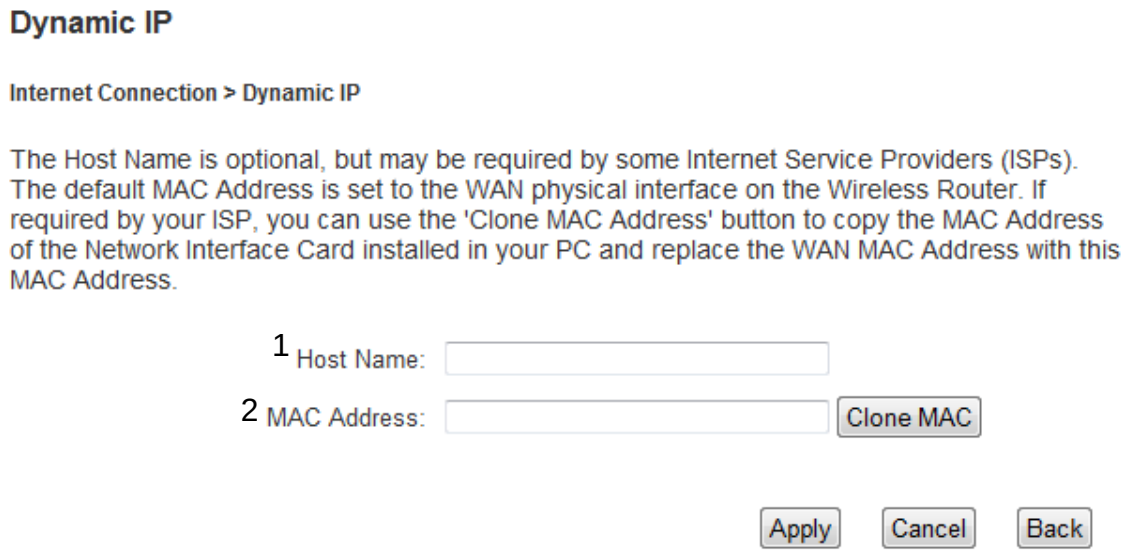
Dynamic IP
Internet Connection > Dynamic IP
The Host Name is optional, but may be required by some Internet Service Providers (ISPs). The default MAC Address is set to the WAN physical interface on the Wireless Router. If required by your ISP, you can use the 'Clone MAC Address' button to copy the MAC Address of the Network Interface Card installed in your PC and replace the WAN MAC Address with this MAC Address.
1 Host Name:
2 MAC Address:
Clone MAC
Apply
Cancel
Back

Host Name (1):	*Please input host name of your computer, this is optional, and only required if your service provider asks you to do so.*
MAC Address (2):	*Please input MAC address of your computer, if your service provider only permits computer with certain MAC address to access internet. If you're using the computer which used to connect to Internet via cable modem, you can simply press "Clone Mac address" button to fill the MAC address field with the MAC address of your computer,*

After you finish with all settings, click "OK"; if you want to remove a value you entered, click "Back".

After you click "OK", the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro so the settings will take effect after it reboots.

3-2-2-2 Setup procedure for ‘Static IP’:

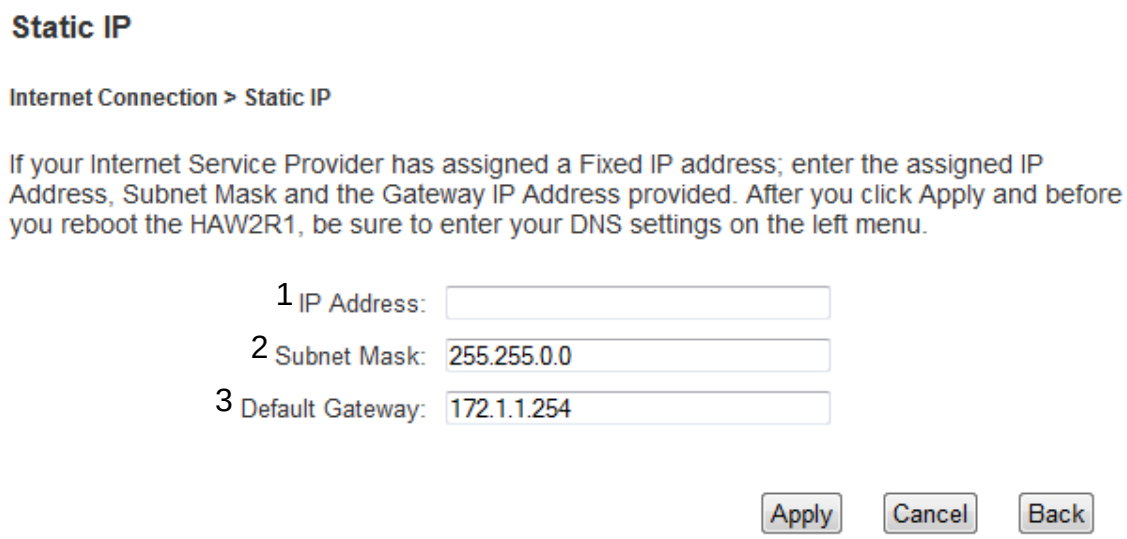
Static IP
Internet Connection > Static IP
If your Internet Service Provider has assigned a Fixed IP address; enter the assigned IP Address, Subnet Mask and the Gateway IP Address provided. After you click Apply and before you reboot the HAW2R1, be sure to enter your DNS settings on the left menu.
1 IP Address:
2 Subnet Mask: 255.255.0.0
3 Default Gateway: 172.1.1.254
Apply
Cancel
Back

IP address assigned by your Service Provider (1):	*Please input IP address assigned by your service provider.*
Subnet Mask (2):	*Please input subnet mask assigned by your service provider*
Service Provider Gateway Address (3):	*Please input the IP address of DNS server provided by your service provider.*

After you finish with all settings, please click the “Apply” button and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Before you click “Apply” to reboot, be sure to click on the DNS settings on the left and input your ISP’s DNS settings. (See Section 3-2-3). Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-2-2-3 Setup procedure for ‘PPPoE’:

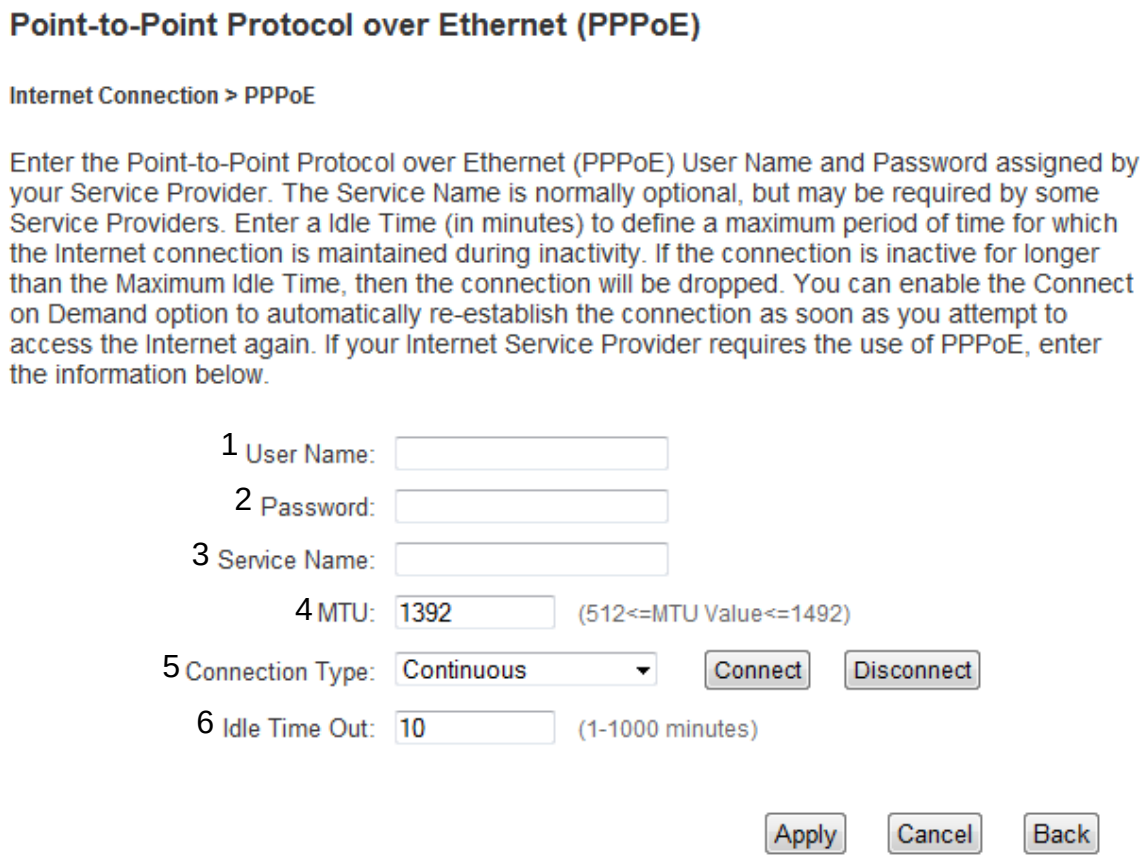
Point-to-Point Protocol over Ethernet (PPPoE)
Internet Connection > PPPoE
Enter the Point-to-Point Protocol over Ethernet (PPPoE) User Name and Password assigned by your Service Provider. The Service Name is normally optional, but may be required by some Service Providers. Enter a Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the Maximum Idle Time, then the connection will be dropped. You can enable the Connect on Demand option to automatically re-establish the connection as soon as you attempt to access the Internet again. If your Internet Service Provider requires the use of PPPoE, enter the information below.
1 User Name:
2 Password:
3 Service Name:
4 MTU: 1392 (512<=MTU Value<=1492)
5 Connection Type: Continuous Connect Disconnect
6 Idle Time Out: 10 (1-1000 minutes)
Apply Cancel Back

User Name (1): *Please input user name assigned by your Internet service provider here.*

Password (2): *Please input the password assigned by your Internet service provider here.*

Service Name (3): *Please give a name to this Internet service, this is optional*

MTU (4): *Please input the MTU value of your network connection here. If you don’t know, you can use default value.*

Connection Type (5): *Please select the connection type of Internet connection you wish to use.*
Continuous – The connection will be kept always on. If the

connection is interrupted, the Smart Repeater Pro will re-connect automatically.

Connect On-Demand – Only connect when you want to surf the Internet. "Idle Time Out" is set to stop the connection when the network traffic is not sending or receiving after an idle time.

Manual – After you have selected this option, you will see the "Connect" button and "Disconnect" button, click "'Connect" and the Smart Repeater Pro will connect to the ISP. If you want to stop the connection, please click "Disconnect" button.

Idle Time Out (6): *If you have selected the connection type to "Connect-On-Demand", please input the idle time out.*

After you finish with all the settings, click the "Apply" button. The following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press "Go Back" to save the settings and go back to the web management interface; press "Apply" to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-2-2-4 Setup procedure for ‘PPTP’:

PPTP requires two kinds of setting: WAN interface setting (setup IP address) and PPTP setting (PPTP user name and password). Here we start from WAN interface setting:

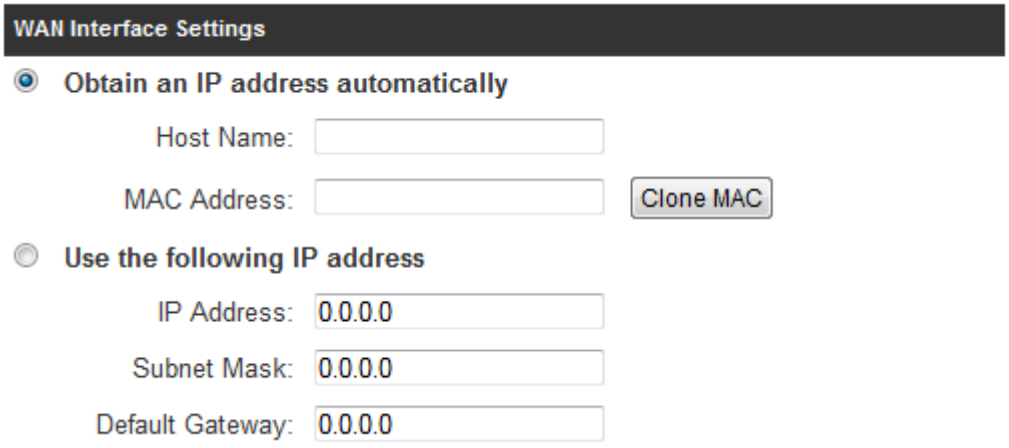

Select the type of how you obtain IP address from your service provider here. You can choose ‘Obtain an IP address automatically’ (equal to DHCP, please refer to ‘Cable Modem’ section above), or ‘Use the following IP address’ (i.e. static IP address)

WAN interface settings must be correctly set, or the Internet connection will fail even if settings of PPTP settings are correct. Please contact your Internet service provider if you don’t know what you should fill in these fields.

PPTP settings section:

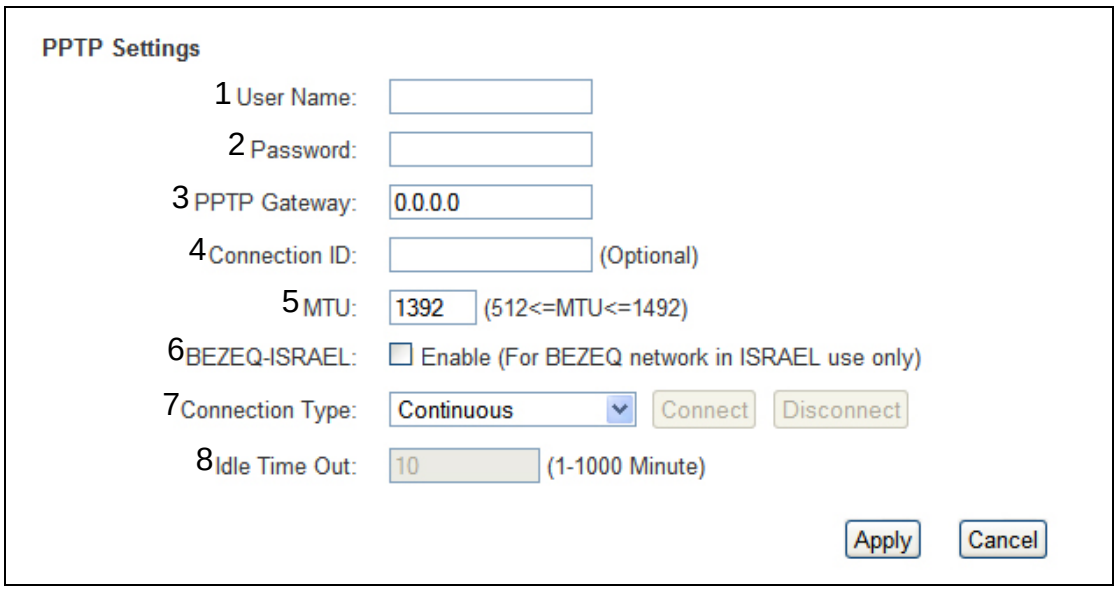

User ID (1):	*Please input user ID (user name) assigned by your Internet service provider here.*
Password (2):	*Please input the password assigned by your Internet service provider here.*
PPTP Gateway (3):	*Please input the IP address of PPTP gateway assigned by your Internet service provider here.*
Connection ID (4):	*Please input the connection ID here, this is optional and you may leave it blank.*
MTU (5):	*Please input the MTU value of your network connection here. If you don't know, you can use default value.*
BEZEQ-ISRAEL (6):	*If you are connecting to the BEZEQ network in Israel. Please enable this function.*
Connection	*Please select the connection type of Internet*

type (7):	*connection you wish to use, please refer to section 2-5-3 for detailed descriptions.*
Idle Time Out (8):	*Please input the idle time out of Internet connection you wish to use, and refer to section 2-5-3 for detailed descriptions.*

Setting item 'BEZEQ-ISRAEL' is only required to check if you're using the service provided by BEZEQ network in Israel.

Press "Go Back" to save the settings and go back to the web management interface; press "Apply" to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-2-2-5 Setup procedure for 'L2TP':

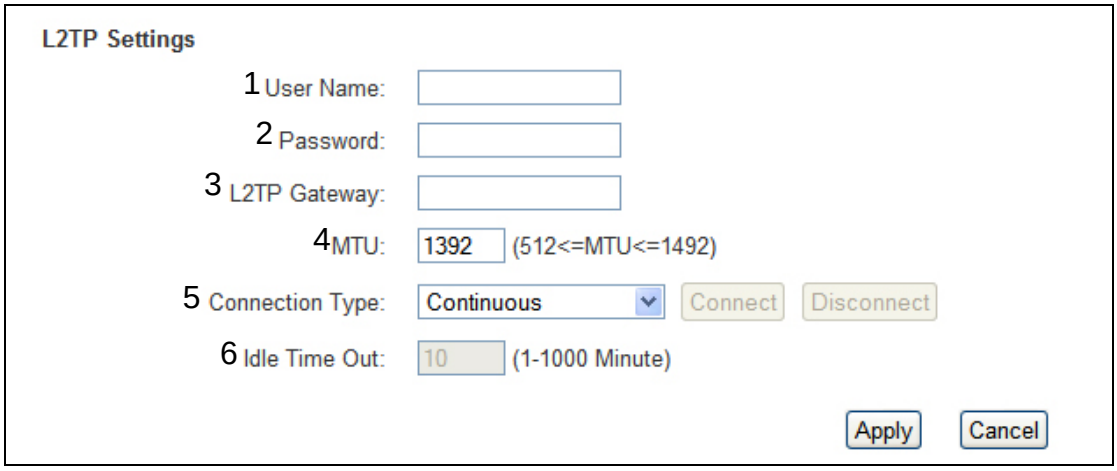

User ID (1):	*Please input user ID (user name) assigned by your Internet service provider here.*
Password (2):	*Please input the password assigned by your Internet service provider here.*
L2TP Gateway (3):	*Please input the IP address of PPTP gateway assigned by your Internet service provider here.*
MTU (4):	*Please input the MTU value of your network connection here. If you don't know, you can use default value.*
Connection type (5):	*Please select the connection type of Internet connection you wish to use.*
Idle Time Out (6):	*Please input the idle time out of Internet connection you wish to use.*

Press "Go Back" to save the settings and go back to the web management interface; press "Apply" to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-2-3 Setup procedure for 'DNS':

If you select "*Dynamic IP*" or "*PPPoE*" as Internet connection method, at least one DNS server's IP address should be assigned automatically. However, if you chose "Static IP" have preferred DNS server, or your service provider didn't assign the IP address of DNS server for any reason, you can input the IP address of DNS server here.

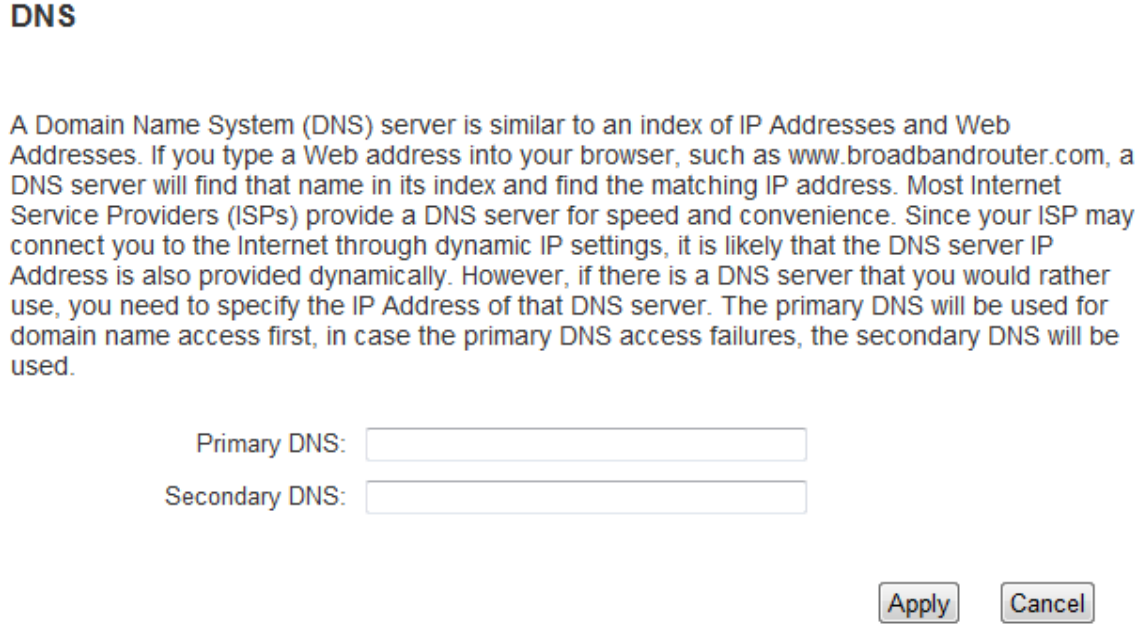
DNS
A Domain Name System (DNS) server is similar to an index of IP Addresses and Web Addresses. If you type a Web address into your browser, such as www.broadbandrouter.com, a DNS server will find that name in its index and find the matching IP address. Most Internet Service Providers (ISPs) provide a DNS server for speed and convenience. Since your ISP may connect you to the Internet through dynamic IP settings, it is likely that the DNS server IP Address is also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP Address of that DNS server. The primary DNS will be used for domain name access first, in case the primary DNS access failures, the secondary DNS will be used.
Primary DNS:
Secondary DNS:
Apply
Cancel

Primary DNS	*Please input the IP address of DNS server provided by your service provider.*
Secondary DNS	*Please input the secondary DNS provided by your service provider*

NOTE: Only an IP address can be entered here; *DO NOT* use the hostname of DNS server! (i.e. only numeric characters and dots are accepted)

10.20.30.40…… Correct
dns.serviceprovider.com…….. Incorrect

After you finish with all of your settings, click "Apply" and the following message will

be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-2-4 Setup procedure for ‘DDNS’:

DDNS (Dynamic DNS) is an IP-to-Hostname mapping service for those Internet users who don’t have a static (fixed) IP address. It will be a problem when such users want to provide services to other users on the Internet, because their IP address will vary every time when connected to the Internet, and other users will not be able to know the IP address they’re using at any certain time.

This Smart Repeater Pro supports DDNS service of several service providers, for example:

DynDNS (http://www.dyndns.org)
TZO (http://www.tzo.com)

Go to one of the DDNS service provider’s web pages listed above, and get a free DDNS account by the instructions given on their webpage.

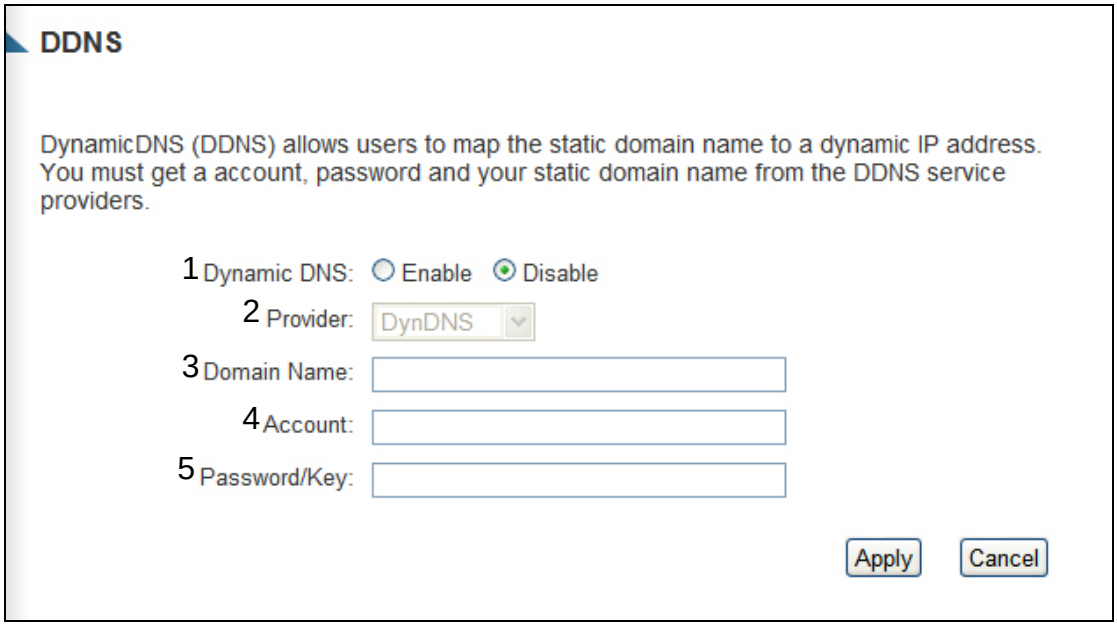
DDNS
DynamicDNS (DDNS) allows users to map the static domain name to a dynamic IP address. You must get a account, password and your static domain name from the DDNS service providers.
1 Dynamic DNS: Enable Disable
2 Provider: DynDNS
3 Domain Name:
4 Account:
5 Password/Key:
Apply
Cancel

Dynamic DNS (1): *If you want to enable DDNS function, please select ‘Enabled’; otherwise please select ‘Disabled’.*

Provider (2): *Select your DDNS service provider here.*

Domain Name (3):	*Input the domain name you've obtained from DDNS service provider.*
Account / E-Mail (4):	*Input account or email of DDNS registration.*
Password / Key (5):	*Input DDNS service password or key.*

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press "Go Back" to save the settings and go back to the web management interface; press "Apply" to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-3 Home Network (LAN: Local Area Network) Configuration

A LAN is the network within your home. All computers accessing your Internet connection through the Smart Repeater Pro are considered part of your Home Network. Each of these users will either have their own manually configured IP address or an automatically configured IP address from the Smart Repeater Pro via its DHCP server.

There are two ways to assign IP addresses to computers: static IP address (set the IP address for every computer manually), and dynamic IP address (IP address of computers will be assigned by Smart Repeater Pro automatically. It's recommended for most computers to use dynamic IP address, it will save a lot of time on setting IP addresses for every computer, especially when there are a lot of computers in your network; for servers and network devices which will provide services to other computers and users that come from the Internet, a static IP address should be used.

Suggestions on IP address numbering plan:

If you have no idea on how to define an IP address plan for your network, here are some suggestions.

1. **A valid IP address has 4 fields: a.b.c.d, for most of home and company users, it's suggested to use 192.168.c.d, where c is an integer between 0 and 254, and d is an integer between 1 and 254. This Smart Repeater Pro is capable to work with up to 253 clients, so you can set 'd' field of IP address of Smart Repeater Pro as 1 or 254 (or any number between 1 and 254), and pick a number between 0 and 254 for field 'c'.**
2. **In most cases, you should use '255.255.255.0' as subnet mask, which allows up to 253 clients (this also meets Smart Repeater Pro's capability of working with up to 253 clients).**
3. **For all servers and network devices which will provide services to other people (like Internet service, print service, and file service), they should use static IP address. Give each of them a unique number between 1 and 253, and maintain a list, so everyone can locate those servers easily.**
4. **For computers which are not dedicated to provide specific service to others, they should use dynamic IP address.**

Please follow the following instructions to set wired LAN parameters:

Click the “Home Network” tab at the left menu of the web management interface, there are three setup groups here: “LAN IP”, “DHCP Server”, and “Static DHCP Leases Table”.

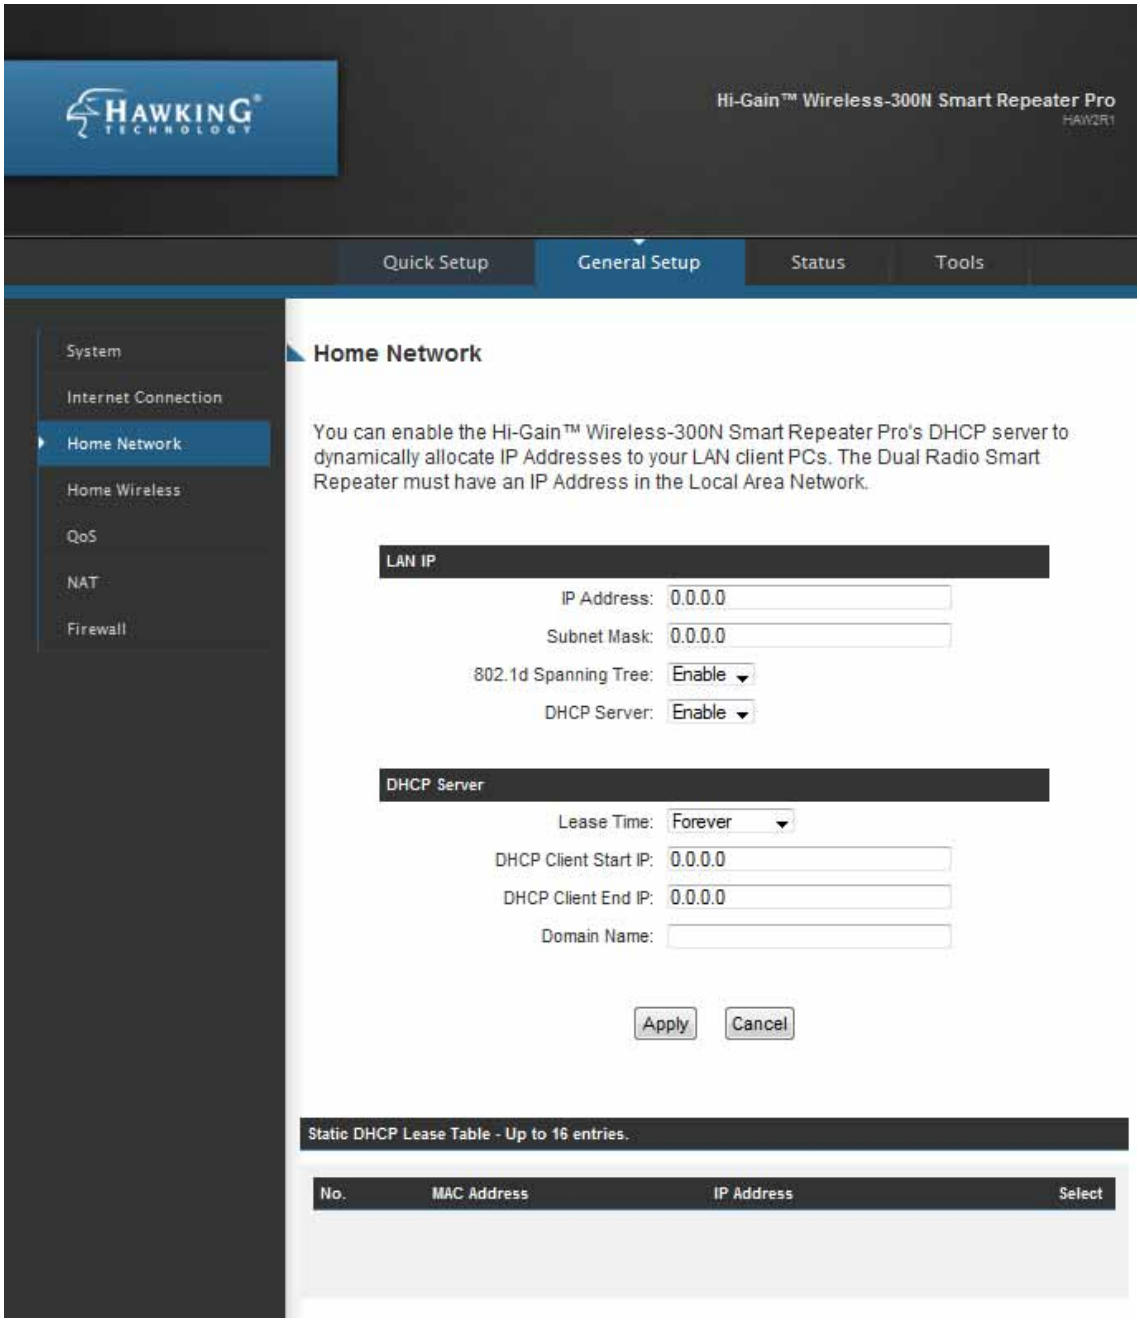

3-3-1 LAN IP section:

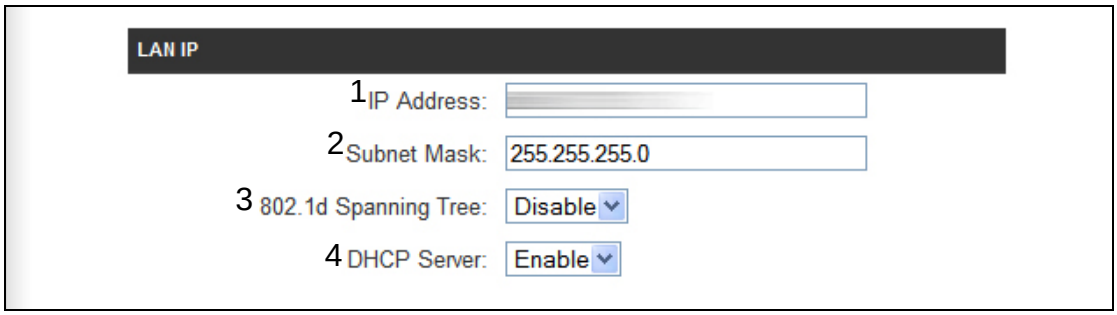

IP address (1): *Please input the IP address of this Smart Repeater Pro. This is the IP address used to access your Smart Repeater Pro. Make sure to make note of the new IP Address after you change it since the old one will no longer work.*

Subnet Mask (2): *Please input subnet mask for this network.*

802.1d *If you wish to activate 802.1d spanning tree*

Spanning Tree (3): *function, select 'Enabled' for setup item '802.1d Spanning Tree', or set it to 'Disabled'*

DHCP Server (4): *If you want to activate the DHCP server function of this Smart Repeater Pro, select 'Enabled', or 'Disabled'*. If you select Disable, the IP settings from your source Internet network will be passed through to clients connecting through the Smart Repeater Pro. (For example, a network with a DHCP server IP range of 10.1.1.1 – 10.1.1.100 will disperse IP addresses within that range to computers connecting through your Smart Repeater Pro while the Smart Repeater Pro is connected to that specific network)

Recommended (Default) Values if you don't know what to fill:

IP Address: 192.168.1.200
Subnet Mask: 255.255.255.0
802.1d Spanning Tree: Disabled
DHCP Server: Enabled

3-3-2 DHCP Server:

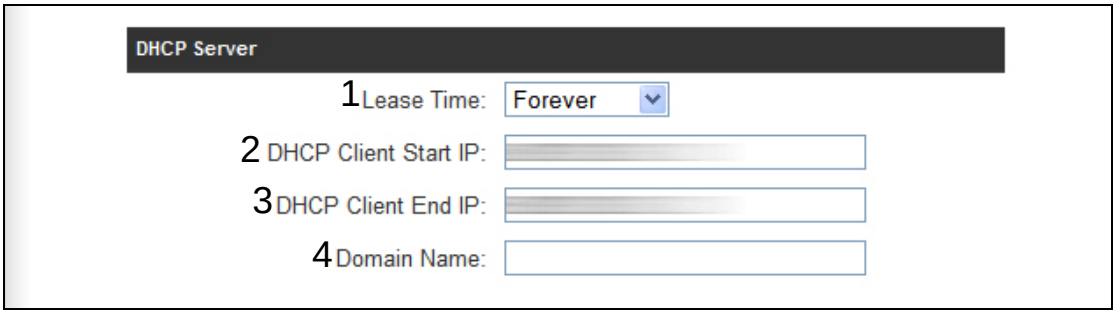

These settings are only available when 'DHCP Server' in 'LAN IP' section is "Enabled".

Lease Time (1):	*Please choose a lease time (the duration that every computer can keep a specific IP address) of every IP address assigned by this Smart Repeater Pro from dropdown menu.*
Start IP (2):	*Please input the start IP address of the IP range.*
End IP (3):	*Please input the end IP address of the IP range.*
Domain Name (4):	*If you wish, you can also optionally input the domain name for your network. This is optional.*

Recommended (Default) Value if you don't know what to fill:

Lease Time: Two Weeks (or 'Forever', if you have less than 20 computers)
Start IP: 192.168.1.1
End IP: 192.168.1.199
Domain Name: (leave it blank)

NOTE:

1. The number of the last field (mentioned '3' field) of 'End IP' must be greater than 'Start IP', and cannot be the same as Smart Repeater Pro's IP address.

2. The former three fields of IP address of 'Start IP', 'End IP', and 'IP Address of 'LAN IP' section should be the same.

3. These settings will affect wireless clients too.

3-3-3 Static DHCP Leases Table:

This function allows you to assign a static IP address to a specific computer forever, so you don't have to set the IP address for a computer, and still enjoy the benefit of using DHCP server. A maximum of 16 static IP addresses can be assigned here.

(If you set "Lease Time" to "forever" in "DHCP Server" section, you can also assign an IP address to a specific computer permanently, however, you will not be able to assign a certain IP address to a specific computer, since IP addresses will be assigned in random order by this way).

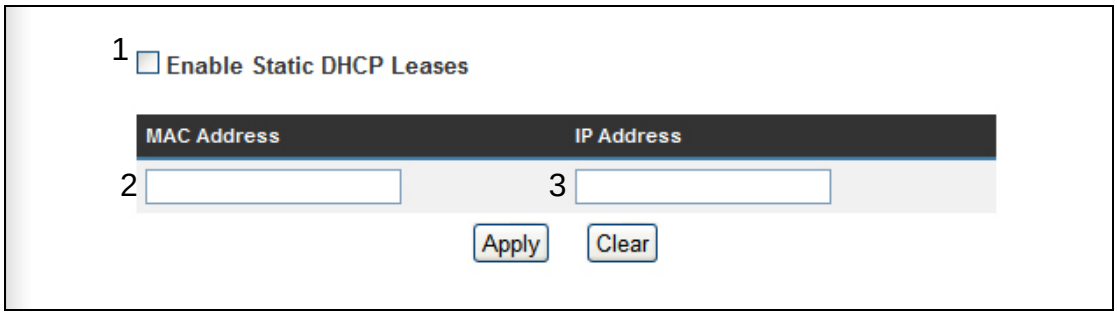

Enable Static DHCP Leases (1):	*Check this box to enable this function, otherwise uncheck it to disable this function.*
MAC Address (2):	*Input the MAC address of the computer or network device (total 12 characters, with characters from 0 to 9, and from a to f, like '001122aabbcc')*
IP address (3):	*Input the IP address you want to assign to this computer or network device*

If you want to remove all characters you just entered, click "Clear".

After you clicked "Add", the MAC address and IP address mapping will be added to "Static DHCP Leases Table" section.

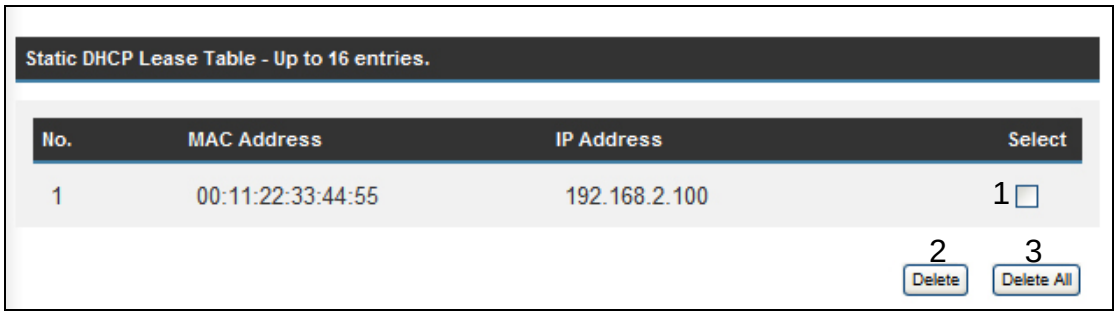

If you want to delete a specific item, check the “Select” box of a MAC address and IP address mapping (1), then click “Delete” button (2); if you want to delete all mappings, click “Delete All” (3).

After you finish all LAN settings, click “Apply” on the bottom of this page. After you click “Apply”, the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-4 Wireless Home Network (WLAN) Configuration

If your computer, PDA, game console, or other network devices has a wireless network adapter, you can use the wireless function of this Smart Repeater Pro to let them connect to Internet and share resources with other computers on your wired home network. You can also use the built-in security functions to protect your network from intruders with malicious attacks.

Follow these instructions to set your wireless parameters:

Click the “Home Wireless” tab on the left side of the web management interface, and the following message will be displayed on your web browser.

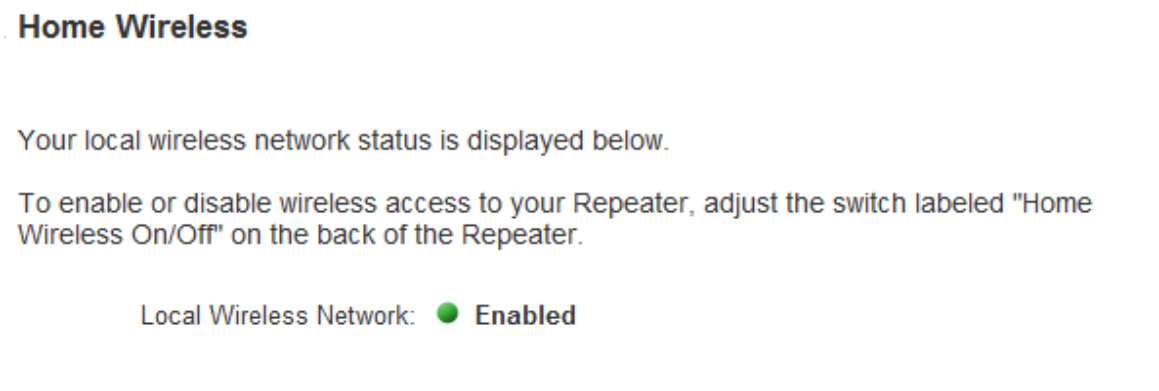
Home Wireless
Your local wireless network status is displayed below.
To enable or disable wireless access to your Repeater, adjust the switch labeled "Home Wireless On/Off" on the back of the Repeater.
Local Wireless Network:
Enabled

If you wish to enable wireless, make sure the switch on the back of the Smart Repeater Pro is switched to “On”. If you wish to disable the wireless, make sure the switch on the Smart Repeater Pro is switch to “Off”.

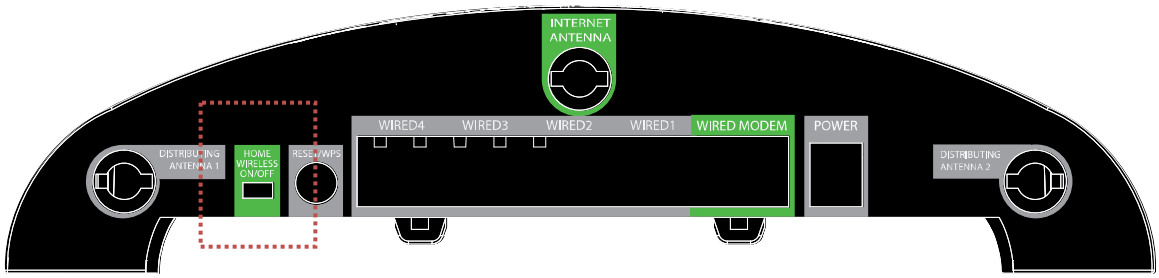

3-4-1 Basic Wireless Settings

Click “Basic Setup” menu at the top of web management interface, then click “Basic Settings”, and the following message will be displayed on your web browser:

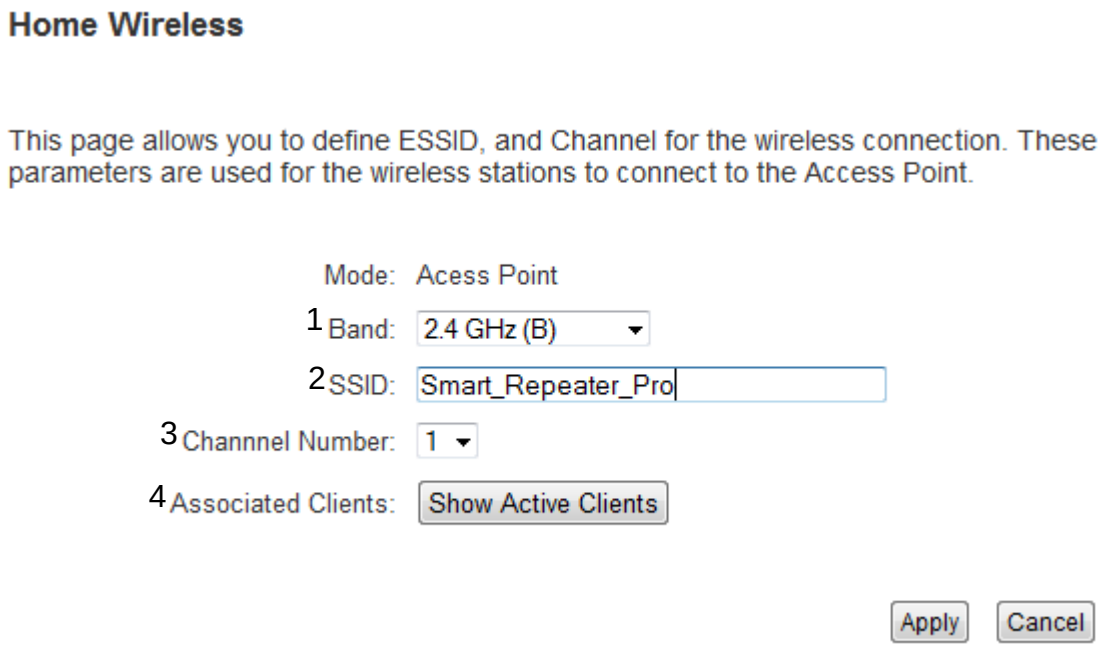
Home Wireless
This page allows you to define ESSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point.
Mode: Acess Point
1 Band: 2.4 GHz (B)
2 SSID: Smart_Repeater_Pro
3 Channnel Number: 1
4 Associated Clients: Show Active Clients
Apply
Cancel

Band (1): *Please select the radio band from one of following options:*

2.4 GHz (B)	2.4GHz band, only allows 802.11b wireless network clients to connect to this Smart Repeater Pro (maximum transfer rate 11Mbps).
2.4 GHz (N)	2.4GHz band, only allows 802.11n wireless network clients to connect to this Smart Repeater Pro (maximum transfer rate 300Mbps).
2.4 GHz (B+G)	2.4GHz band, only allows 802.11b and 802.11g wireless network clients to connect to this Smart Repeater Pro (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).
2.4 GHz (G)	2.4GHz band, only allows 802.11g wireless network clients to connect to this Smart Repeater Pro (maximum transfer rate 54Mbps).
2.4 GHz (B+G+N)	2.4GHz band, allows 802.11b, 802.11g, and 802.11n wireless network clients to connect to this Smart Repeater Pro (maximum transfer rate 11Mbps for 802.11b clients, maximum 54Mbps for 802.11g clients, and maximum 300Mbps for 802.11n clients).

NOTE: For 802.11b and 802.11g mode, the signals can be transmitted only by antenna 1 (The antenna on the right side of the rear panel).

For 802.11n mode: The Smart Repeater Pro is operating in a 2T3R Spatial Multiplexing MIMO configuration. 2 antennas are for signal transmitting and 3 antennas are for signal receiving.

ESSID (2): *This is the name of wireless Smart Repeater Pro. You can type any alphanumerical characters here, maximum 32 characters. ESSID is used to identify your own wireless Smart Repeater Pro from others when in the same area. Default SSID is "Smart_Repeater_Pro". It's recommended to change default ESSID value to the one which is meaningful to you, like myhome, office_room1, etc.*

Channel Number (3): *Please select a channel from the dropdown list of 'Channel*

Number', 1 to 11 for USA. ***(This product is only for use in the USA and is restricted to usage of the channels 1-11 only****)You can choose any channel number you want to use, and almost all wireless clients can locate the channel you're using automatically without any problem. However, it's still useful to remember the channel number you use, as some wireless clients support manual channel number selecting, and this would help in certain scenarios when there is some radio communication problems.*

Associated Clients (4): *Click 'Show Active Clients' button, then an "Active Wireless Client Table" will pop up. You can see the status of all active wireless stations that are connecting to the access point.*

NOTE: If you don't have special reason to limit the type of allowed wireless clients, it's recommended to choose '2.4 GHz (B+G+N) to maximize wireless client compatibility.
TIPS: You can try to change channel number to another one if you think the data transfer rate is too slow. There could be some other wireless devices using the same channel, which will disturb the radio communication between wireless client and the wireless Smart Repeater Pro.

3-4-2 Advanced Wireless Settings

This Smart Repeater Pro provides some advanced controls of the wireless parameters. If you want to configure these settings, click the “Advanced Settings” selection from the left side menu under “Wireless Home”, and the following message will be displayed:

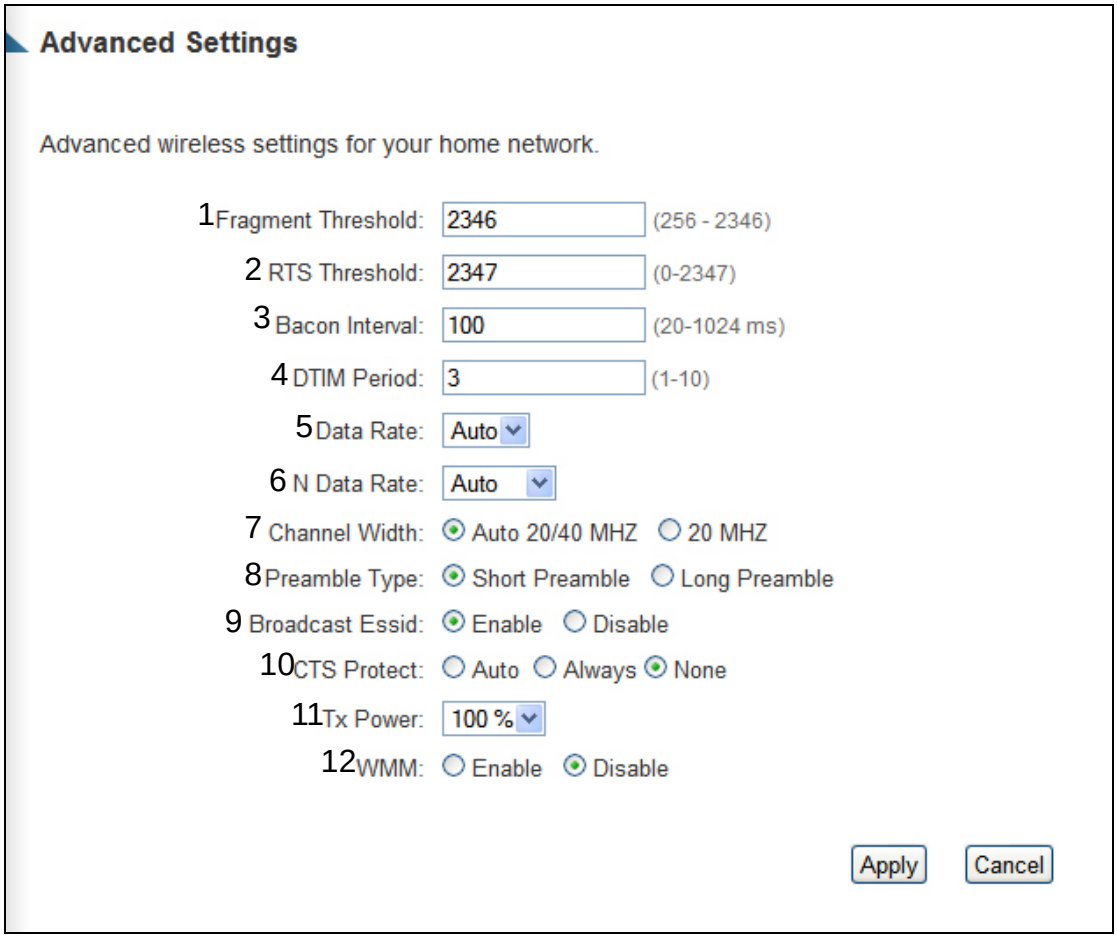
Advanced Settings
Advanced wireless settings for your home network.
1 Fragment Threshold: 2346 (256 - 2346)
2 RTS Threshold: 2347 (0-2347)
3 Bacon Interval: 100 (20-1024 ms)
4 DTIM Period: 3 (1-10)
5 Data Rate: Auto
6 N Data Rate: Auto
7 Channel Width: Auto 20/40 MHZ 20 MHZ
8 Preamble Type: Short Preamble Long Preamble
9 Broadcast Essid: Enable Disable
10 CTS Protect: Auto Always None
11 Tx Power: 100 %
12 WMM: Enable Disable
Apply
Cancel

Fragment Threshold (1): *Set the Fragment threshold of wireless radio.* ***Do not modify default value if you don’t know what it is, default value is 2346.***

RTS Threshold (2): *Set the RTS threshold of wireless radio.* ***Do not modify default value if you don’t know what it is, default value is 2347.***

Beacon Interval (3): *Set the beacon interval of wireless radio.* ***Do not modify default***

value if you don't know what it is, default value is 100.

DTIM Period (4): *Set the DTIM period of wireless radio.* ***Do not modify default value if you don't know what it is, default value is 3.***

Data Rate (5): *Set the wireless data transfer rate to a certain value. Since most of wireless devices will negotiate with each other and pick a proper data transfer rate automatically,* ***it's not necessary to change this value unless you know what will happen after modification.***

N Data Rate (6): *Same as above, but only for 802.11n clients.*

Channel Width (7): *Set channel width of wireless radio.* ***Do not modify default value if you don't know what it is, default setting is "Auto 20/40 MHz".***

Preamble Type (8): *Set the type of preamble,* ***do not modify default value if you don't know what it is, default setting is "Short Preamble".***

Broadcast ESSID (9): *Decide if the wireless Smart Repeater Pro will broadcast its own ESSID or not. You can hide the ESSID of your wireless Smart Repeater Pro (set the option to "Disable"), so only those people who know the ESSID of your wireless can get connected.*

CTS Protect (10): *Enabling this setting will reduce the chance of radio signal collisions between 802.11b and 802.11g/n wireless access points. It's recommended to set this option to "Auto" or "Always". However, if you set to "None", your wireless Smart Repeater Pro should be able to work fine, too.*

Tx Power (11): *You can set the output power of wireless radio. Unless you're using this wireless Smart Repeater Pro in a really big space, you may not have to set output power to 100%.* ***This will enhance security (malicious / unknown users in distance will not be able to reach your wireless Smart Repeater Pro).***

WMM(12): *Short for Wi-Fi Multimedia, it will enhance the data transfer performance of multimedia contents when they're being transferred over a wireless network.* ***If you don't know what it is / not sure if you need it, it's safe to set this option to "Enable", however, default value is "Disable".***

After you finish these wireless settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press "Go Back" to save the settings made and go back to the web management interface; press "Apply" to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-4-3 Wireless Security

It's very important to set wireless security settings properly! Consequences of wireless networks without security include intrusion from hackers and malicious users that can steal valuable data from your network. It is highly recommended to setup security settings for your wireless network.

To set wireless security settings, click "Wireless" menu at the top of web management interface, then click "Security Settings". Follow the instructions to set wireless security settings:

Select an encryption method from the "Encryption" dropdown menu, there are four options: Disable, WEP, WPA and WPA Radius.

3-4-3-1 Disable Wireless Security

When you select this mode, data encryption is disabled, and every wireless device in proximity will be able to connect your wireless Smart Repeater Pro if no other security measure is enabled (like MAC address access control - see section 3-4-4, or disable ESSID broadcast).

Only use this option when you want to allow everyone to use your wireless Smart Repeater Pro, and you don't care if there's someone that reads the data you transfer over the network.

3-4-3-2 WEP - Wired Equivalent Privacy

When you select this mode, the wireless Smart Repeater Pro will use WEP encryption, and the following setup menu will be shown on your web browser:

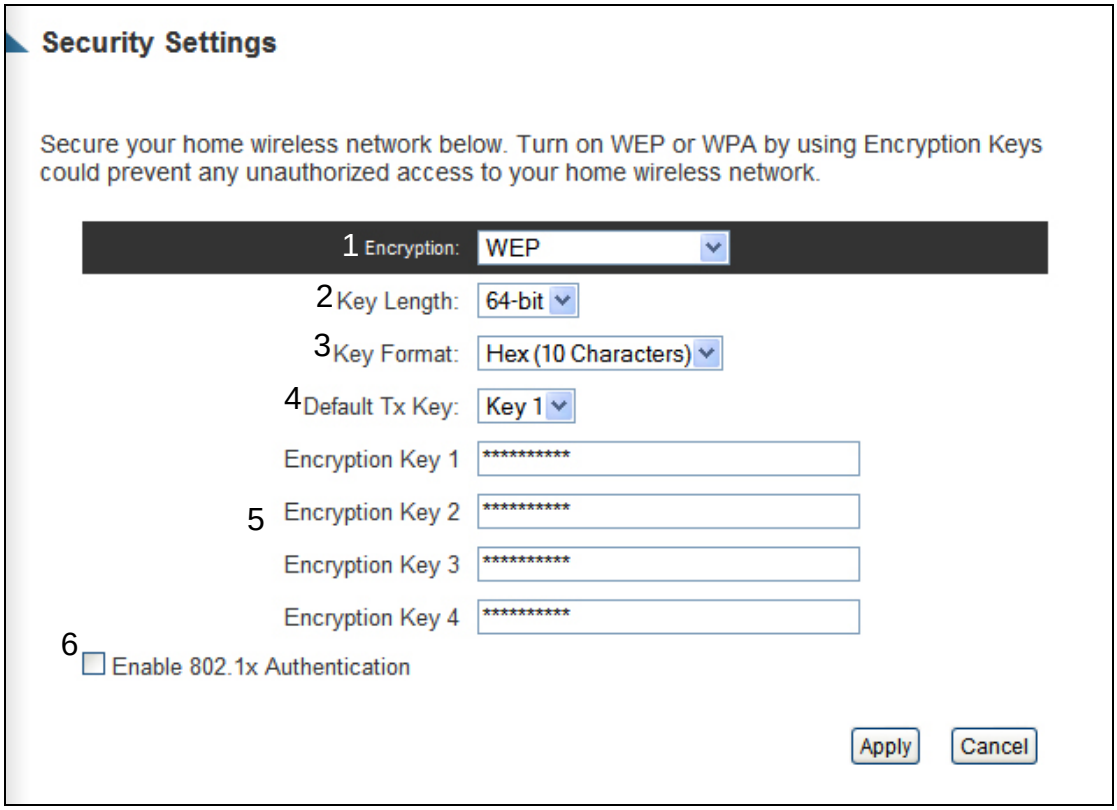
Security Settings
Secure your home wireless network below. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your home wireless network.
1 Encryption: WEP
2 Key Length: 64-bit
3 Key Format: Hex (10 Characters)
4 Default Tx Key: Key 1
Encryption Key 1 **********
5 Encryption Key 2 **********
Encryption Key 3 **********
Encryption Key 4 **********
6 Enable 802.1x Authentication
Apply
Cancel

Here are descriptions of every setup item:

Key Length (2): *There are two types of WEP key length: 64-bit and 128-bit. Using '128-bit' is safer than '64-bit', but will reduce some data transfer performance.*

Key Format (3): *There are two types of key format: ASCII and Hex. When you select a key format, the number of characters of key will be displayed. For example, if you select '64-bit' as key length, and 'Hex' as key format, you'll see the message at the right of 'Key Format' is 'Hex (10 characters), which means the length of WEP key is 10 characters.*

Default Tx Key (4): *You can set up to four sets of WEP key, and you can decide which key is being used by default here.* ***If you don't know which one you should use, select "Key 1".***

Encryption Key 1 to 4 (5): *Input WEP key characters here, the number of characters must be the same as the number displayed at "Key Format" field. You can use any alphanumerical characters (0-9, a-z, and A-Z) if you select "ASCII" key format, and if you select "Hex" as key format, you can use characters 0-9, a-f, and A-F. You must enter at least one encryption key here, and if you entered multiple WEP keys, they should not be same with each other.*

Enable 802.1x Authentication (6): *IEEE 802.1x is an authentication protocol. Every user must use a valid account to login to this wireless Smart Repeater Pro before accessing the wireless LAN. The authentication is processed by a RADIUS server. This mode only authenticates user by IEEE 802.1x, but it does not encryption the data during communication. If there is a RADIUS server in you environment, please enable this function. Check this box and another sub-menu will appear:*

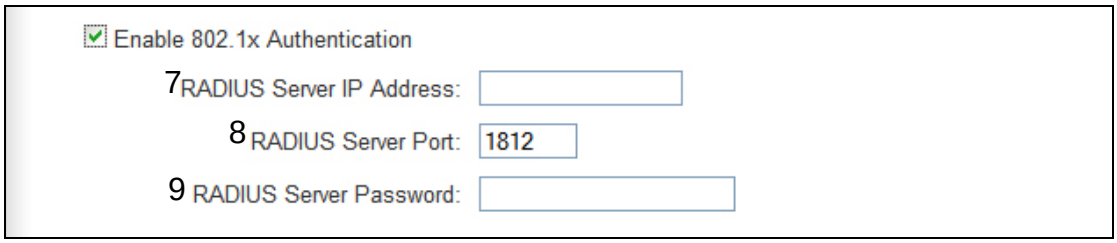

RADIUS Server IP address (7): *Please input the IP address of radius server here*

RADIUS Server Port (8): *Please input the port number of radius server here.*

RADIUS Server Password (9): *Please input the port number of radius password here.*

After you finish with the WEP settings, click “Apply” and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-4-3-3 WPA - Wi-Fi Protected Access:

When you select this mode, the wireless Smart Repeater Pro will use WPA encryption, and the following setup menu will be shown on your web browser:

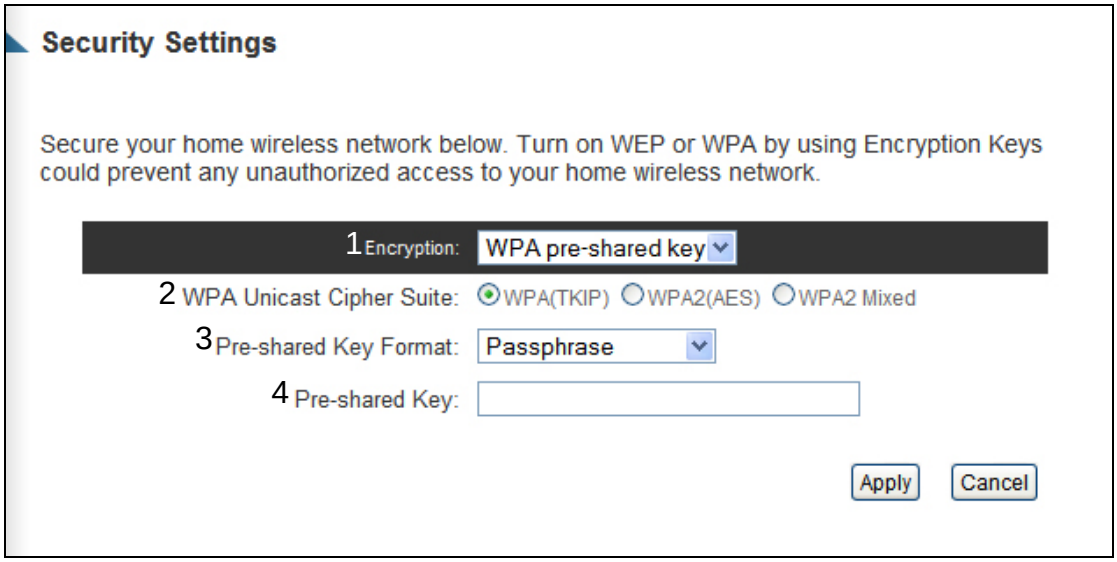
Security Settings
Secure your home wireless network below. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your home wireless network.
1 Encryption: WPA pre-shared key
2 WPA Unicast Cipher Suite: WPA(TKIP) WPA2(AES) WPA2 Mixed
3 Pre-shared Key Format: Passphrase
4 Pre-shared Key:
Apply
Cancel

WPA Unicast Cipher Suite (2):	*Please select a type of WPA cipher suite. Available options are: WPA (TKIP), WPA2 (AES), and WPA2 Mixed. You can select one of them, but you have to make sure your wireless client support the cipher you selected.*
Pre-shared Key Format (3):	*Select the type of pre-shared key, you can select Passphrase (8 or more alphanumerical characters, up to 63), or Hex (64 characters of 0-9, and a-f).*
Pre-shared Key (4):	*Please input the WPA passphrase here.* ***It's not recommended to use a word that can be found in a dictionary due to security reason.***

After you finish WPA Pre-shared key settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

NOTE: Some wireless clients (especially those manufactured before year 2003) only support WEP or WPA (TKIP) cipher. A driver upgrade would be needed for those clients to use WPA and WPA2 encryption.

3-4-3-4 WPA RADIUS:

If you have a RADIUS server, this Smart Repeater Pro can work with it and provide safer wireless authentication.

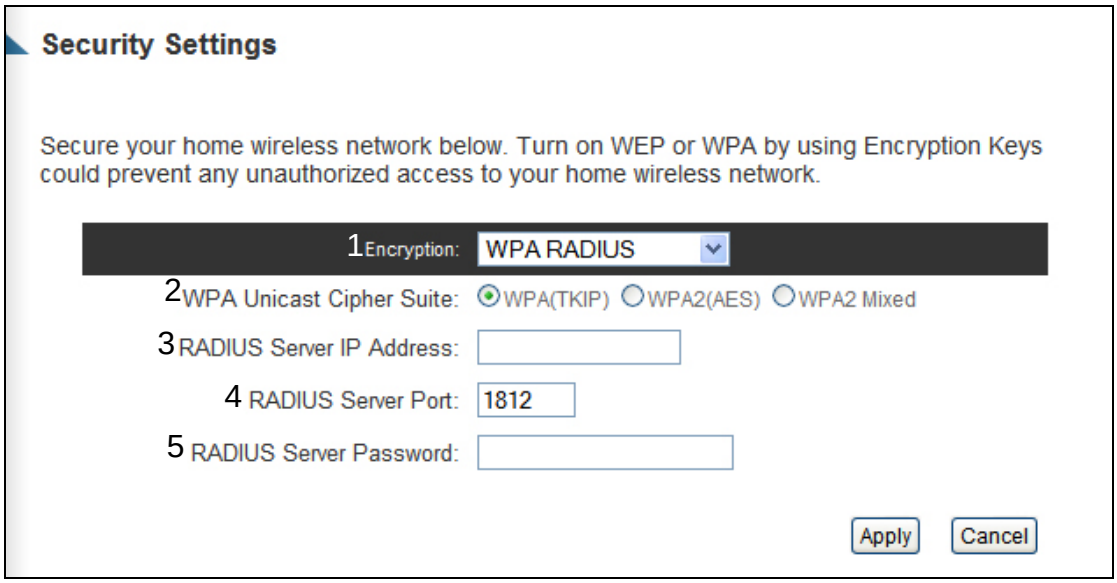
Security Settings
Secure your home wireless network below. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your home wireless network.
1 Encryption: WPA RADIUS
2 WPA Unicast Cipher Suite: WPA(TKIP) WPA2(AES) WPA2 Mixed
3 RADIUS Server IP Address:
4 RADIUS Server Port: 1812
5 RADIUS Server Password:
Apply
Cancel

WPA Unicast Cipher Suite:	*Please select a type of WPA cipher suite. Available options are: WPA (TKIP), WPA2 (AES), and WPA2 Mixed. You can select one of them, but you have to make sure your wireless client support the cipher you selected.*
RADIUS Server IP address (3):	*Please input the IP address of your Radius authentication server here.*
RADIUS Server Port (4):	*Please input the port number of your Radius authentication server here.* ***Default setting is 1812.***
RADIUS Server Password (5):	*Please input the password of your Radius authentication server here.*

After you finish with all of your settings, click “Apply” and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-4-4 Wireless Access Control

This function will help you to prevent unauthorized users from connecting to your wireless Smart Repeater Pro; only those wireless devices who have the MAC address you assigned here can gain access to your wireless Smart Repeater Pro. You can use this function with other security measures described in previous section, to create a safer wireless environment.

Up to 20 MAC addresses can be assigned by using this function. Click the 'Wireless' tab at the top of web management interface, then click 'Access Control', and the following message will be displayed on your web browser:

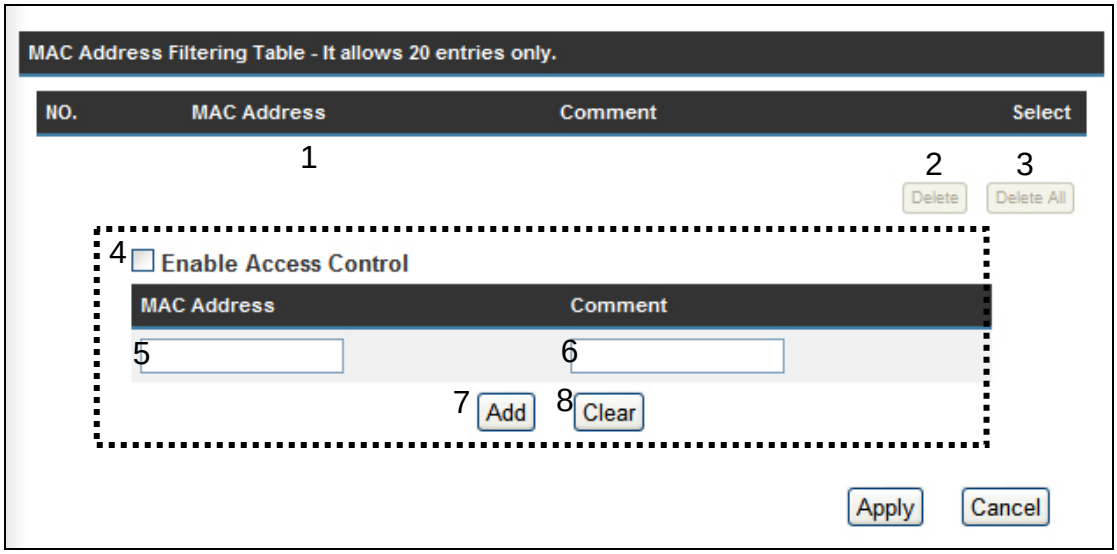

All allowed MAC addresses will be displayed in 'MAC Address Filtering Table' (1).

Delete Selected (2): *If you want to delete a specific MAC address entry, check the 'select' box of the MAC address you want to delete, then click 'Delete Selected' button. (You can select more than one MAC addresses).*

Delete All (3): *If you want to delete all MAC addresses listed here, please click 'Delete All' button.*

Enable Wireless Access Control (4):	*To enforce MAC address filtering, you have to check 'Enable Wireless Access Control'. When this item is unchecked, wireless Smart Repeater Pro will not enforce MAC address filtering of wireless clients.*
MAC Address (5):	*Input the MAC address of your wireless devices here, dash (-) or colon (:) are not required. (i.e. If the MAC address label of your wireless device indicates 'aa-bb-cc-dd-ee-ff' or 'aa:bb:cc:dd:ee:ff', just input 'aabbccddeeff'.*
Comment (6):	*You can input any text here as the comment of this MAC address, like 'ROOM 2A Computer' or anything. You can input up to 16 alphanumerical characters here. This is optional and you can leave it blank, however, it's recommended to use this field to write a comment for every MAC addresses as a memory aid.*
Add (7):	*Click 'Add' button to add the MAC address and associated comment to the MAC address filtering table.*
Clear (8):	*Click 'Clear' to remove the value you inputted in MAC address and comment field.*

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

3-4-5 WPS - Wi-Fi Protected Setup

Wi-Fi Protected Setup (WPS) is the simplest way to build a secure connection between wireless users and the Smart Repeater Pro. You do not have to select the specific wireless security encryption mode and input a long encryption passphrase each time a wireless user connects to your network. Instead you only have to press a button on wireless user's device (assuming WPS is supported by that device) and push the "WPS" button on the back of the Smart Repeater Pro and WPS will automatically configure your wireless security settings and wireless connection.

This Smart Repeater Pro supports two types of WPS modes: Push-Button Configuration (PBC), and PIN code. If you want to use PBC, you have to push a specific button on the device of the wireless user (usually titled WPS) to start the WPS mode. In addition the Smart Repeater Pro must be activated for WPS mode for the connection to work. You can push Reset/WPS button of the Smart Repeater Pro, or click "Start PBC" button in the web configuration interface to do this; if you want to use a PIN code, you have to know the PIN code of the wireless device and switch it to WPS mode, then provide the PIN code of the wireless device you wish to connect to the Smart Repeater Pro. The detailed instructions are below:

Click "Wireless Home" from the left side menu, then click "WPS", and the following message will be displayed:

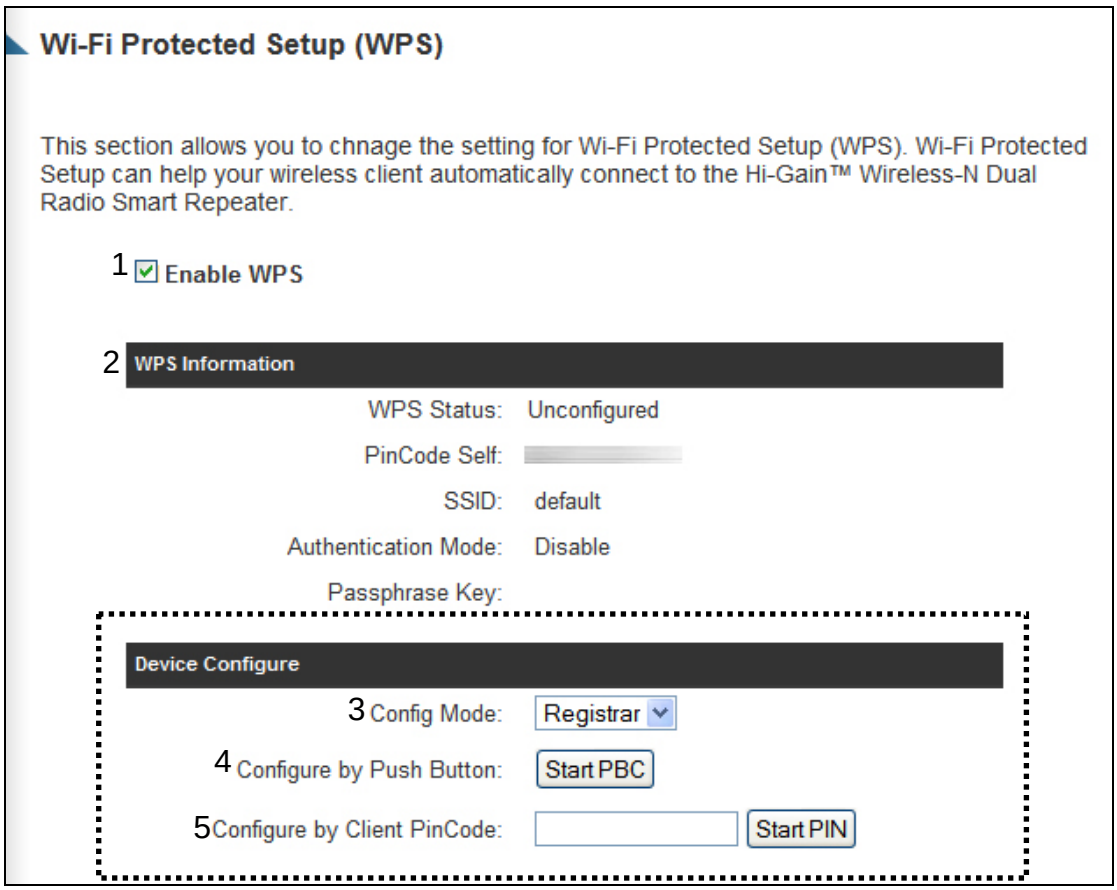
Wi-Fi Protected Setup (WPS)
This section allows you to chnage the setting for Wi-Fi Protected Setup (WPS). Wi-Fi Protected Setup can help your wireless client automatically connect to the Hi-Gain™ Wireless-N Dual Radio Smart Repeater.
1 Enable WPS
2 WPS Information
WPS Status: Unconfigured
PinCode Self:
SSID: default
Authentication Mode: Disable
Passphrase Key:
Device Configure
3 Config Mode: Registrar
4 Configure by Push Button: Start PBC
5 Configure by Client PinCode: Start PIN

Enable WPS (1) — *Check this box to enable WPS function, uncheck it to disable WPS.*

Wi-Fi Protected Setup Information (2) — *WPS-related system information will be displayed here*

WPS Status: If the wireless security (encryption) function of this wireless Smart Repeater Pro is properly set, you'll see 'Configured' message here. If wireless security function has not been set, you'll see 'Not configured'.

Self PIN code: This is the WPS PIN code of this wireless Smart Repeater Pro. This code is useful when you need to build wireless connection by WPS with other WPS-enabled wireless devices.

	SSID: The SSID of the Smart Repeater Pro will be displayed here. *Authentication Mode: The wireless security authentication mode of the Smart Repeater will be displayed here. If you do not enable the security function of the Smart Repeater Pro before WPS is activated, the Smart Repeater Pro will automatically set the security to WPA (AES) and generate a set passphrase key for a WPS connection.* *Passphrase Key: The wireless security key of the Smart Repeater Pro will be displayed here.*
Config Mode (3)	*There are "Registrar" and "Enrollee" modes for the WPS connection. When "Registrar" is enabled, the wireless clients will follow the Smart Repeater Pro's wireless settings for WPS connection. When "Enrolle" mode is enabled, the Smart Repeater Pro will follow the wireless settings of wireless client for WPS connection.*
Configure via Push Button (4)	*Click "Start PBC" to start Push-Button style WPS setup procedure. The Smart Repeater Pro will wait for WPS requests from wireless clients for 2 minutes. The "Wireless" LED on the Smart Repeater Pro will be on steadily for 2 minutes while the Smart Repeater Pro waits for incoming WPS requests.*
Configure via client PinCode (5)	*Please input the PIN code of the wireless client you wish to connect, and click "Start PIN" button.* *The "WLAN" LED on the wireless Smart Repeater Pro will be steady on when this wireless Smart Repeater Pro is waiting for incoming WPS request.*

3-4-6 Security Tips for Wireless Network

Here are some quick tips to help you improve the security level of your wireless network:

1. Never use simple words (like school, apple and computer) as WEP encryption or WPA passphrase security keys.

2. A complicated (combination of numbers, alphabets, and even symbols) WEP key and WPA passphrase is much safer than short and simple ones. Remember that the wireless client is capable of keeping the key or passphrase for you, so you only have to input the complicated key or passphrase once.

3. You can hide the ESSID of this Smart Repeater Pro by setting the “Broadcast ESSID” option to “Disable”. Your wireless Smart Repeater Pro will not be found by other people in proximity if they’re just using the AP scanning function of their wireless client, and this can reduce the chance of being intruded.

4. Use “Access Control” function described in section 3-4-4, so those people who are not in your list will not be able to connect to your network.

Chapter IV: Advanced Functions

4-1 Quality of Service (QoS)

Quality of service provides an efficient way for computers on the network to share the internet bandwidth with a preset connection quality of internet service. Without QoS, all computers and devices on the network will compete with each other to get internet bandwidth, and some applications which require guaranteed bandwidth (like video streaming and network telephone) will be affected, therefore an undesirable result will occur, like the interruption of video / audio transfer.

With this function, you can limit the maximum bandwidth or give a guaranteed bandwidth to a specific user. This tool is very useful for bandwidth management for the network administrator.

4-1-1 Basic QoS Settings

Please follow the following instructions to set QoS parameters:

Please click ‘Applications and Gaming’ and click the ‘QoS’ tab at the top of web management interface and the following message will be displayed on your web browser:

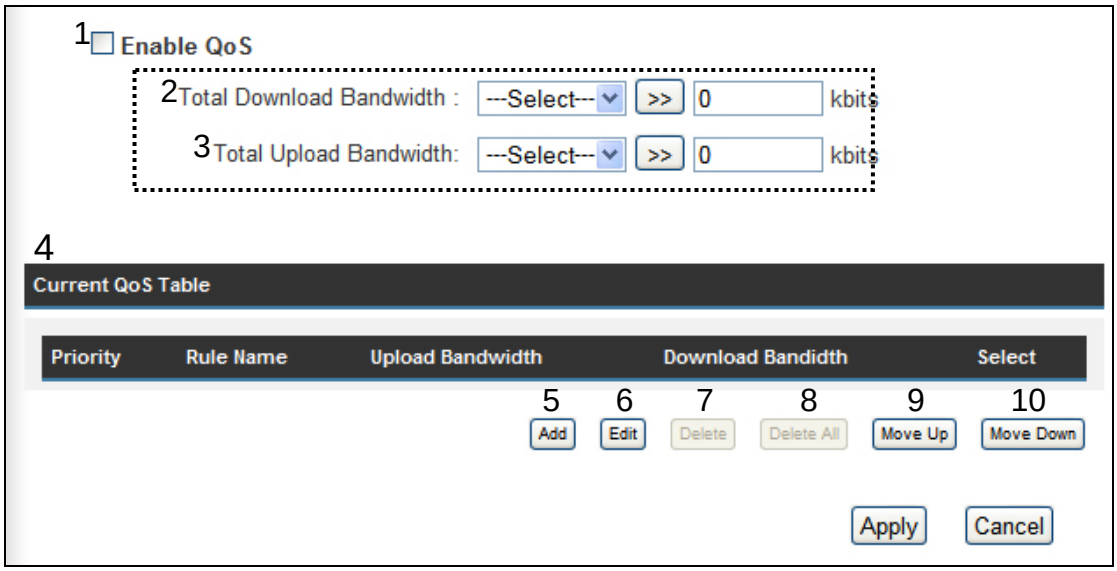

Enable QoS (1): *Check this box to enable QoS function, unselect this box if you don't want to enforce QoS bandwidth limitations.*

Total Download Bandwidth (2): *You can set the limit of total download bandwidth in kbits. To disable download bandwidth limitation, input '0' here.*

Total Upload Bandwidth (3): *You can set the limit of total upload bandwidth in kbits. To disable upload bandwidth limitation, input "0" here.*

Current QoS Table (4): *All existing QoS rules will be displayed here.*

Add (5): *Click "add" button to add a new QoS rule, see section 4-1-2 "Add a new QoS rule" below.*

Edit (6): *If you want to modify the content of a specific rule, please check the "select" box of the rule you want to edit, then click "Edit" button.* ***Only one rule should be selected a time.*** *If you didn't select a rule before clicking 'Edit' button, you'll be prompted to add a new rule.*

Delete Selected (7):	*You can delete selected rules by clicking this button. You can select one or more rules to delete by check the "select" the box of the rule(s) you want to delete a time.* ***If the QoS table is empty, this button will be grayed out and cannot be clicked.***
Delete All (8):	*By clicking this button, you can delete all rules currently in the QoS table.* ***If the QoS table is empty, this button will be grayed out and cannot be clicked.***
Move Up (9):	*You can pull up the priority of the QoS rule you selected by clicking this button.*
Move Down (10):	*You can lower the priority of the QoS rule you selected by clicking this button.*

.

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press "Go Back" to save the settings and go back to the web management interface; press "Apply" to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-1-2 Add a new QoS rule

After you click “Add” button in QoS menu, the following message will appear:

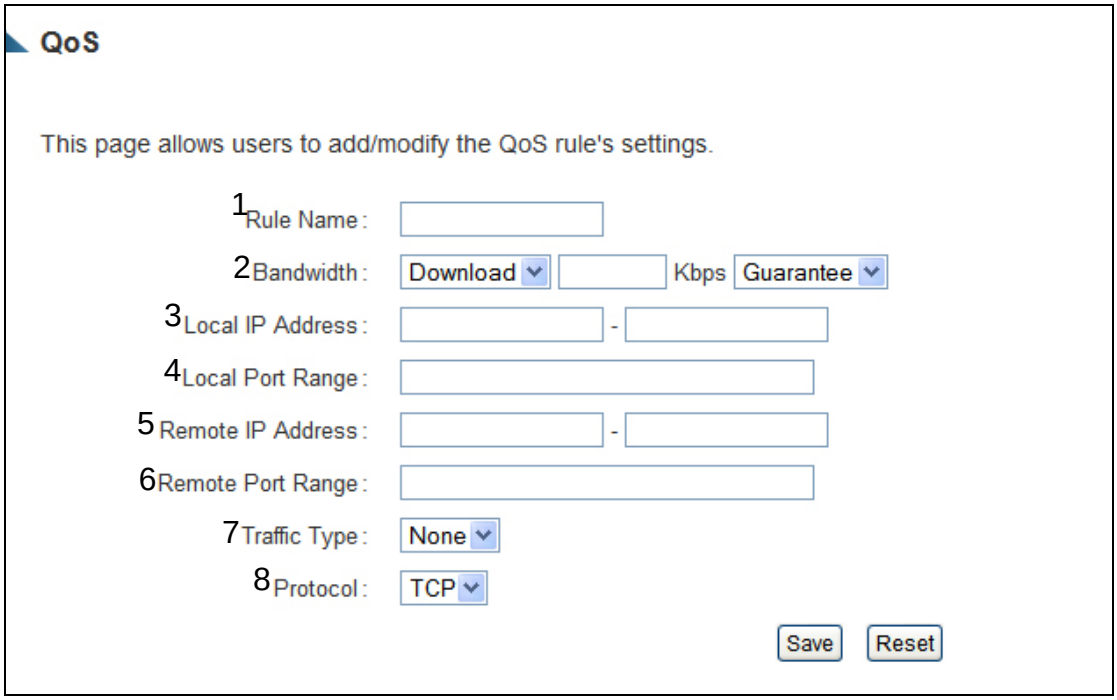

Rule Name (1): *Please give a name to this QoS rule (up to 15 alphanumerical characters)*

Bandwidth (2): *Set the bandwidth limitation of this QoS rule. You have to select the data direction of this rule (Upload of Download), and the speed of bandwidth limitation in Kbps, then select the type of QoS: “guarantee” (guaranteed usable bandwidth for this rule) or “max” (set the maximum bandwidth for the application allowed by this rule).*

Local IP Address (3): *Specify the local (source) IP address that will be affected by this rule. Please input the starting IP address in the left field, and input the end IP address in the right field to define a range of IP addresses, or just input the IP address in the left field to define a single IP address.*

Local Port Range (4):	*Please input the range of local (source) port number that will be affected by this rule. If you want to apply this rule on port 80 to 90, please input "80-90"; if you want to apply this rule on a single port, just input the port number, like "80".*
Remote IP Address: (5):	*Specify the remote (destination) IP address that will be affected by this rule. Please input the starting IP address in the left field, and input the end IP address in the right field to define a range of IP addresses, or just input the IP address in the left field to define a single IP address.*
Remote Port Range (6):	*Please input the range of remote (destination) port number that will be affected by this rule. If you want to apply this rule on port 80 to 90, please input "80-90"; if you want to apply this rule on a single port, just input the port number, like "80". If the remote (destination) IP address and /or port number is universal, just leave it blank.*
Traffic Type (7):	*Please select the traffic type of this rule, available options are None, SMTP, HTTP, POP3, and FTP. You can select a specific traffic type for this rule, if you want to make this rule as a IP address based rule (apply the limitation on all traffics from / to the specified IP address / port number), select "None".*
Protocol (8):	*Please select the protocol type of this rule, available options are TCP and UDP. If you don't know what protocol your application uses, please try 'TCP' first, and switch to "UDP" if this rule doesn't seems to work.*

After you finish with all settings, click "Save" (9). You will be brought back to previous menu, and the rule you just set will appear in current QoS table; if you did anything wrong, you'll get an error message when you click "Save", correct your input by the instructions given by the error message.

4-2 Network Address Translation (NAT)

Network address translations solve the problem of sharing a single IP address with multiple computers. Without NAT, all computers must be assigned with a valid Internet IP address to get connected to Internet, but Internet service providers only provide very few IP addresses to every user. Therefore it's necessary to use NAT technology to share a single Internet IP address to multiple computers on local network, so everyone can connect to the Internet.

Please follow these instructions to set NAT parameters:

4-2-1 Basic NAT Settings (Enable or disable NAT function)

Click the 'NAT' tab at the top of web management interface, and the following message will be displayed on your web browser:

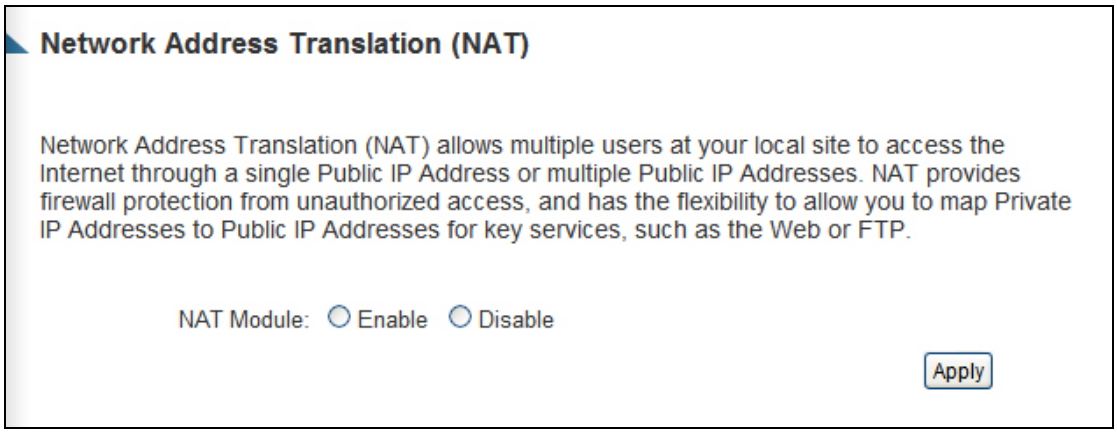
Network Address Translation (NAT)
Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single Public IP Address or multiple Public IP Addresses. NAT provides firewall protection from unauthorized access, and has the flexibility to allow you to map Private IP Addresses to Public IP Addresses for key services, such as the Web or FTP.
NAT Module: Enable Disable
Apply

To enable NAT function, select "Enable" for "Enable NAT module function"; to disable, please select "Disable".

After you have made the selection, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings made and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-2-2 Port Forwarding

This function allows you to redirect a single port or consecutive ports of Internet IP address to the same port of the IP address on local network. The port number(s) of Internet IP address and private IP address (the IP address on local network) must be the same. If the port number of Internet IP address and private IP address is different, please use 'Virtual Server' function, described in next section.

Click the "Apps and Gaming" tab at the top of web management interface, then click "Port Forwarding". The following message will be displayed on your web browser:

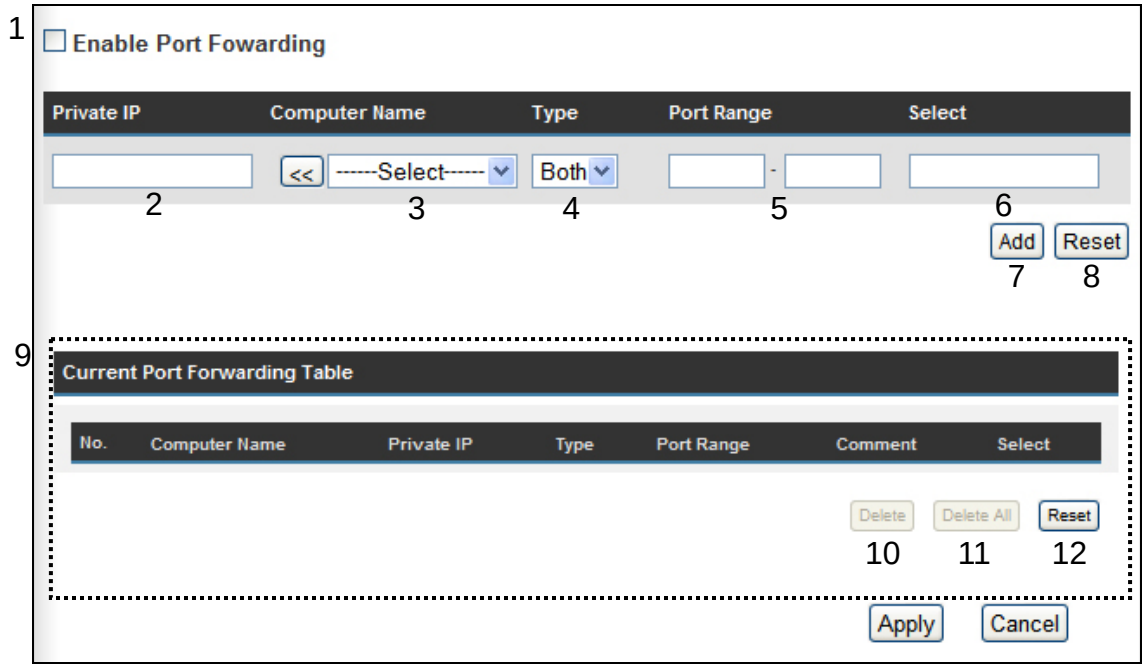

Enable Port Forwarding (1): *Check this box to enable port mapping, and uncheck this box to disable port mapping.*

Private IP (2): *Input the IP address of the computer on local network which provides internet service.*

Computer Name (3): *Pull down the menu and all the computers connected to the Smart Repeater Pro will be listed here. You can easily to select the computer name without checking the IP address of the*

	computer.
Type (4):	*Select the type of connection, TCP or UDP. If you're not sure, please select 'Both'.*
Port Range (5):	*Input the starting port number in the left field, and input the ending port number in the right field. If you only want to redirect a single port number, just fill the port number in the left field.*
Comment (6):	*Please input any text to describe this mapping, up to 16 alphanumerical characters.*
Add (7):	*Add the mapping to port forwarding table.*
Reset (8):	*Remove all inputted values.*
Port Forwarding Table (9):	*All existing port forwarding mappings will be displayed here.*
Delete Selected (10):	*Please select a port forwarding mapping by clicking the "Select" box of the mapping, then click "Delete Selected" button to remove the mapping. If there's no existing mapping, this button will be grayed out.*
Delete All (11):	*Delete all mappings existed in virtual server table.*
Reset (12):	*Unselect all mappings.*

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-2-3 Virtual Server

This function allows you to redirect a port on Internet IP address (on WAN port) to a specified port of an IP address on the local network. This allows you to setup an Internet service on the computer on the local network, without exposing it on the Internet directly. You can also build many sets of port redirections to provide many different Internet services on different local computers via a single Internet IP address.

Click “Apps and Gaming” on top of web management interface, then click “Virtual Server”, and the following message will be displayed on your web browser:

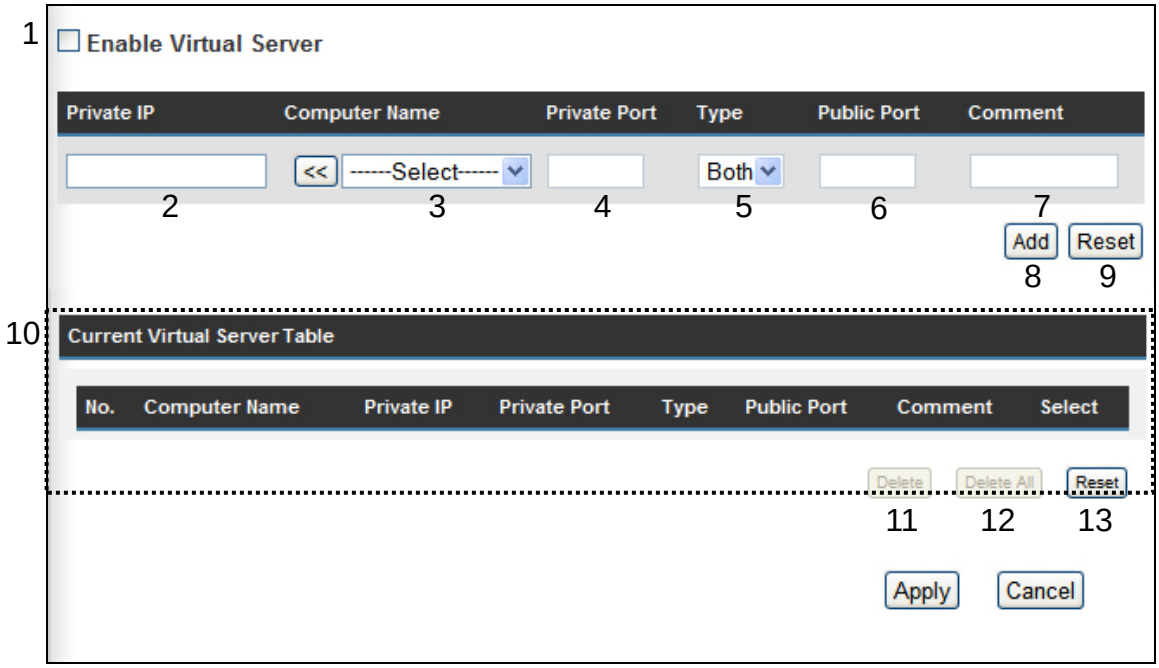

Here are descriptions of every setup items:

Enable Virtual Server (1):	*Check this box to enable virtual server, and uncheck this box to disable virtual server.*
Private IP (2):	*Input the IP address of the computer which provides Internet service.*

Computer Name (3):	*Pull down the menu and all the computers connected to the Smart Repeater Pro will be listed here. You can easily to select the computer name without checking the IP address of the computer.*
Private Port (4):	*Input the port number of the IP address which provides Internet service.*
Type (5):	*Select the type of connection, TCP or UDP. If you're not sure, please select 'Both'.*
Public Port (6):	*Please select the port number of Internet IP address which will be redirected to the port number of local IP address defined above.*
Comment (7):	*Please input any text to describe this mapping, up to 16 alphanumerical characters.*
Add (8):	*Add the mapping to virtual server table.*
Reset (9):	*Remove all inputted values.*
Virtual Server Table (10):	*All existing virtual server mappings will be displayed here.*
Delete Selected (11):	*Please select a virtual server mapping by clicking the "Select" box of the mapping, then click "Delete Selected" button to remove the mapping. If there's no existing mapping, this button will be grayed out.*
Delete All (12):	*Delete all mappings existed in virtual server table.*
Reset (13):	*Unselect all mappings.*

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-2-4 Port Mapping for Special Applications

Some applications require more than one connection at a time; these applications won't work with simple NAT rules. In order to make these applications work, you can use this function to let these applications work. Go to "Apps and Gaming" and click "Special Applications".

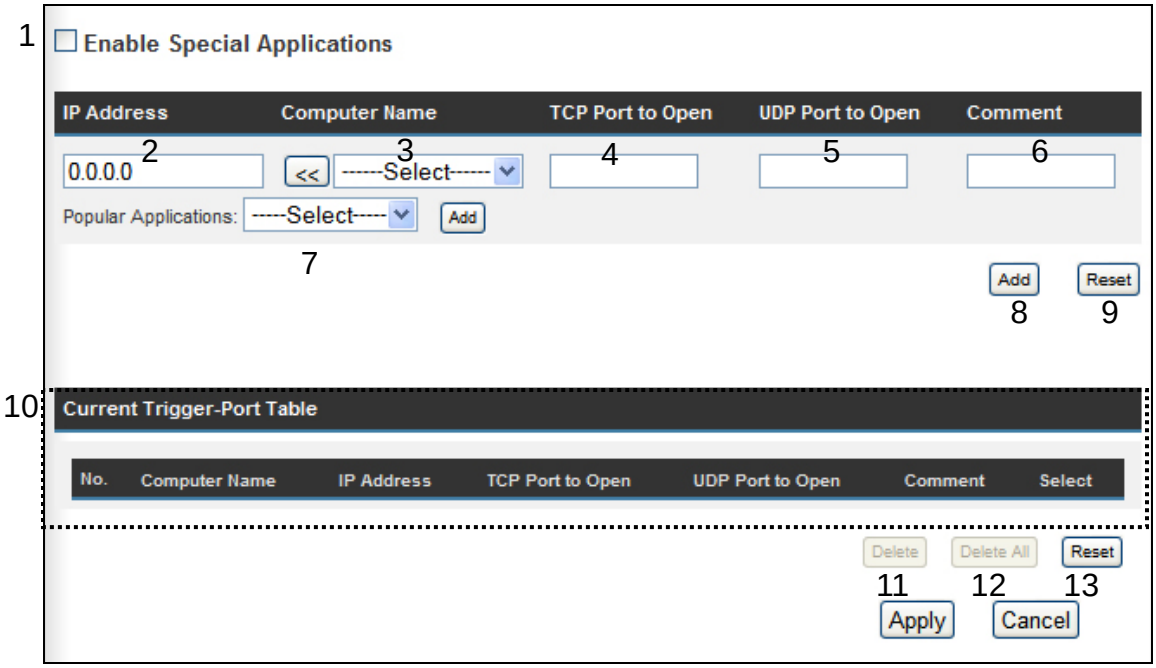

Enable (1): *Check this box to enable special applications and uncheck this box to disable virtual server.*

IP Address (2): *Input the IP address of the computer which you want to open the ports.*

Computer Name (3): *Pull down the menu and all the computers connected to the Smart Repeater Pro will be listed here. You can easily to select the computer name without checking the IP address of the computer.*

TCP Port to Open (4): *This is the out going (Outbound) range of TCP port numbers for*

	this particular application.
UDP Port to Open (5):	*This is the out going (Outbound) range of UDP port numbers for this particular application.*
Comment (6):	*The description of this setting.*
Pop. Applications	*This section lists the more popular applications that (7): require multiple connections. Select an application from the Popular Applications selection and click 'Add' to save the setting to "Current Trigger-Port Table".*
Add (8):	*Add the setting to the "Current Trigger-Port Table".*
Reset (9):	*Click "Reset" will clear all above setting and you can set up again.*
Current Trigger-Port (10):	*All the settings for the special applications will be listed here. If you want to remove some Special Application settings from the "Current Trigger-Port Table", select the Special Application settings you want to remove in the table and then click "Delete Selected". If you want remove all Special Appliacation settings from the table, just click "Delete All" button. Click "Reset" will clear your current selections.*
Delete Selected (11):	*Please select a special application by clicking the 'Select' box of the mapping, then click 'Delete Selected' button to remove the setting. If there's no setting here, this button will be grayed out.*
Delete All (12):	*Delete all settings existed in trigger port table.*

Note: Only one LAN client can use a particular special application at a time.

After you finish with all of your settings, click “Apply” and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-2-5 UPnP Setting

This function enables network auto-configuration for peer-to-peer communications, with this function, network devices will be able to communicate with other devices directly, and learn information about other devices. Many network devices and applications rely on UPnP functions nowadays.

Click “Apps and Gaming” at top of web management interface, then click “UPnP”, and the following message will be displayed on your web browser:

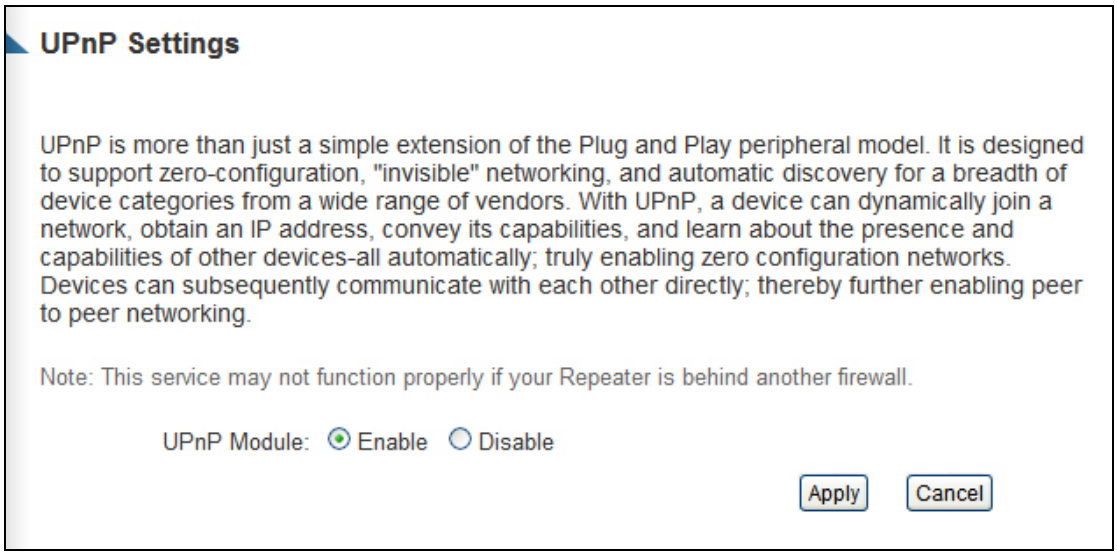
UPnP Settings
UPnP is more than just a simple extension of the Plug and Play peripheral model. It is designed to support zero-configuration, "invisible" networking, and automatic discovery for a breadth of device categories from a wide range of vendors. With UPnP, a device can dynamically join a network, obtain an IP address, convey its capabilities, and learn about the presence and capabilities of other devices-all automatically; truly enabling zero configuration networks. Devices can subsequently communicate with each other directly; thereby further enabling peer to peer networking.
Note: This service may not function properly if your Repeater is behind another firewall.
UPnP Module: Enable Disable
Apply
Cancel

There is only one option in this page, select “Enable” or “Disable” to enable or disable UPnP function. Click “Apply”, and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will

take effect after it reboots.

4-2-6 ALG Settings

Application Layer Gateway (ALG) is a special function of this Smart Repeater Pro. It includes many preset routing rules for numerous applications which require special support. With these supports, those applications which required special support will be able to work with NAT architecture.

Click the “Apps and Gaming” tab at the top of web management interface, then click “ALG Settings”, and the following message will be displayed on your web browser:

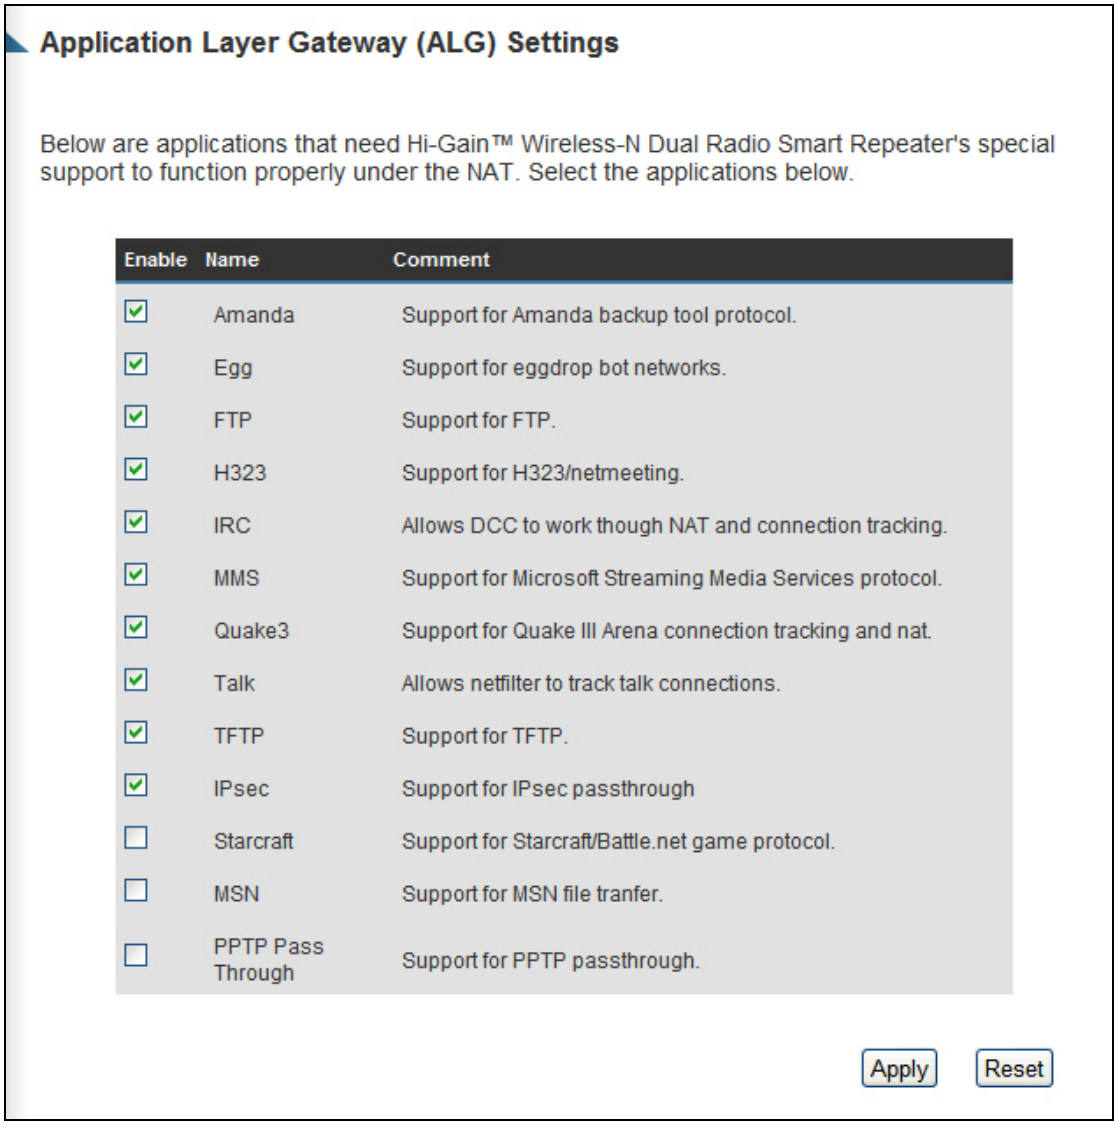

There are many applications listed here. Check the box for the special support for applications you need, and then click “Apply” and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-3 Firewall

Besides NAT, this Smart Repeater Pro also provides firewall function to block malicious intruders from accessing your computers on local network. These functions include inbound attack prevention and blocking outbound traffic, like URLs which have pre-defined keywords.

Please follow these instructions to enable or disable firewall function:

Click “Security” tab at top of web management interface, and the following message will be displayed on your web browser:

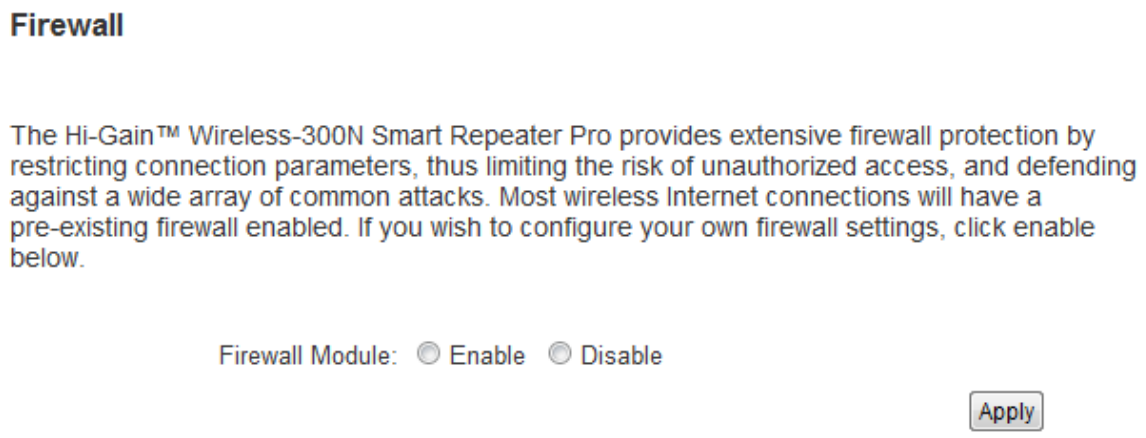
Firewall
The Hi-Gain™ Wireless-300N Smart Repeater Pro provides extensive firewall protection by restricting connection parameters, thus limiting the risk of unauthorized access, and defending against a wide array of common attacks. Most wireless Internet connections will have a pre-existing firewall enabled. If you wish to configure your own firewall settings, click enable below.
Firewall Module: Enable Disable
Apply

Please select “Enable” or “Disable” to enable or disable firewall function of this Smart Repeater Pro, then click “Apply”, and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings made and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-3-1 Access Control

This function allows or denies computers with specific MAC address from connecting to the network; it can also allow or deny computers with specific IP address, protocol, or port.

Click “Security” tab at the top of web management interface, then click “Access Control”, and the following message will be displayed on your web browser:

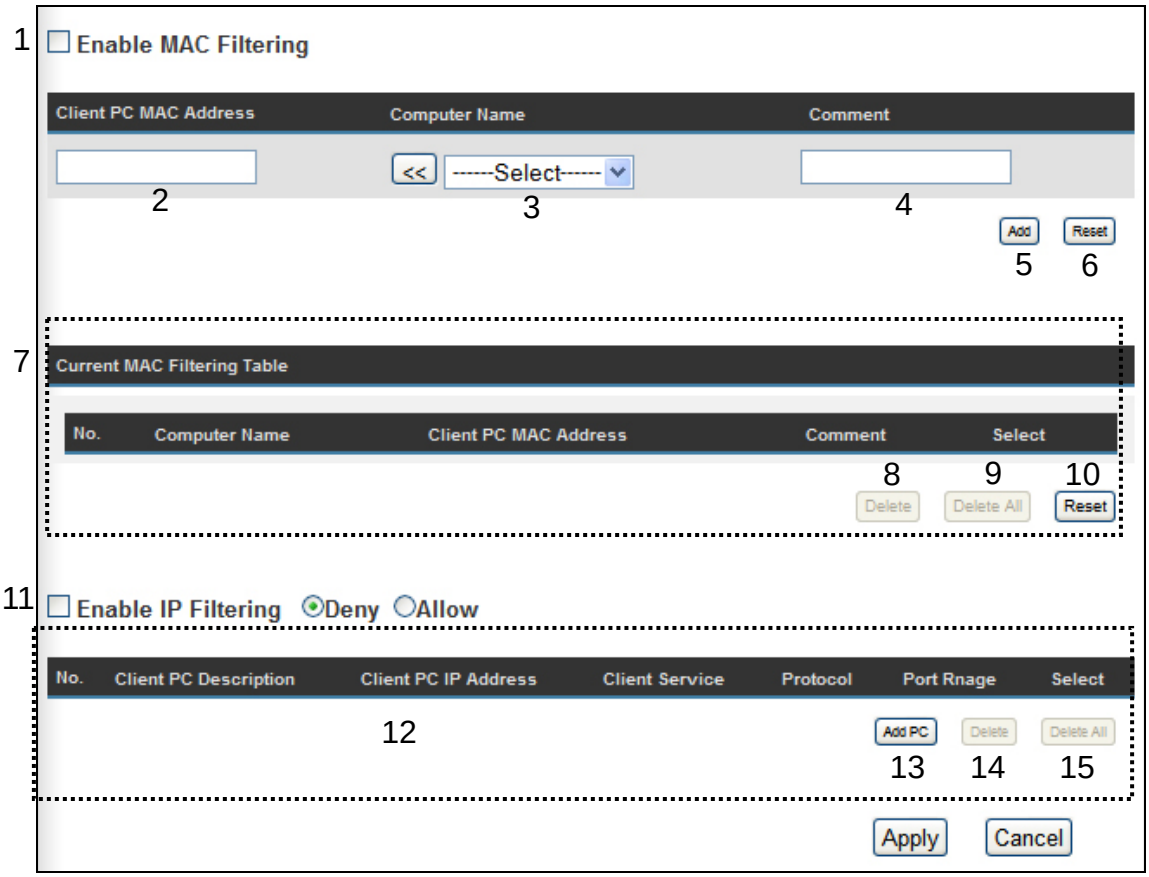

Enable MAC Filtering (1): *Check this box to enable MAC address based filtering, and please select “Deny” or “Allow” to decide the behavior of MAC filtering table. If you select deny, all MAC addresses listed in filtering table will be denied from connecting to the network; if you select allow, only MAC addresses listed in filtering table will be able to connect to the network, and rejecting all*

other network devices.

Client PC MAC address (2):	*Please input the MAC address of computer or network device here, dash (-) or colon (:) are not required. (i.e. If the MAC address label of your wireless device indicates "aa-bb-cc-dd-ee-ff" or "aa:bb:cc:dd:ee:ff", just input "aabbccddeeff"*
Computer Name (3):	*Pull down the menu and all the computers connected to the Smart Repeater Pro will be listed here. You can easily to select the computer name without checking the IP address of the computer.*
Comment (4):	*You can input any text here as the comment of this MAC address, like "ROOM 2A Computer" or anything. You can input up to 16 alphanumerical characters here. This is optional and you can leave it blank, however, it's recommended to use this field to write a comment for every MAC addresses as a memory aid.*
Add (5):	*Click "Add" button to add the MAC address and associated comment to the MAC address filtering table.*
Reset (6):	*Remove all inputted values.*
MAC Filtering Table (7):	*All existing MAC addresses in filtering table will be listed here.*
Delete Selected (8):	*If you want to delete a specific MAC address entry, check the "select" box of the MAC address you want to delete, then click "Delete Selected" button. (You can select more than one MAC addresses).*
Delete All (9):	*If you want to delete all MAC addresses listed here, please click "Delete All" button.*
Reset (10):	*You can also click "Reset" button to unselect all MAC*

	addresses.
Enable IP Filtering Table (11):	*Check this box to enable IP address based filtering, and please select "Deny" or "Allow" to decide the behavior of IP filtering table. If you select deny, all IP addresses listed in filtering table will be denied from connecting to the network; if you select allow, only IP addresses listed in filtering table will be able to connect to the network, and rejecting all other network devices.*
IP Filtering Table (12):	*All existing IP addresses in filtering table will be listed here.*
Add PC (13):	*Click this button to add a new IP address to IP filtering table, up to 20 IP addresses can be added.* *Please refer to section 4-3-1-1 "Add PC" below.*
Delete Selected (14):	*If you want to delete a specific IP address entry, check the "select" box of the IP address you want to delete, then click "Delete Selected" button. (You can select more than one IP addresses).*
Delete All (15):	*If you want to delete all IP addresses listed here, please click "Delete All" button.*

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press "Go Back" to save the settings and go back to the web management interface; press

“Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-3-1-1 Add PC

After button is clicked, the following message will be displayed on your web browser:

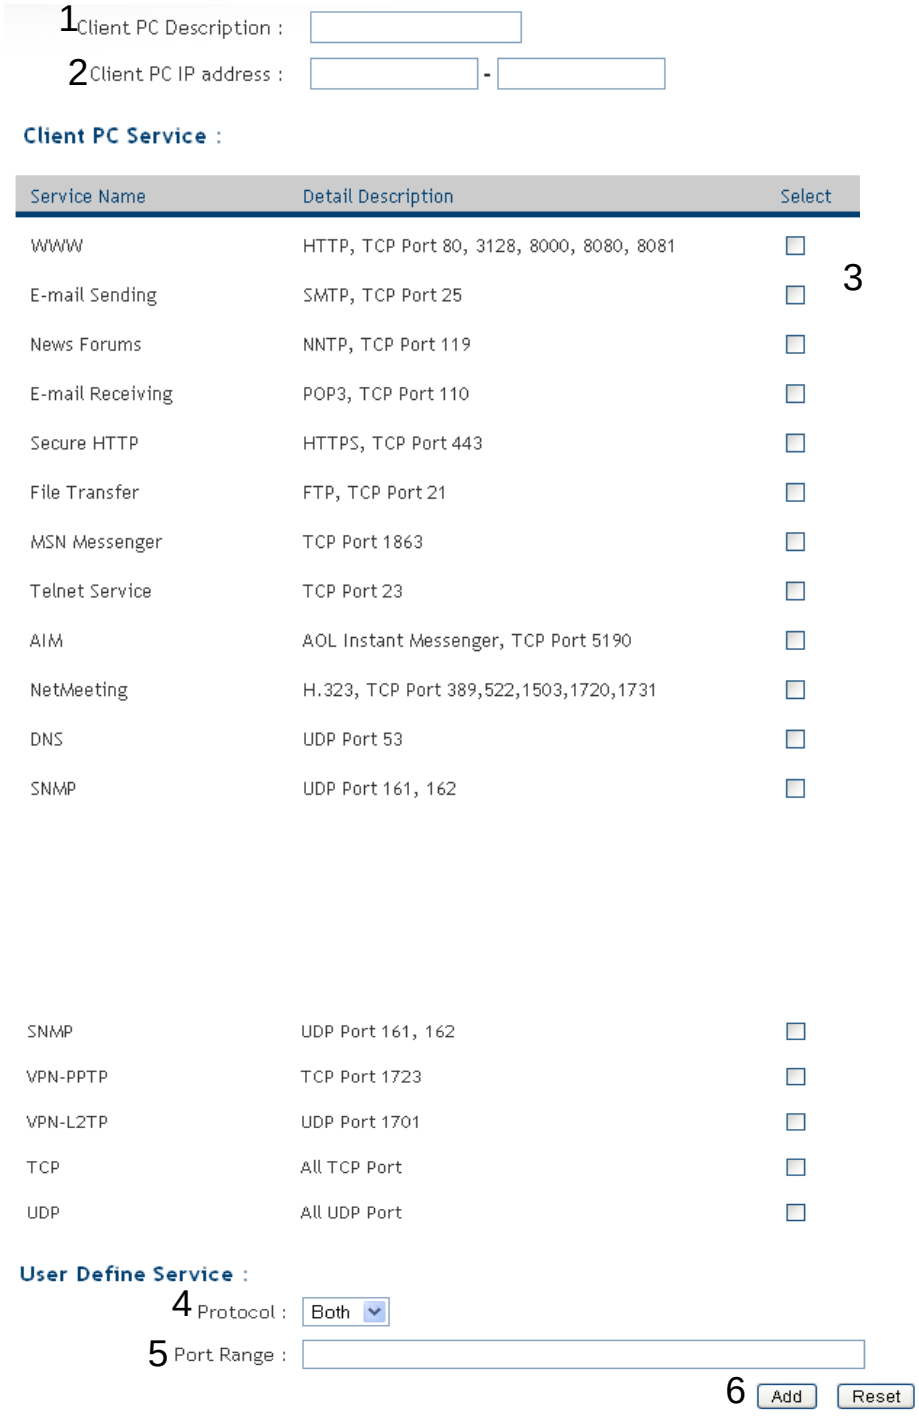

Client PC Description (1):	*Please input any text to describe this IP address, up to 16 alphanumerical characters.*

Client PC IP address (2):	*Please input the starting IP address in the left field, and input the end IP address in the right field to define a range of IP addresses, or just input the IP address in the left field to define a single IP address.*
Client PC Service (3):	*Please check all services you want to allow or deny this IP address to use, you can check multiple services.*
Protocol (4):	*If the service you need is not listed above, you can create a new service on your own. Please select TCP or UDP, if you're not sure, please select "Both".*
Port Range (5):	*Please input the port range of new service here. If you want to specify port 80 to 90, please input "80-90"; if you want to apply this rule on a single port, just input the port number, like "80".*
Add (6):	*When you finish with all settings, please click "Add" to save settings, you'll be brought back to previous menu, and the rule you just set will appear in current IP filtering table.*

If you want to remove all settings on this page, click the "Reset" button.

4-3-2 URL Blocking

If you want to prevent computers in a local network from accessing certain websites (like pornography, violence, or anything you wish to block), you can use this function to stop computers in a local network from accessing the site you define here.

This function is useful for parents and company managers.

Follow these instructions to set URL blocking parameters:
Please click “Security” tab at top of web management interface, then click “URL Blocking”, and the following message will be displayed on your web browser:

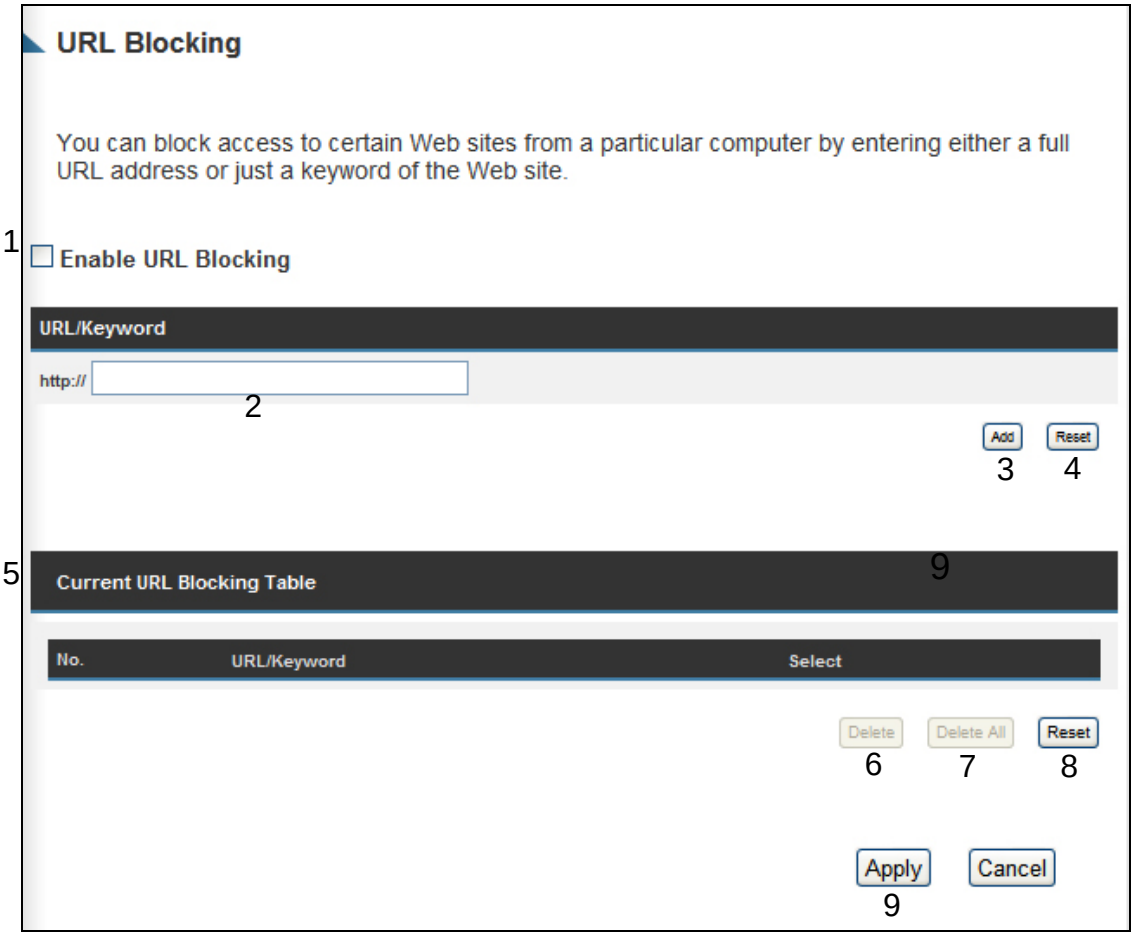

Here are descriptions of every setup items:

Enable URL	*Check this box to enforce URL Blocking,*

Blocking (1):	*uncheck it to disable URL Blocking.*
URL/Keyword (2):	*Input the URL (host name or IP address of website, like http://www.blocked-site.com or http://11.22.33.44), or the keyword which is contained in URL (like pornography, cartoon, stock, or anything).*
Add (3):	*Click 'Add' button to add the URL / keyword to the URL / Keyword filtering table.*
Reset (4):	*Click 'Reset' to remove the value you inputted in URL/Keyword field.*
Current URL Blocking Table (5):	*All existing URL/Keywords in filtering table will be listed here.*
Delete Selected (6):	*If you want to delete a specific URL/Keyword entry, check the "select" box of the MAC address you want to delete, then click "Delete Selected" button. (You can select more than one MAC addresses).*
Delete All (7):	*If you want to delete all URL/Keyword listed here, please click "Delete All" button.*
Reset (8):	*You can also click "Reset" button to unselect all URL/Keywords.*

After you finish with all of your settings, click "Apply", and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-3-3 DoS Attack Prevention

Denial of Service (DoS) is a common attack measure, by transmitting a great amount of data or request to your Internet IP address and server, the Internet connection will become very slow, and server may stop responding because it is not capable of handling too much traffic.

This Smart Repeater Pro has a built-in DoS attack prevention mechanism; when you activate it, the Smart Repeater Pro will stop the DoS attack for you.

Please follow these instructions to set DoS prevention parameters:

Click the “Security” tab at the top of web management interface, then click “DoS”, and the following message will be displayed on your web browser:

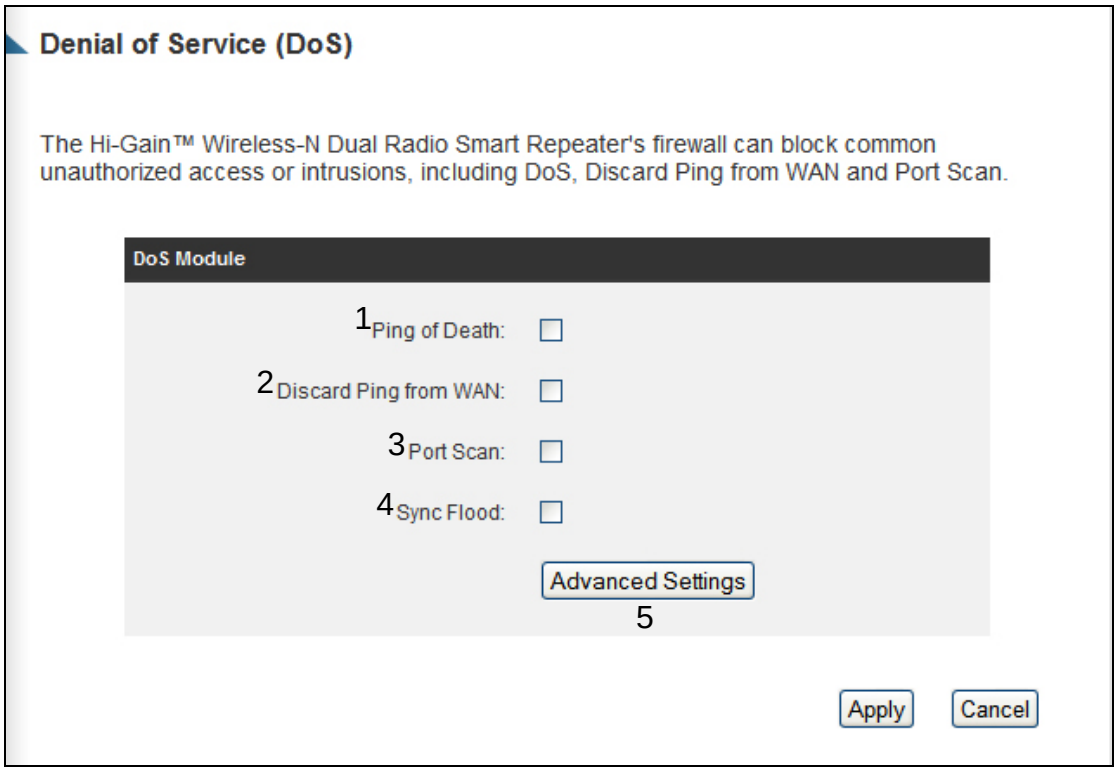
Denial of Service (DoS)
The Hi-Gain™ Wireless-N Dual Radio Smart Repeater's firewall can block common unauthorized access or intrusions, including DoS, Discard Ping from WAN and Port Scan.
DoS Module
1 Ping of Death:
2 Discard Ping from WAN:
3 Port Scan:
4 Sync Flood:
Advanced Settings
5
Apply
Cancel

Ping of Death (1): *Ping of Death is a special packet, and it will cause certain computer to stop responding. Check this box and the Smart*

	Repeater Pro will filter this kind of packet out.
Discard Ping From WAN (2):	*Ping is a common and useful tool to know the connection status of a specified remote network device, but some malicious intruder will try to fill your network bandwidth with a lot of PING request data packet, to make your internet connection become very slow, even unusable. Check this box and the Smart Repeater Pro will ignore all inbound PING request, but when you activate this function, you will not be able to ping your own Smart Repeater Pro from internet, too.*
Port Scan (3):	*Some malicious intruder will try to use a 'port scanner' to know how many ports of your Internet IP address are open, and they can collect a lot of valuable information by doing so. Check this box and the Smart Repeater Pro will block all traffics which are trying to scan your Internet IP address.*
Sync Flood (4):	*This is another kind of attack, which uses a lot of fake connection request to consume the memory of your server, and try to make your server become unusable. Check this box and the Smart Repeater Pro will filter this kind of traffic out.*
Advanced Settings (5):	*Click this button and you can set advanced settings of the DoS prevention method listed above, please see section 4-3-3-1 'DoS – Advanced Settings' below.*

After you finish with all of your settings, click "Apply" and the following message will be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-3-3-1 DoS - Advanced Settings

When you click “Advanced” in DoS menu, the following message will be displayed on your web browser:

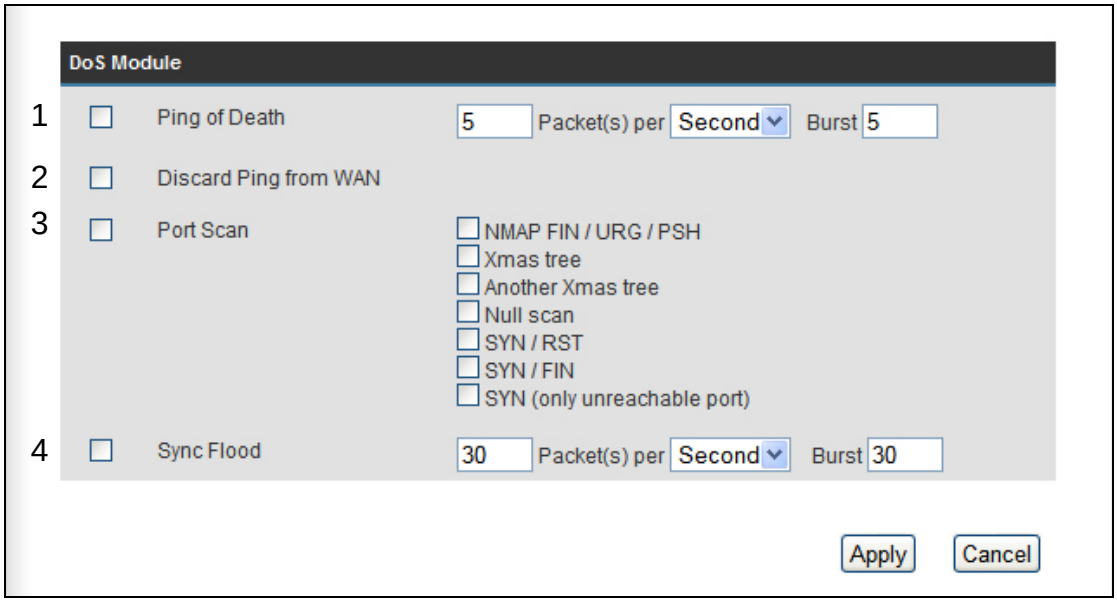

Ping of Death (1): *Set the threshold of when this DoS prevention mechanism will be activated. Please check the box of Ping of Death, and input the frequency of threshold (how many packets per second, minute, or hour), you can also input the “Burst” value, which means when this number of “Ping of Death” packet is received in very short time, this DoS prevention mechanism will be activated.*

Discard Ping From WAN (2): *Check the box to activate this DoS prevention mechanism.*

Port Scan (3): *Many kind of port scan methods are listed here, please check one or more DoS attack methods you want to prevent.*

Sync Flood (4): *Like Ping of Death, you can set the threshold of when this DoS prevention mechanism will be activated.*

After you finish with all of your settings, click “Apply” and the following message will

be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-3-4 Demilitarized Zone (DMZ)

Demilitarized Zone (DMZ) refers to a special area in your local network. This area resides in the local network, and all computers in this area use private IP addresses, too. But these private IP addresses are mapped to a certain Internet IP address, so other people on the Internet can fully access those computers in the DMZ.

Please follow the instructions to set DMZ parameters:

Click the “Security” tab at the top of web management interface, then click “DMZ”, and the following message will be displayed on your web browser:

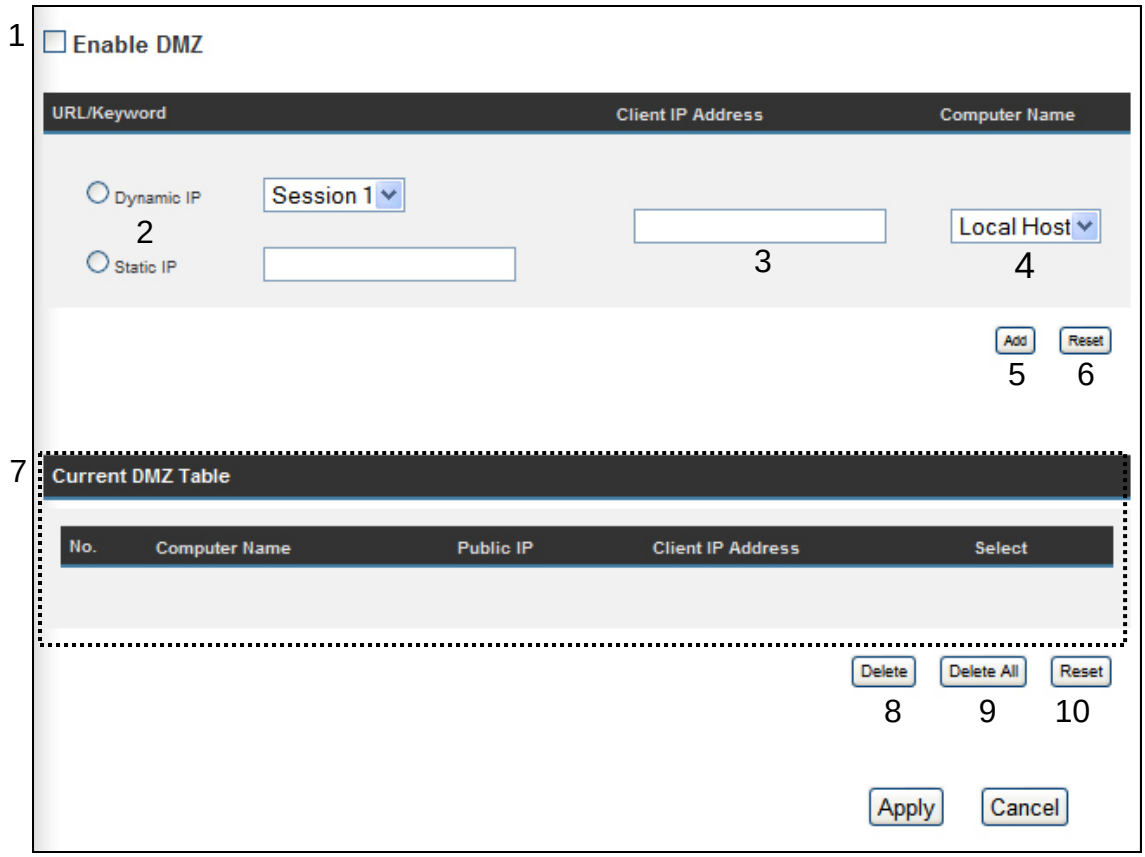

Enable DMZ (1): *Check this box to enable DMZ function, uncheck this box to disable DMZ function.*

Public IP address (2):	*You can select 'Dynamic IP' or 'Static IP' here. If you select 'Dynamic IP', you have to select an Internet connection session from dropdown menu; if you select 'Static IP', please input the IP address that you want to map to a specific private IP address.*
Client PC IP address (3):	*Please input the private IP address that the Internet IP address will be mapped to.*
Computer Name (4):	*Pull down the menu and all the computers connected to the Smart Repeater Pro will be listed here. You can easily to select the computer name without checking the IP address of the computer.*
Add (5):	*Click 'Add' button to add the public IP address and associated private IP address to the DMZ table.*
Reset (6):	*Click 'Clear' to remove the value you inputted in Public IP address and Client PC IP address field.*
Current DMZ table (7):	*All existing public IP address and private IP address mapping will be displayed here.*
Delete Selected (8):	*If you want to delete a specific DMZ entry, check the 'select' box of the DMZ entry you want to delete, then click 'Delete Selected' button. (You can select more than one DMZ entries).*
Delete All (9):	*If you want to delete all DMZ entries listed here, please click 'Delete All' button.*
Reset (10):	*You can also click 'Reset' button to unselect all DMZ entries.*

After you finish with all of your settings, click "Apply" and the following message will

be displayed on your web browser:

Settings Saved Successfully!
You may press Go Back button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.
Go Back
Apply

Press “Go Back” to save the settings and go back to the web management interface; press “Apply” to save the settings made and restart the Smart Repeater Pro. The settings will take effect after it reboots.

4-4 System Status

The functions described here will provide you with system related information. To enter system status menu, either click “Status” link located at the upper-right corner of web management interface, or click “Status” button in main menu.

4-4-1 System information and firmware version

You can use this function to know the system information and firmware version of this Smart Repeater Pro.

Click the “Status” link located at the upper-right corner of web management interface, and the following message will be displayed on your web browser

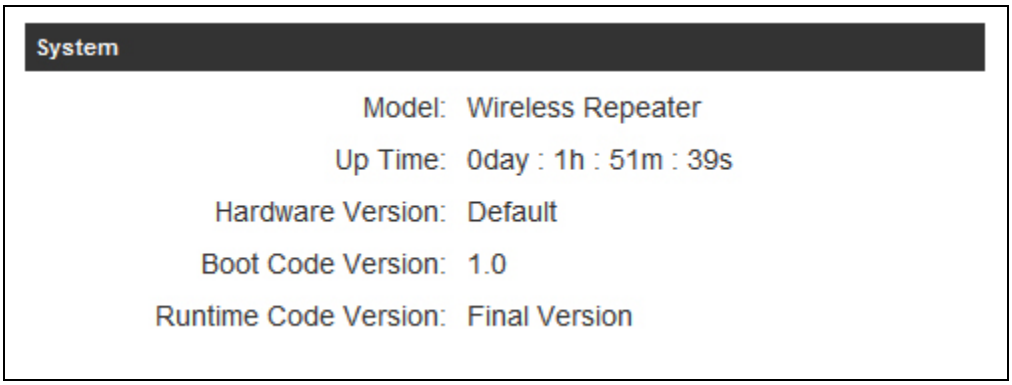
System
Model: Wireless Repeater
Up Time: 0day : 1h : 51m : 39s
Hardware Version: Default
Boot Code Version: 1.0
Runtime Code Version: Final Version

NOTE: Information displayed here may vary.

4-4-2 Internet Connection Status

You can use this function to view the status of your current Internet connection.

Click ‘Status’ menu at the top of web management interface, then select ‘Internet Connection’ from the left hand menu and the following message will be displayed:

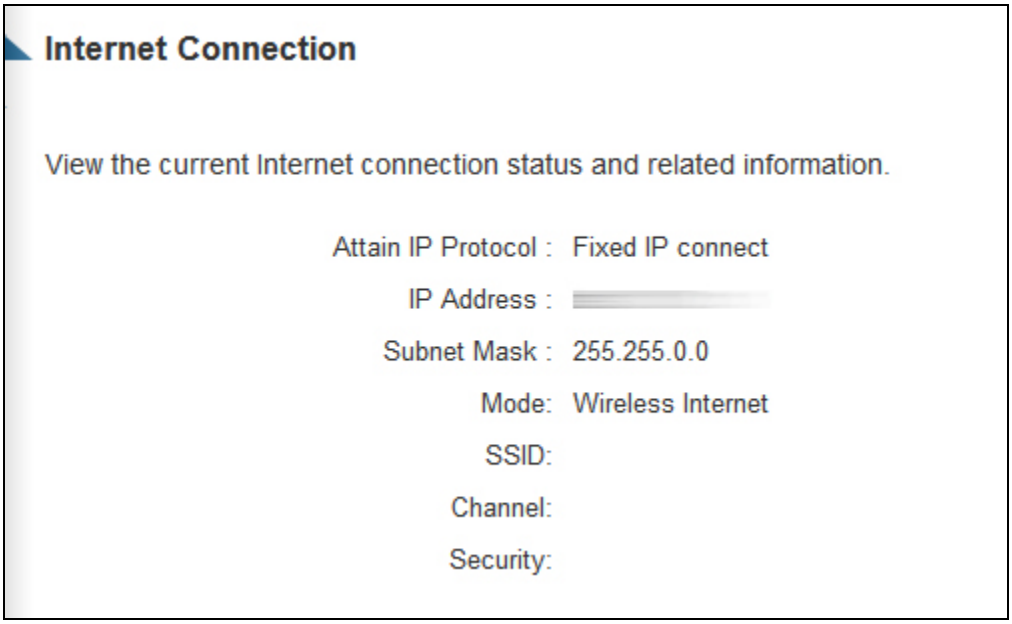

This information will vary depending on the connection status and the type of internet connection that you are using. It will provide IP information, the Internet connection mode (i.e. wired or wireless) as well as the details of a wireless connection.

4-4-3 Home Network

The Home Network status page displays information regarding your local wireless home network and your wired home network. It will display the SSID of your home wireless network as well as the LAN IP settings of your home wired network.

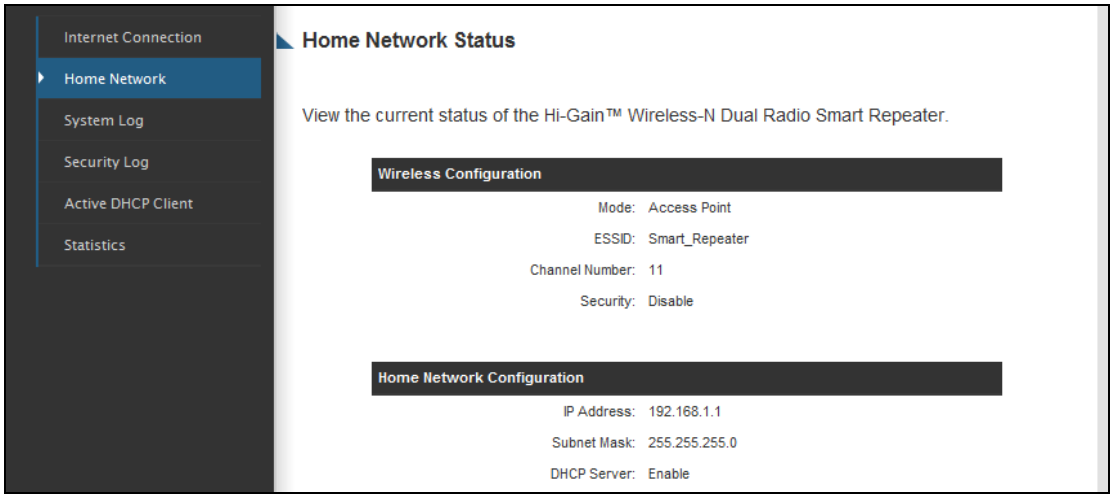

This information will vary depending on the device status.

4-4-4 System Log

Important system events are logged here. You can use this function to check the event log of your Smart Repeater Pro.

Click the “System Log” tab at the top of web management interface, and the following will be displayed on your web browser:

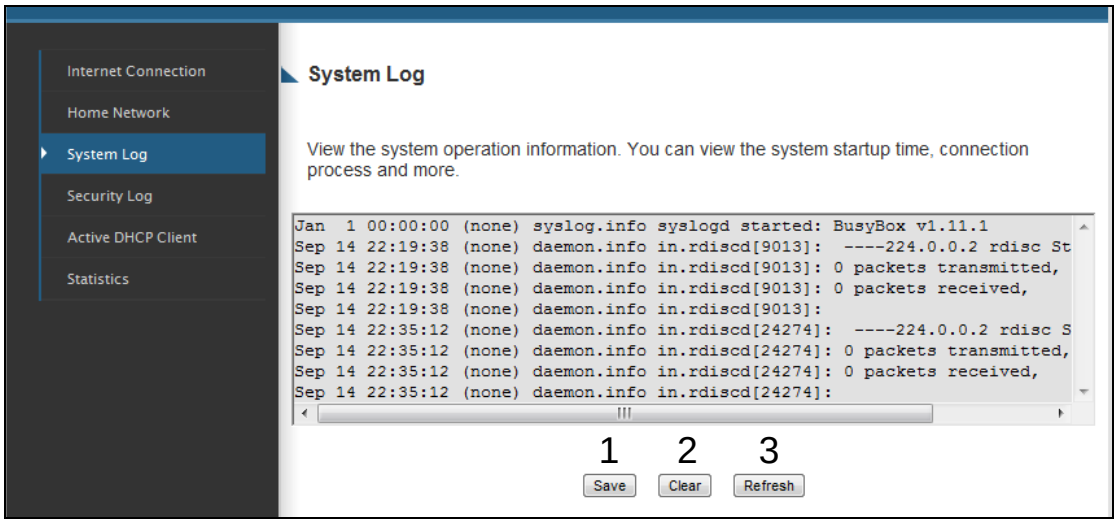
Internet Connection
Home Network
System Log
Security Log
Active DHCP Client
Statistics
System Log
View the system operation information. You can view the system startup time, connection process and more.
Jan 1 00:00:00 (none) syslog.info syslogd started: BusyBox v1.11.1
Sep 14 22:19:38 (none) daemon.info in.rdiscd[9013]: ----224.0.0.2 rdisc St
Sep 14 22:19:38 (none) daemon.info in.rdiscd[9013]: 0 packets transmitted,
Sep 14 22:19:38 (none) daemon.info in.rdiscd[9013]: 0 packets received,
Sep 14 22:19:38 (none) daemon.info in.rdiscd[9013]:
Sep 14 22:35:12 (none) daemon.info in.rdiscd[24274]: ----224.0.0.2 rdisc S
Sep 14 22:35:12 (none) daemon.info in.rdiscd[24274]: 0 packets transmitted,
Sep 14 22:35:12 (none) daemon.info in.rdiscd[24274]: 0 packets received,
Sep 14 22:35:12 (none) daemon.info in.rdiscd[24274]:
1
2
3
Save
Clear
Refresh

The system events will be displayed in this page, and here are descriptions of every buttons:

Save (1):	*Save current event log to a text file.*
Clear (2):	*Delete all event logs displayed here.*
Refresh (3):	*Refresh the event log display.*

4-4-5 Security Log

Information regarding your network and system security is kept here. You may use this function to check the security event log of your Smart Repeater Pro.

Click the “Security Log” tab at the top of web management interface, and the following message will be displayed on your web browser:

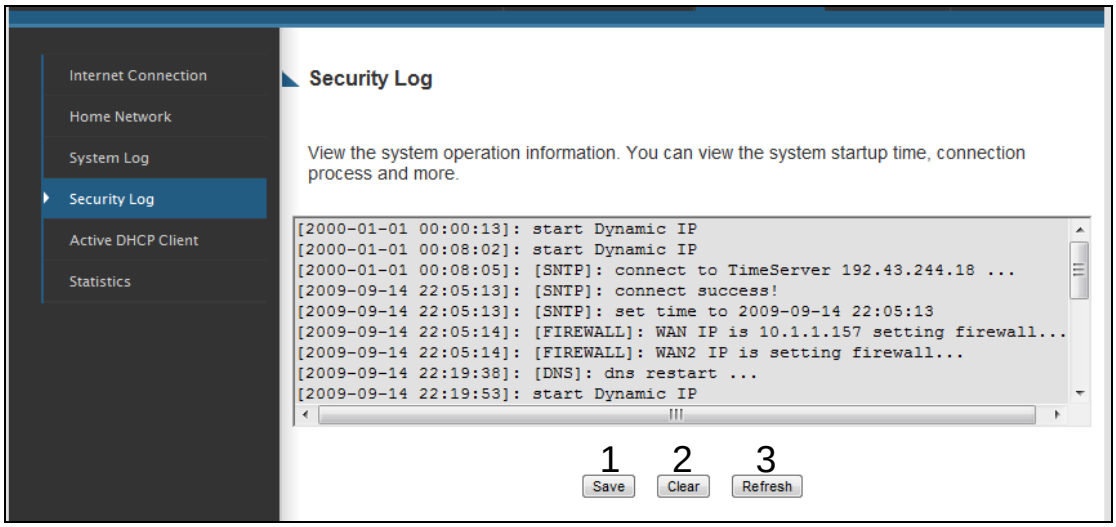
Internet Connection
Home Network
System Log
Security Log
Active DHCP Client
Statistics
Security Log
View the system operation information. You can view the system startup time, connection process and more.
[2000-01-01 00:00:13]: start Dynamic IP
[2000-01-01 00:08:02]: start Dynamic IP
[2000-01-01 00:08:05]: [SNTP]: connect to TimeServer 192.43.244.18 ...
[2009-09-14 22:05:13]: [SNTP]: connect success!
[2009-09-14 22:05:13]: [SNTP]: set time to 2009-09-14 22:05:13
[2009-09-14 22:05:14]: [FIREWALL]: WAN IP is 10.1.1.157 setting firewall...
[2009-09-14 22:05:14]: [FIREWALL]: WAN2 IP is setting firewall...
[2009-09-14 22:19:38]: [DNS]: dns restart ...
[2009-09-14 22:19:53]: start Dynamic IP
1
2
3
Save
Clear
Refresh

The system events will be displayed in this page:

Save (1):	*Save current event log to a text file.*
Clear (2):	*Delete all event logs displayed here.*
Refresh (3):	*Refresh the event log display.*

4-4-5 Active DHCP client list

If you're using the DHCP server function of this Smart Repeater Pro, you can use this function to check all active DHCP leases issued by this Smart Repeater Pro.

Click the "Active DHCP client" tab at the top of web management interface, and the following message will be displayed on your web browser:

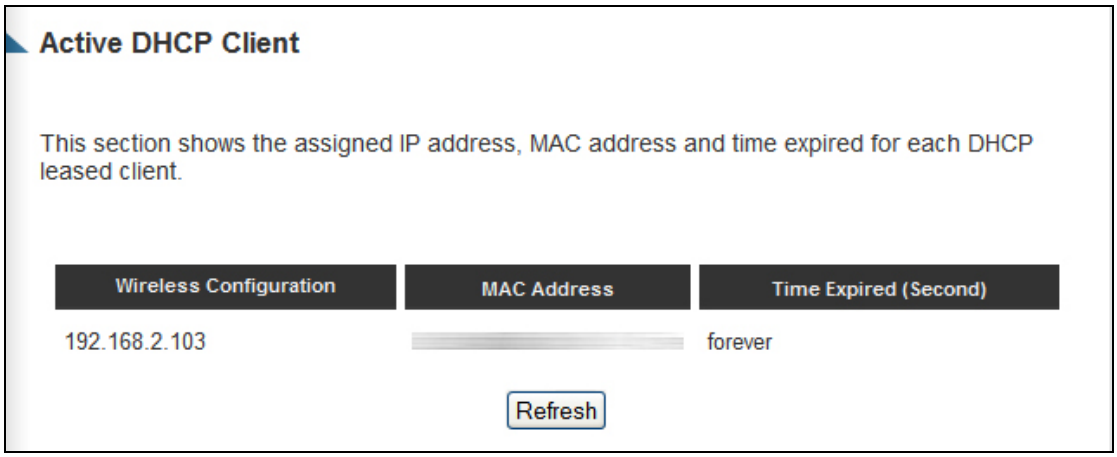

All information about active DHCP leases issued by this Smart Repeater Pro will be displayed here. You can click "Refresh" button to display latest information.

4-4-6 Statistics

You can use this function to check the statistics of wireless, LAN, and WAN interface of this Smart Repeater Pro.

Click the “Statistics” tab at the top of web management interface, and the following message will be displayed on your web browser:

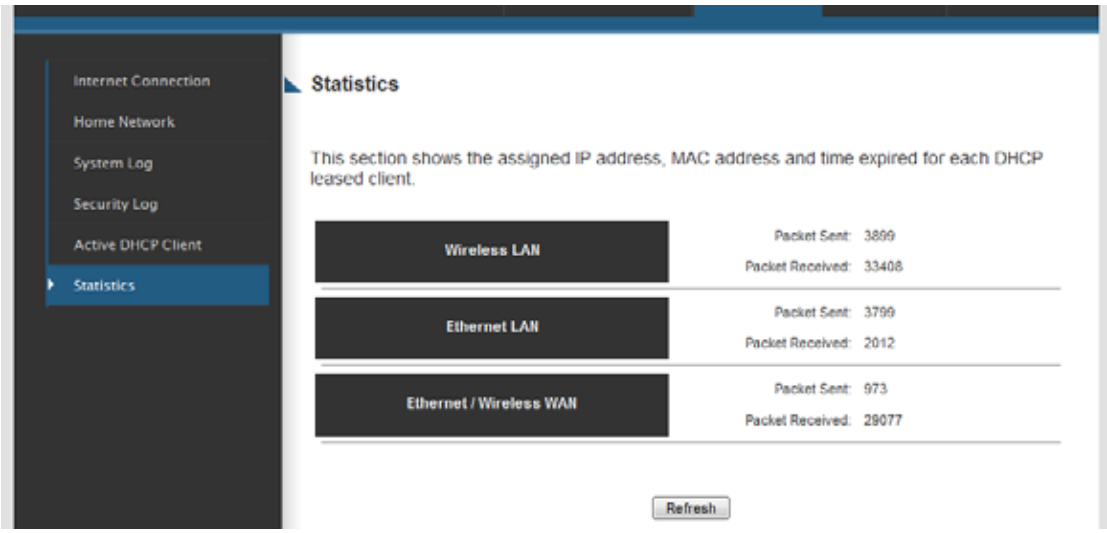

You can click “Refresh” button to display latest information.

4-5 Configuration Backup and Restore

You can backup all configurations of this Smart Repeater Pro to a file, so you can make several copies of Smart Repeater Pro configuration for security reasons.

To backup or restore a Smart Repeater Pro configuration, follow these instructions:

Click the “Admin” tab located at the upper-right of web management interface, then click “Configuration Tools”. The following message will be displayed on your web browser:

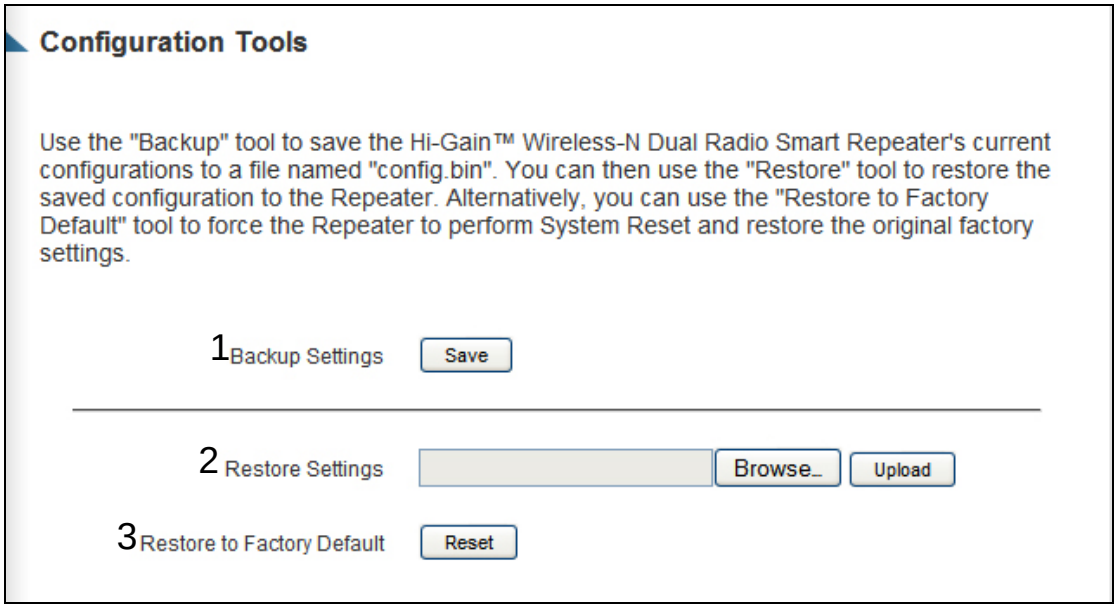
Configuration Tools
Use the "Backup" tool to save the Hi-Gain™ Wireless-N Dual Radio Smart Repeater's current configurations to a file named "config.bin". You can then use the "Restore" tool to restore the saved configuration to the Repeater. Alternatively, you can use the "Restore to Factory Default" tool to force the Repeater to perform System Reset and restore the original factory settings.
1 Backup Settings
Save
2 Restore Settings
Browse...
Upload
3 Restore to Factory Default
Reset

Backup Settings (1):	*Press “Save”, and you will be prompted to download the configuration as a file, default filename is “default.bin”, you can please save it as another filename for different versions, and keep it in a safe place.*
Restore Settings (2):	*Press “Browse” to pick a previously-saved configuration file from your computer, and then click “Upload” to transfer the configuration file to Smart Repeater Pro. After the configuration is uploaded, the Smart Repeater Pro’s configuration will be replaced by the file you just uploaded.*

Restore to Factory Default (3):	*Press "Reset" to remove all settings you made, and restore the configuration of this Smart Repeater Pro back to factory default settings.*

4-6 Firmware Upgrade

The system software used by this Smart Repeater Pro is known as 'firmware', just like any applications on your computer, when you replace the old application with a new one; your hardware will be equipped with new functions. You can also use this firmware upgrade to add new functions to your Smart Repeater Pro, even fix the bugs on this Smart Repeater Pro.

To upgrade firmware, follow these instructions:

Check what version of the firmware you have. Refer to Section 4-4. It will be the "Runtime Code Version". Go to www.hawkingtech.com to check what the latest firmware version is. If your current version is older than the one on our website, download the firmware file, save it to your computer and proceed with the following steps.

Please click "Admin" tab located at the upper-right corner of web management interface, then click "Firmware Upgrade". The following message will be displayed on your web browser:

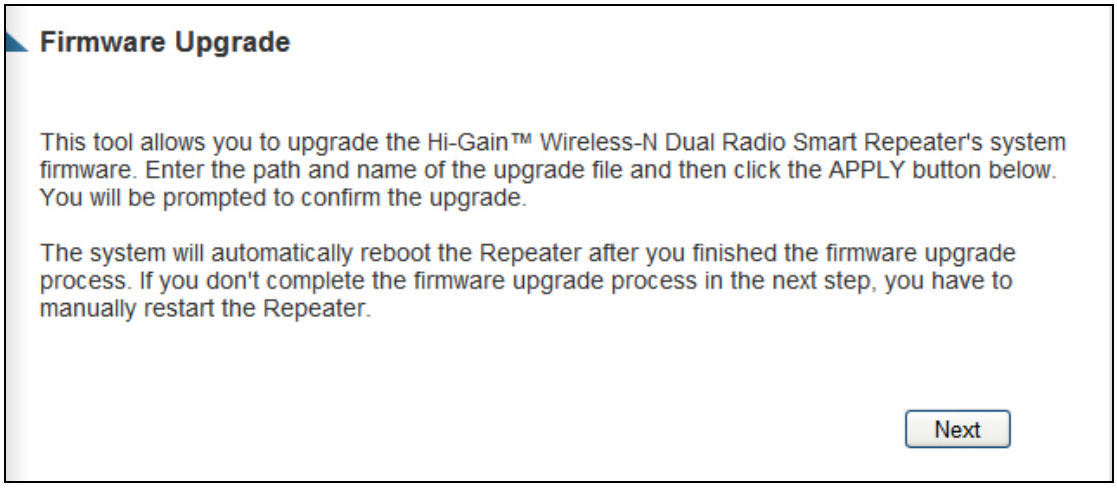
Firmware Upgrade
This tool allows you to upgrade the Hi-Gain™ Wireless-N Dual Radio Smart Repeater's system firmware. Enter the path and name of the upgrade file and then click the APPLY button below. You will be prompted to confirm the upgrade.
The system will automatically reboot the Repeater after you finished the firmware upgrade process. If you don't complete the firmware upgrade process in the next step, you have to manually restart the Repeater.
Next

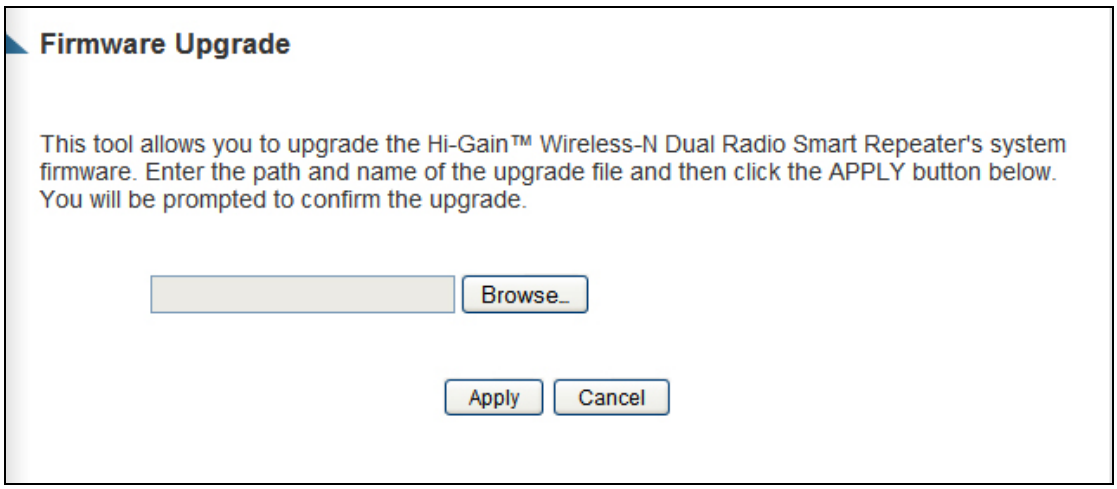
Firmware Upgrade
This tool allows you to upgrade the Hi-Gain™ Wireless-N Dual Radio Smart Repeater's system firmware. Enter the path and name of the upgrade file and then click the APPLY button below. You will be prompted to confirm the upgrade.
Browse...
Apply
Cancel

Click “Browse” first, you’ll be prompted to provide the filename of the firmware upgrade file. Choose the file you downloaded earlier.

After a firmware upgrade file is selected, click “Apply”, and the Smart Repeater Pro will start firmware upgrade procedure automatically. The procedure may take several minutes, please be patient.

NOTE: Never interrupt the upgrade procedure by closing the web browser or physically disconnecting your computer from Smart Repeater Pro. If the firmware you uploaded is corrupt, the firmware upgrade will fail, and you may have to return this Smart Repeater Pro to the dealer of purchase to ask for help. (Warranty is void if you interrupt the upgrade procedure).

4-7 System Reboot

If you think you network performance is bad, or you find the behavior of the Smart Repeater Pro is strange, you can perform a Smart Repeater Pro reboot. It may solve the problem.

To do so, click the “Tools” tab located at the upper-right corner of web management interface, then click “Reboot:” The following message will be displayed on your web browser:

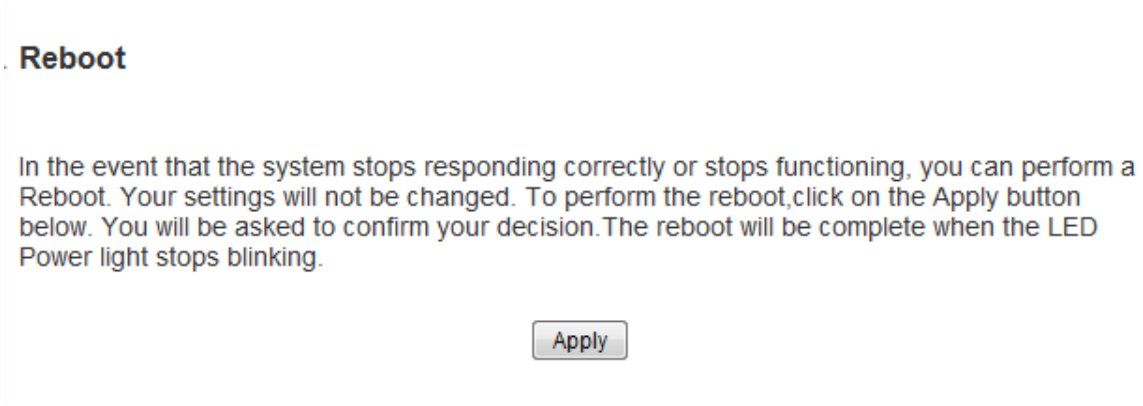
Reboot
In the event that the system stops responding correctly or stops functioning, you can perform a Reboot. Your settings will not be changed. To perform the reboot,click on the Apply button below. You will be asked to confirm your decision.The reboot will be complete when the LED Power light stops blinking.
Apply

Click “Apply” to reboot your Smart Repeater Pro, and it will be available again after a few minutes, please be patient.

4-8 Using the Support Utility

The Smart Repeater Pro Support Utility is used to help troubleshoot a connection or easily access the basic configuration settings of the Smart Repeater Pro without having to log into the web interface. This Utility may often be used in conjunction with support calls from our support department or by the user when on site or for quick configuration purposes.

To run the support utility, insert the CD into your computer's CD rom and click on "Software Utility". Note: this utility only supports Windows operating systems. If your computer prompts you, please allow the program through your firewall.

Click on SCAN to locate the Smart Repeater Pro you wish to configure. Once selected click ‘CONNECT’ to connect to the Repeater.

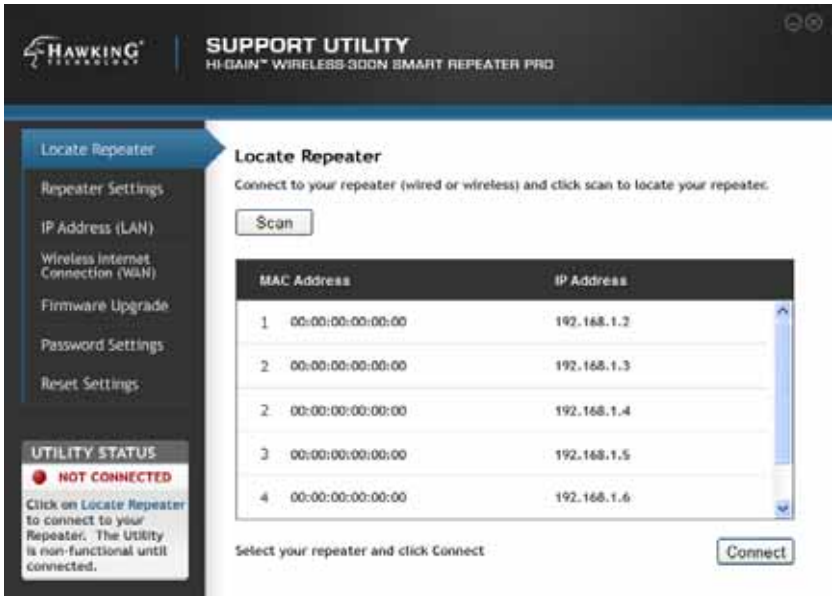

Note: before making any configurations on the Utility, you MUST be connected to a Repeater. The status of the Utility and Repeater connection is displayed on the bottom left corner.

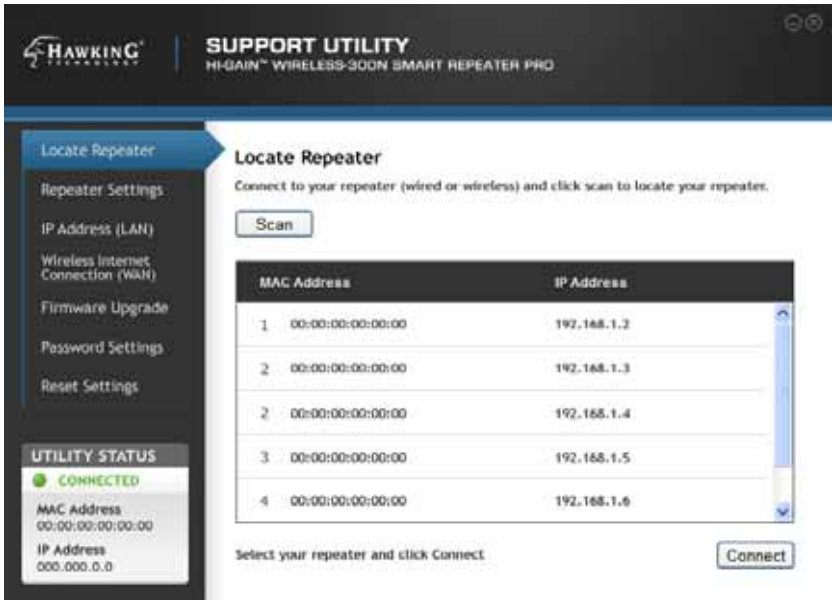

The Repeater Settings tab provides information on all current settings for the local network (LAN) as well as the Internet network (WAN). The firmware version and MAC Address are listed as well.

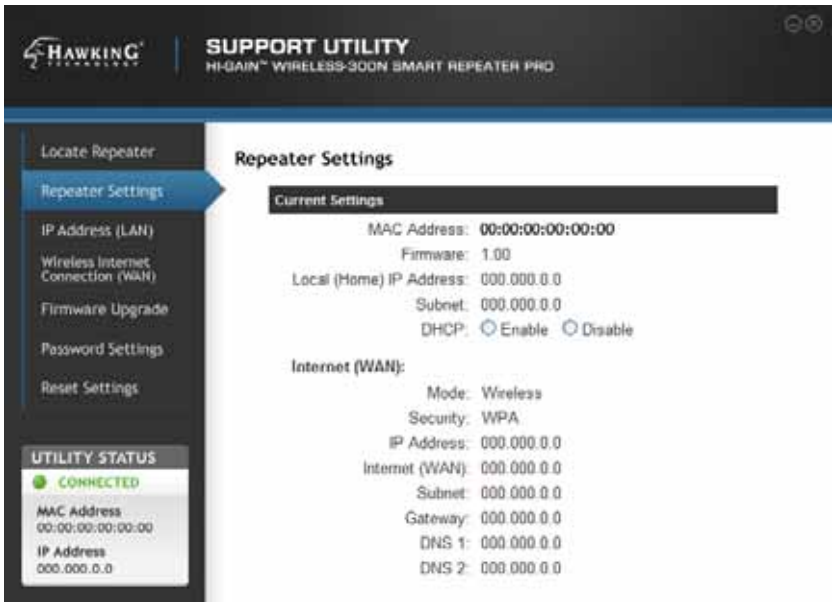

The IP Address (LAN) tab allows you to enable or disable DHCP (automatic IP assignment to clients connecting to the Smart Repeater Pro) as well as make adjustments to the local IP Address of the Repeater.

The Wireless Internet Connection tab allows you to see the current Internet (WAN) settings for the Repeater. From here you can also scan for other wireless networks detected by the Repeater and highlight them to change your Internet Connection source to begin repeating from a new wireless network. If the network you are trying to connect to uses encryption it will be required that you enter the Security Key in the field below.

Firmware Upgrade: Simply browse for the latest firmware file and click Apply to upload the firmware of your Repeater.

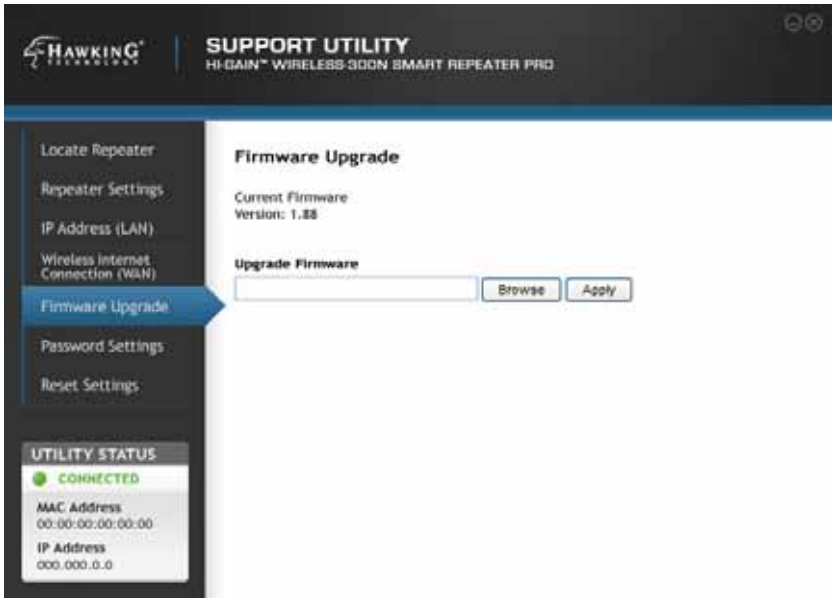

The Password Settings tab gives you access to change your current password for logging into the web interface. You will need to first enter your current login and password before you are able to change your login password.

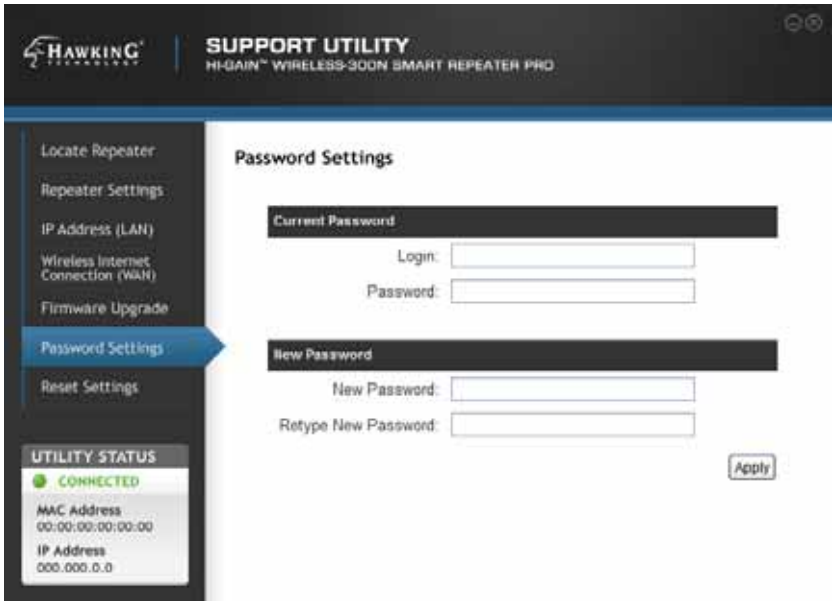

The Reset Settings tab allows you to reboot your Repeater in the event of a lock up or refresh while still saving all of your current settings. To reset the Smart Repeater Pro to factory default settings select Factory Reset and click ‘Apply.’

HAWKING
SUPPORT UTILITY
HI-GAIN™ WIRELESS-300N SMART REPEATER PRO
Locate Repeater
Repeater Settings
IP Address (LAN)
Wireless Internet Connection (WAN)
Firmware Upgrade
Password Settings
Reset Settings
UTILITY STATUS
CONNECTED
MAC Address
00:00:00:00:00:00
IP Address
000.000.0.0
Reset Setting
Reboot
All settings saved
Factory Reset
All settings will be reset to factory default settings.
Apply

Chapter V: Appendix

5-1 Hardware Specification

Flash: 4MB
SDRAM: 16MB
WAN Port: 10/100M UTP Port x 1
WAN Port: 802.11g Client
LAN Ports: 10/100M UTP Port x 4
Outer Antennas: 3dBi Dipole Antenna x 2 (Reverse SMA)
    For WLAN (2T2R Spatial Multiplexing MIMO configuration)
Center Antenna : 13dBi Dipole Antenna x 1 (Reverse SMA)
    For WAN (Dedicated Internet Antenna)
Power: 12VDC, 1A Switching Power Adapter
Dimension: 30(H) x 187(W) x 100(D) mm
Product Weight : 1.40 lbs (antennas included)
Transmit Power: 17dBm ± 1dBm
Temperature: 32~104°F (0 ~ 40°C)
Humidity: 10-90% (NonCondensing)
Certification: FCC

5-2 Troubleshooting

If you found the Smart Repeater Pro is working improperly or stops responding, don't panic! Before you contact your dealer of purchase for help, please read this troubleshooting first. Some problems can be solved by you in a very short time!

Scenario	Solution
Internet Connection Test says success but I still cannot get into the internet.	a. On the web interface, go to the status, and click on Internet Connection. Make sure your wireless settings are correct, ie. Security, channel and SSID. b. If everything is correct, try the following. Go to 'General Setup', under Internet Connection, click on DNS. Manually specify a DNS entry and click save/apply. You can use your ISP's DNS settings or a common DNS such as Google's, "8.8.8.8".
My internet speeds through the Smart Repeater Pro is too slow compared to my regular wireless connection	a. This is most usually caused by wireless channel interference. First, we need to check the wireless channels. Refer to section 3-2-1 on how to access the Smart Repeater Pro's built in wireless site survey. Channels are usually from 1-11. Take note of the channels that are empty or are mostly open. Now, close the site survey and go "General Setup", then click on "Home Wireless". Under the basic settings, you should see an option for channel. Select a channel that you had previously noted as being free. Click save and apply. If you are not sure what to select, you can also try just selecting a channel that is several increments away from your previous. For example, if you noted your original wireless network was on Channel 6, try using Channel 3 or Channel 9. b. Slower speeds can also be caused by the Smart Repeater Pro placed too far from the original wireless. Try moving it closer. c. Check to see if there is a newer firmware. It

	could be a compatibly issue that is resolved with a newer firmware. Refer to section 4-6 for firmware upgrade instructions.
Smart Repeater Pro is not responding to me when I want to access it by web browser	a. Please check the connection of power cords and network cables of this Smart Repeater Pro. All cords and cables should be correctly and firmly inserted into the Smart Repeater Pro. b. If all LEDs on this Smart Repeater Pro are off, check the status of A/C power adapter, and make sure it's correctly powered. c. You must use the same IP address section which Smart Repeater Pro uses. d. Are you using MAC or IP address filter? Try to connect the Smart Repeater Pro by another computer and see if it works; if not, please restore your Smart Repeater Pro to factory default settings (pressing 'reset' button for over 10 seconds). e. Set your computer to obtain an IP address automatically (DHCP), and see if your computer can get an IP address. f. If you did a firmware upgrade and this happens, contact Hawking Techsupport. g. Contact Hawking Techsupport for further help.
No connection to the Internet (Wired Modem port)	a. Go to "Status" and then the "Internet Connection" menu, and check Internet connection status. b. If you connect a computer to the Internet directly before you installed the Smart Repeater Pro, try to do that again, and check if you can connect to the Internet with your computer directly attached to the device provided by your Internet service provider. c. Check PPPoE / L2TP / PPTP user ID and password again. d. Call your Internet service provide and check if there's something wrong with their service. e. If you just can't connect to one or more websites,

	but you can still use other internet services, please check URL/Keyword filter. f. Try to reset the Smart Repeater Pro and try again later. g. Reset the device (modem) provided by your Internet service provider. h. Try to use IP address instead of hostname. If you can use IP address to communicate with a remote server, but can't use hostname, please check the DNS setting.
No connection to the Internet (Wireless Modem port)	a. Go to 'Status' -> 'Internet Connection' menu, and check the Internet connection status. If numbers look correct, try going to "General Setup", under "Internet Setup", go to "DNS" and manually input your ISP's DNS. You can try the values of 8.8.8.8 and then save and apply. b. Attempt to connect to the source wireless network to see if you can obtain an active internet connection directly. If network is out of range do not try this. c. Check your wireless security settings to ensure they match with the source wireless network. d. Source wireless connection does not have an active Internet connection. Please check with the source to troubleshoot. e. If you just can't connect to one or more websites, but you can still use other internet services, please check URL/Keyword filter. f. Try to reset the Smart Repeater Pro and try again later. g. Check to see if the source wireless network has DHCP enabled. Ensure that you have the correct static IP settings entered. h. Contact Hawking Techsupport
File download is very	a. Are you using QoS function? Try disabling it and

slow or breaks frequently	try again. b. Source Internet connection is poor c. Try to reset the Smart Repeater Pro d. Multiple users may be accessing the Internet simultaneously. Attempt to download the file at another time. e. Contact Hawking Techsupport
I can't log onto web management interface: password is wrong	a. Make sure you're connecting to the correct IP address of the Smart Repeater Pro. b. Password is case-sensitive. Make sure the "Caps Lock" light is not illuminated. c. If you forgot the password, do a hard reset. Press the reset button on the back for 30 seconds, power off/on.
Smart Repeater Pro becomes hot	a. This is not a malfunction, as long as it is not so hot that you cannot touch it for a prolonged period of time b. If you smell something wrong or see smoke coming out from Smart Repeater Pro or A/C power adapter, please disconnect the Smart Repeater Pro and A/C power adapter from utility power (make sure it's safe before you're doing this!), and call your dealer of purchase for help.
The date and time of all event logs are wrong	a. Adjust the internal clock of Smart Repeater Pro.

5-3 Glossary

Default Gateway (Smart Repeater Pro): Every non-Smart Repeater Pro IP device needs to configure a default gateway's IP address. When the device sends out an IP packet, if the destination is not on the same network, the device has to send the packet to its default gateway, which will then send it out towards the destination.

DHCP: Dynamic Host Configuration Protocol. This protocol automatically gives every computer on your home network an IP address.

DNS Server IP Address: DNS stands for Domain Name System, which allows Internet servers to have a domain name (such as www.BroadbandSmart Repeater Pro.com) and one or more IP addresses (such as 192.34.45.8). A DNS server keeps a database of Internet servers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing "Broadbandrouter.com" into your Internet browser), the user is sent to the proper IP address. The DNS server IP address used by the computers on your home network is the location of the DNS server your ISP has assigned to you.

DSL Modem: DSL stands for Digital Subscriber Line. A DSL modem uses your existing phone lines to transmit data at high speeds.

Ethernet: A standard for computer networks. Ethernet networks are connected by special cables and hubs, and move data around at up to 10/100 million bits per second (Mbps).

Idle Timeout: Idle Timeout is designed so that after there is no traffic to the Internet for a pre-configured amount of time, the connection will automatically be disconnected.

IP Address and Network (Subnet) Mask: IP stands for Internet Protocol. An IP address consists of a series of four numbers separated by periods, which identifies a single, unique Internet computer host in an IP network. Example: 192.168.1.2. It consists of 2 portions: the IP network address, and the host identifier.

The IP address is a 32-bit binary pattern, which can be represented as four cascaded decimal numbers separated by ".": aaa.aaa.aaa.aaa, where each "aaa" can be anything from 000 to 255, or as four cascaded binary numbers separated by ".":

bbbbbbbb.bbbbbbbb.bbbbbbbb.bbbbbbbb, where each “b” can either be 0 or 1.
A network mask is also a 32-bit binary pattern, and consists of consecutive leading 1’s followed by consecutive trailing 0’s, such as 11111111.11111111.11111111.00000000. Therefore sometimes a network mask can also be described simply as “x” number of leading 1’s.
When both are represented side by side in their binary forms, all bits in the IP address that correspond to 1’s in the network mask become part of the IP network address, and the remaining bits correspond to the host ID.

For example, if the IP address for a device is, in its binary form, 11011001.10110000.10010000.00000111, and if its network mask is, 11111111.11111111.11110000.00000000
It means the device’s network address is 11011001.10110000.10010000.00000000, and its host ID is, 00000000.00000000.00000000.00000111. This is a convenient and efficient method for Smart Repeater Pros to route IP packets to their destination.

ISP Gateway Address: (see ISP for definition). The ISP Gateway Address is an IP address for the Internet Smart Repeater Pro located at the ISP's office.

ISP: Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN: Local Area Network. A LAN is a group of computers and devices connected together in a relatively small area (such as a house or an office). Your home network is considered a LAN.

WLAN: Wireless Local Area Network. A WLAN is a group of computers and devices connected together in a relatively small area (such as a house or an office) wirelessly. Your wireless home network is considered a WLAN.

MAC Address: MAC stands for Media Access Control. A MAC address is the hardware address of a device connected to a network. The MAC address is a unique identifier for a device with an Ethernet interface. It is comprised of two parts: 3 bytes of data that corresponds to the Manufacturer ID (unique for each manufacturer), plus 3 bytes that are often used as the product’s serial number.

NAT: Network Address Translation. This process allows all of the computers on your home network to use one IP address. Using the broadband Smart Repeater Pro's NAT capability, you can access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.

Port: Network Clients (LAN PC) uses port numbers to distinguish one network application/protocol over another. Below is a list of common applications and protocol/port numbers:

Application	Protocol	Port Number
Telnet	TCP	23
FTP	TCP	21
SMTP	TCP	25
POP3	TCP	110
H.323	TCP	1720
SNMP	UCP	161
SNMP Trap	UDP	162
HTTP	TCP	80
PPTP	TCP	1723
PC Anywhere	TCP	5631
PC Anywhere	UDP	5632

PPPoE: Point-to-Point Protocol over Ethernet. Point-to-Point Protocol is a secure data transmission method originally created for dial-up connections; PPPoE is for Ethernet connections. PPPoE relies on two widely accepted standards, Ethernet and the Point-to-Point Protocol. It is a communications protocol for transmitting information over Ethernet between different manufacturers

Protocol: A protocol is a set of rules for interaction agreed upon between multiple parties so that when they interface with each other based on such a protocol, the interpretation of their behavior is well defined and can be made objectively, without confusion or misunderstanding.

Smart Repeater Pro: A Smart Repeater Pro is an intelligent network device that forwards packets between different networks based on network layer address information such as IP addresses. It provides modem access with any wireless 802.11b/g/n network and redistributes the signal via Ethernet or wireless Ethernet with full router capabilities.

Subnet Mask: A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers (e.g. 255.255.255.0) configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet, which must be assigned by InterNIC).

TCP/IP, UDP: Transmission Control Protocol/Internet Protocol (TCP/IP) and Unreliable Datagram Protocol (UDP). TCP/IP is the standard protocol for data transmission over the Internet. Both TCP and UDP are transport layer protocol. TCP performs proper error detection and error recovery, and thus is reliable. UDP on the other hand is not reliable. They both run on top of the IP (Internet Protocol), a network layer protocol.

WAN: Wide Area Network. A network that connects computers located in geographically separate areas (e.g. different buildings, cities, countries). The Internet is a wide area network.

Source Wireless Network: A wireless network that is used to connect to the Internet. This network can be from another connection with a wireless router and a broadband modem. The Smart Repeater Pro uses the Source Wireless Network to establish a connection to share the Internet connection locally. The Source Wireless Network may be a local coffee shop Wi-Fi hot spot or another home or office with a WLAN (with Internet access).

Web-based management Graphical User Interface (GUI): Many devices support a graphical user interface that is based on the web browser. This means the user can use the familiar Firefox or Microsoft Internet Explorer to Control/configure or monitor the device being managed.